



User Manual


AMBIANO®

TABLE TOP FRIDGE 17L




Contents

 
Overview	3
Use.....	4
Device parts.....	6
About these operating instructions.....	7
Explanation of symbols.....	7
Proper use	8
Safety information	9
General safety instructions.....	10
Setting up the appliance	10
Handling the appliance	12
Cleaning and maintenance.....	13
Faults	13
Disposal.....	14
Information on the appliance	14
Package contents.....	14
Changing the door hinge	15
Using the refrigerator	16
Notes on using the refrigerator	16
Tips on saving energy	17
Setting the temperature	17
Switching off the appliance.....	17
Cleaning the appliance	18
Cleaning the fan filter	19
Emptying the drip tray for condensation	19
Replacing the interior light.....	19
Transport	20
Troubleshooting.....	20
Steps to take in the event of a power cut.....	21
End of operation/Storage.....	21
Disposal.....	22
Technical data.....	23
Declaration of conformity.....	23
Service information	24
Privacy statement	25
Legal Notice	26

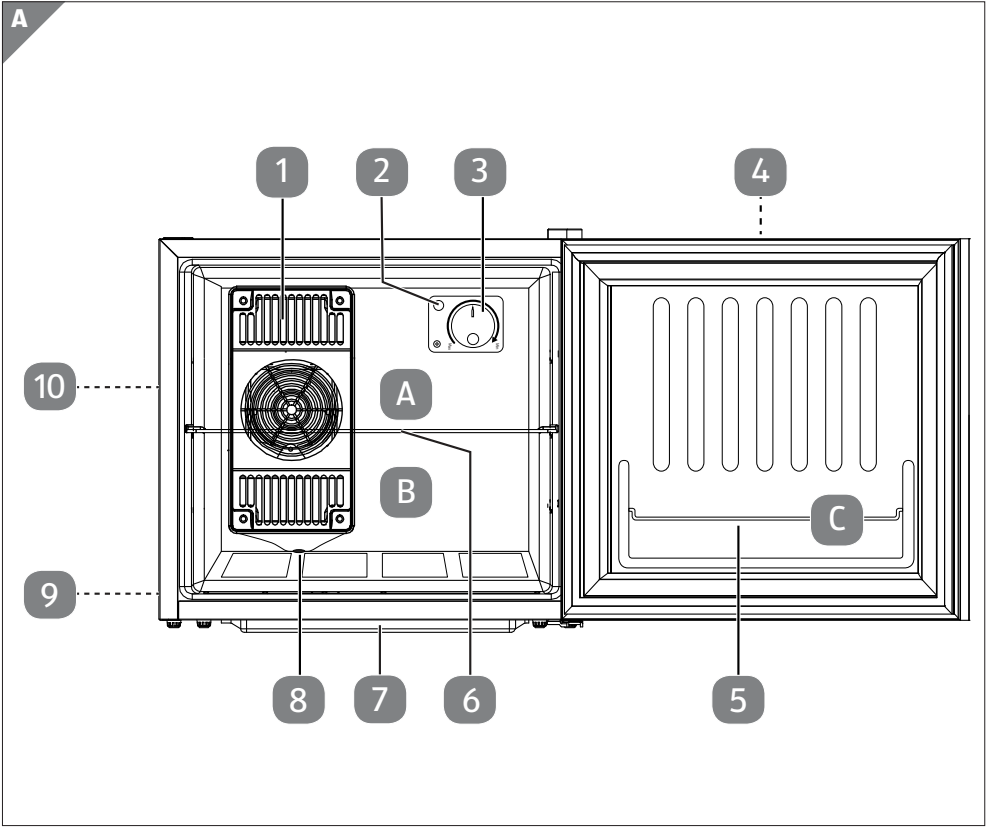


B

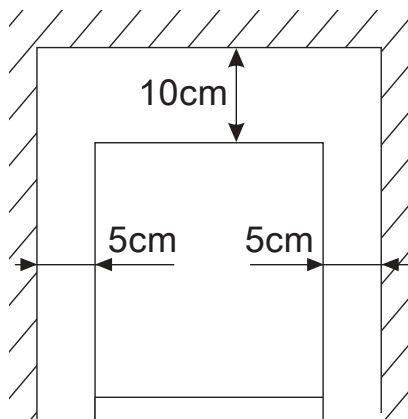 

C

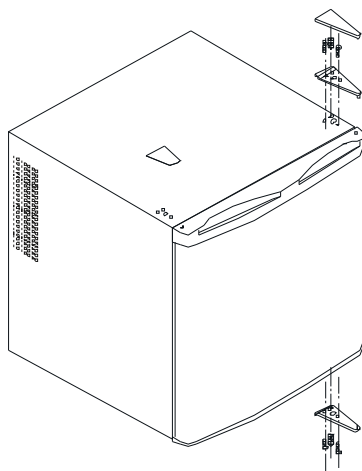 

D

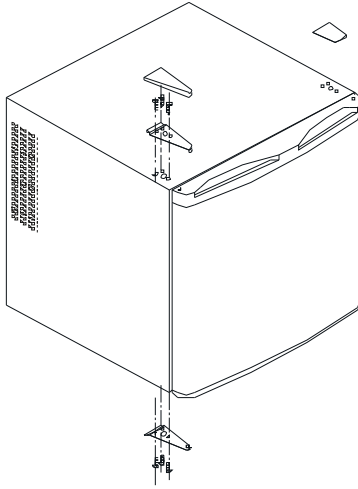 

Device parts

- 1 Fan
- 2 LED lamp
- 3 Temperature control
- 4 Door handle (not shown)
- 5 Door compartment
- 6 Glass shelf
- 7 Drip tray for condensation
- 8 Condensate drain
- 9 Mains cable with plug (on the back, not shown)
- 10 Air filter (on rear, not shown)

The appliance is suitable for the storage of particular foodstuffs at a temperature warmer than +14 °C and for the storage of red wine, white wine, sparkling wine etc.

For example:

- A Suitable for fresh fruits
- B Suitable for beverage cans
- C Suitable for beverage bottles

About these operating instructions



Thank you for choosing our product. We hope you enjoy using it.

Read the safety instructions carefully before using the device for the first time. Note the warnings on the device and in the operating instructions.

Always keep the operating instructions close to hand. If you sell the device or give it away, please ensure that you also pass on these operating instructions. They are an essential component of the product.

Explanation of symbols

If a block of text is marked with one of the warning symbols listed below, the hazard described in that text must be avoided to prevent the potential consequences described there from occurring.



This signal word indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.



This signal word indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.



This signal word indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.



This signal word warns of possible damage to property.



Warning: danger due to combustible and/or highly flammable substances!



Read the user manual and observe its instructions.



This symbol gives you useful additional information on assembly or operation.



Declaration of conformity (see section „Declaration of conformity“):
Products labelled with this symbol comply with all the applicable
Community rules of the European Economic Area.



Symbol for AC current

Proper use

This appliance is used for cooling drinks and food. This appliance is intended to be used in household or in similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses and by clients in hotels, motels and other residential type environments;
- bed & breakfast type environments;
- catering and similar non-retail applications.

Please note that we shall not be liable in cases of improper use:

- Do not modify the appliance without our consent and do not use any auxiliary equipment that we have not approved or supplied.
- Use only spare parts and accessories that we have supplied or approved.
- Heed all the information in these operating instructions, especially the safety information. Any other use is deemed improper and can cause personal injury or property damage.

Safety information



Risk of injury!

There is a risk of injury in case of improper use.

- Store the appliance and its accessories out of the reach of children.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Children between the ages of 3 and 8 are allowed to load and unload refrigerators.
- Children younger than 8 should be kept away from the mains cable.



Risk of suffocation.

There is a risk of suffocation if plastic packaging or small parts are inhaled or swallowed.

- Do not store any of the packaging material used (bags, polystyrene, etc.) within the reach of children.
- Keep children away from the inside of the appliance. If the door shuts, there is a risk of suffocation!

General safety instructions

- Do not operate the appliance if it has been visibly damaged or the mains cable or plug is defective.



Risk of explosion!

There is a RISK OF EXPLOSION AND FIRE due to the resulting fumes!

- Do not store or use any explosive substances such as aerosol cans with a flammable propellant or other flammable materials in this appliance or near to the appliance.



Risk of injury!

Burns caused by low temperatures are possible.

- Do not touch the cold inner walls of the refrigerator compartment with your hands.

Setting up the appliance

- Never place the appliance with the front edge along the edge of a table top or shelf, because there is a risk of the appliance tipping forwards and falling if the door compartment is overloaded. Take care to ensure that there is sufficient space in front of the appliance so that when opening the door, the door lies on the storage surface when the appliance is tipped.
- Connect the appliance to a properly installed safety socket which is easily accessible and close to the place of installation. The local mains voltage must correspond to the technical data for the appliance.
- The socket must be freely accessible so that you can unplug the appliance from the mains quickly if necessary.
- Do not use an extension cable.

-
- **WARNING!** When positioning the appliance, ensure the supply cord is not trapped or damaged.
 - **WARNING!** Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
 - Ensure the mains cable is out of harm's way and will not trip people up.
 - To ensure adequate ventilation, maintain a minimum distance of 10 cm to the ceiling and rear wall and 5 cm to the walls, otherwise internal electronics could be damaged (see **fig. B**).
 - **WARNING!** Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
 - Set up the appliance in a dry and ventilated room. Do not expose the appliance to direct sunlight because this can damage the surfaces of the appliance and increase energy consumption.
 - Protect the appliance from moisture and splashes.
 - Never immerse the appliance in water.
 - Do not set up the appliance near to heat sources such as ovens, radiators, underfloor heating, etc.
 - Set up the appliance on a stable, flat surface.
 - Set up the appliance horizontally; compensate for any unevenness of the worktop by adjusting the front screw foot. The rear feet and the other front foot are fixed and can't be adjusted.
 - Do not place any other household appliances (such as a microwave, food processor, etc.) on top of the refrigerator.
 - Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

- The appliance is suitable for climate classes SN and N (see type plate). A flawless cooling performance of the appliance is guaranteed at ambient temperatures of between 10 °C and 32 °C. The performance of the appliance may diminish at other temperatures.

Handling the appliance



Risk of injury/health hazard!

Incorrect use of the appliance can result in injuries.

- Do not use the base, drawers, doors, etc. as steps or for support.
- Never place the appliance with the front edge along the edge of a table top or shelf, because there is a risk of the appliance tipping forwards and falling if the door compartment is overloaded. Take care to ensure that there is sufficient space in front of the appliance so that when opening the door, the door lies on the storage surface when the appliance is tipped. Always load the cooling compartment first and then the door compartment.

The appliance may not function perfectly (increased temperature) if it is exposed for a long period of time to temperatures that are colder than the lower limit of the temperature range for which it was designed (below 10 °C).

Food can perish if there is a power cut or if the appliance is switched off. There is then a risk of food poisoning.

- If there has been a power cut, check that the food which is stored in the appliance still looks and smells safe to eat.
- Do not store any medicines, laboratory preparations or other temperature-sensitive products subject to Directive 2007/47/EC in the refrigerator.
- Pay attention to cleanliness and the correct storage of the food.

Cleaning and maintenance



WARNING!

Risk of electric shock!

There is a risk of electric shock due to live parts.

- Before starting any maintenance work, always ensure that the plug has been removed from the wall socket (do not pull on the cable, but on the plug). If the plug is not accessible, the corresponding mains supply from your distribution board needs to be switched off.
- Never pull out the plug with wet or moist hands.



WARNING!

Risk of explosion!

There is a RISK OF EXPLOSION AND FIRE due to the resulting fumes!

- Do not use any flammable liquids to clean the appliance or any parts of the appliance.

Faults



WARNING!

Risk of electric shock!

There is a risk of electric shock due to live parts.

- Never try to open and/or repair an appliance component yourself. There is a risk of electric shock.
- To prevent risks, damaged mains cables may only be replaced by our Service Centre or by a qualified specialist workshop.
- In the event of a fault, contact our Service Centre or another suitable specialist workshop.

Disposal



Risk of injury!

There is a risk of suffocation if the door slams shut.

- Remove the door before disposing of the appliance and leave the storage shelves in the appliance to prevent children climbing into it.
- Before disposal, cut off the mains cable.

Information on the appliance

- Energy efficiency class A+
- Climate class SN/N

Refrigerating appliances conforming to this standard are classified into four climate classes or into a range of classes:

Class	Symbol	Ambient temperature range °C
Extended temperate	SN	+ 10 to + 32
Temperate	N	+ 16 to + 32
Subtropical	ST	+ 16 to + 38
Tropical	T	+ 16 to + 43

Package contents



Risk of suffocation.

There is a risk of suffocation if plastic packaging or small parts are inhaled or swallowed.

- Do not store any of the packaging material used (bags, polystyrene, etc.) within the reach of children.

When unpacking, ensure that the following parts are included:

- Upright fridge
- Glass shelf
- Operating instructions, warranty documents

Changing the door hinge

The refrigerator is supplied with a right-hinged door. If you want to change the opening direction, proceed as follows:

Tools required:

- No. 8 spanner (metric)
- Small flat-head screwdriver
- or Phillips screwdriver

1. Unplug the appliance from the mains socket.
2. Empty the refrigerator, including the shelf and all food, etc.



Place all parts safely to one side. They will all be needed to reinstall the door.

3. Remove the top hinge cover on the right side and the cover on the left side, for example with a flat-head screwdriver (see **fig. C**) and remove the dummy plugs from the door.
4. Undo the three screws on the upper hinge using the spanner.
5. Remove the upper hinge and put it on the left side and tighten the screws hand tight.
6. Tilt the appliance slightly backwards.
7. Undo the three screws on the lower hinge with a spanner and remove it.
8. Fit the lower hinge on the left side and tighten the screws.
9. Align the door so that the seal is applied evenly. Now tighten the screws on the upper hinge (see **fig. D**).
10. Replace the hinge cover on the hinge; place the cover on the now exposed holes and press down firmly. Push the dummy plugs into the holes on the door.



Please note: The door seal adapts to the new door hinge after a few hours.

Using the refrigerator

- Unpack the appliance and remove the adhesive tape.
Remove any possible adhesive residue using a mild cleaning agent.
- Dispose of the protective polystyrene foam packaging separately.
- Clean all parts of the appliance thoroughly before switching it on for the first time (see section „Cleaning the appliance“ on page 18).
- After cleaning, dry the appliance thoroughly before switching it on for the first time.
- Set up the appliance in a suitable location (see Fig. B).
- Connect the appliance to a wall socket.
- Set the temperature control **3** to **Min** and close the door.
About 1–2 hours after connection to the mains, the appliance will have reached operating temperature and you can load the appliance.

Notes on using the refrigerator

The appliance works correctly in ambient temperatures from +10°C to +32°C.

The appliance is suitable for the storage of particular foodstuffs at a temperature warmer than +14 °C and for the storage of red wine, white wine, sparkling wine etc.

To avoid contamination of food, please respect the following instructions

- Clean regularly surfaces that can come in contact with food and accessible drainage systems.
- Store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drip onto other food.
- Distribute the food/beverages evenly in the appliance. Ensure that the food does not touch the rear wall of the refrigerator compartment because it could become overripe or damp as a result.



Please store different foods according to the compartments or target storage temperature of your purchased products.

- If the refrigerating appliance is left empty for long periods, switch off, clean, dry, and leave the door open to prevent mould developing within the appliance.

Tips on saving energy

- Place only food or drinks that are already cooled or at room temperature into the refrigerator. Do not place hot food or drinks into the refrigerator.
- Do not position the appliance near a heat source (radiator or cooker, etc.).
- Ensure adequate ventilation to prevent increased energy consumption and any possible damage to the internal electronics.
- Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance. Open the door for a short time only when putting food/beverages in the fridge and taking food/beverages out. Do not open the door too often and do not leave the door open for extended periods.
- Select the setting of the temperature control according to how full the appliance is.
- If you leave the shelves in the appliance during operation, the energy consumption will be the lowest.

Setting the temperature

The temperature of the refrigerator compartment is controlled via the temperature control **3**.

The cooling temperature can be set from 4.5°C (setting **Min**) to 15°C (setting **Max**). Check the temperature in the refrigerator compartment with a thermometer. If the desired temperature has been reached, food can be inserted into the appliance.



The internal temperatures can be influenced by factors such as the installation location, ambient temperature and frequency at which the door is opened. Take these factors into account when setting the thermostat.



Do not load the refrigerator compartment until the appliance has cooled down.

Before adding fresh foods, bring the temperature of the refrigerator compartment down to the coldest level **Min**.

Switching off the appliance

- In order to de-energise the appliance completely, pull the mains plug **8** out of the socket.
- Wait around 3–5 minutes before switching the appliance back on.

Cleaning the appliance



WARNING!

Risk of electric shock.

There is a risk of electric shock from electrified parts.

- Before starting any cleaning, pull the mains plug out of the socket (pull on the plug, not the cable). If the plug is not accessible, the corresponding mains supply from your distribution board needs to be switched off.

NOTICE!

Risk of damage.

Equipment damage due to improper handling of the sensitive surfaces of the appliance.

- Sensitive surfaces: Do not allow oil and grease to come into contact with the plastic parts and the door seal as the surface can become porous and brittle.
- Never use acidic, abrasive or granular, acetic-acid-, soda- or solvent-based cleaning agents. These may damage the surfaces of your appliance.
 1. Empty the refrigerator.
 2. Pull out the plug **8**.
 3. Remove the shelf **6** from the refrigerator compartment.
 4. Wash out the refrigerator compartment with a mild detergent (such as washing-up liquid or a soda solution of 3 tablespoons of soda to one litre of water) and dry thoroughly.
 5. Clean all of the fittings carefully and dry them.
 6. Clean the appliance surfaces, except the door seal, with a mild cleaning agent. If necessary, the appliance surface can be treated with silicone wax.
 7. Clean the door seal with clean water; wipe it off and allow it to dry.
 8. Put the mains plug back into the wall socket.
 9. As soon as the appliance has reached operating temperature, you can fill it again with food.

Cleaning the fan filter

To protect the fan **1** on the rear of the appliance from dust, there is a dust filter fitted in front of the fan. To ensure proper operation, make sure that the air filter does not get clogged. It must be cleaned if necessary.

1. Unplug the refrigerator from the wall socket.
2. Push the two clips on top of the fan filter **9** together at the same time to remove the filter from the rear of the appliance.
3. Rinse the air filter under running water and then leave it to dry completely.
4. Place the fan filter so that the three tabs fit into the matching recesses on the rear of the appliance and push the clips into the two upper slots until they lock into place.

Emptying the drip tray for condensation

Condensation from inside the refrigerator will collect in the drip tray **7** below the refrigerator. The condensation evaporates in the drip tray and it is not generally necessary to empty it manually. However, if additional liquid (e.g. from a leaking water bottle) should enter the inside of the refrigerator, it will also collect in the drip tray. The volume of liquid that accumulates in the drip tray may under certain circumstances be too large to evaporate or it may contaminate the drip tray.



The drip tray is permanently screwed to the base of the device and thus cannot be readily removed.

Proceed as follows to empty the drip tray:

- Absorb the excess liquid little by little from the drip tray using an absorbent cloth.
- If necessary, wipe the drip tray afterwards using a damp cloth to remove any contaminants.

Replacing the interior light



Risk of injury/device damage!

The replacement of the interior LED light is reserved for the manufacturer, his customer service or a similarly qualified person.

- If the interior light does not work, contact customer service.

Transport

1. Unplug the appliance from the wall socket.
2. Remove all items and the glass shelf **6** from the interior of the appliance.
3. Screw in the adjustable foot.
4. Tape the door in place using adhesive tape.

Troubleshooting

Faults may occur during operation. Please use the following table to check whether you can resolve the problem yourself. All other repairs are prohibited and will invalidate the warranty cover. In the event of a fault, contact our Service Centre or another suitable professional repair workshop.

Malfunction	Cause	Rectification
The appliance is not working.	The electrical circuit has been interrupted.	<ul style="list-style-type: none"> – Check whether the mains plug is plugged in. – Check whether the connection cable has been damaged. – Check fuse in plug and replace if necessary.
The temperature is not low enough.	The door will not shut tight, or is opened too often.	<ul style="list-style-type: none"> – Arrange the contents of the fridge so that nothing can prevent the door from closing. – Avoid opening the fridge door unnecessarily. – Check the door seal.
	The appliance is dirty.	<ul style="list-style-type: none"> – Clean the appliance.

Malfunction	Cause	Rectification
	The appliance has been set up in a location that is exposed to direct sunlight or next to a heat source.	<ul style="list-style-type: none"> - Set up the appliance in another location. - Set the appliance to a colder setting.
	The air filter is clogged.	<ul style="list-style-type: none"> - Check the air filter.
The appliance is operating too loudly or vibrating.	The feet on the appliance have not been properly adjusted.	<ul style="list-style-type: none"> - Adjust.
	The air filter is clogged.	<ul style="list-style-type: none"> - Check the air filter.
Temperature control does not work.	The temperature sensor is defective.	<ul style="list-style-type: none"> - Contact the customer service department.
The interior lighting is not working.	The LED is defective.	<ul style="list-style-type: none"> - Contact the customer service department.

Steps to take in the event of a power cut

- In the event of a power cut, check the condition of the food before consuming it (also see „Handling the appliance“ on page 12).

 
End of operation/Storage

If you do not intend to use the appliance for a long period of time, it is necessary to perform the following tasks:

- Remove the plug from the wall socket.
- Empty the appliance.
- Wipe out the cooling area and allow it to dry.
- Carefully wash all fittings.
- Leave the door open to avoid unpleasant odours and mould formation.

Disposal

PACKAGING

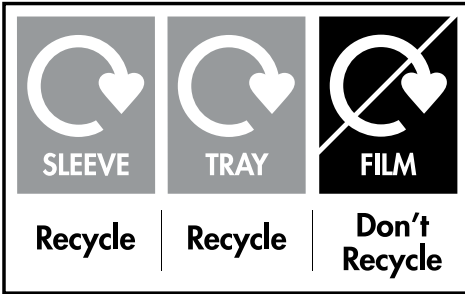

The product has been packaged to protect it from damage in transit. The packaging is made of materials that can be recycled in an environmentally friendly manner.



DEVICE

Old devices may not be disposed of with normal household waste. If you can no longer use your electrical device, dispose of it in accordance with the legal provisions applicable in your area. This involves separating the materials in the device for the purpose of recycling and minimising the environmental impact.

- Take old devices to a collection point for electrical scrap or a recycling centre.
- Contact your local waste disposal company or your local authority for more information on this subject.
- Before disposal cut off the cable.
- The appliance/insulation must be disposed of correctly.
- During disposal, please note that the appliance/insulation contains cyclopentane (a flammable expanded gas for insulation).

Technical data

Brand:	Ambiano
Model:	MD 37182
Power supply:	220-240 V ~ 50/60 Hz
Power consumption:	50 W
Cooling temperature range:	+4,5 °C to +15 °C
Energy efficiency class:	A+
Energy consumption:	82 kWh/year* 0.225 kWh/24 hours
Category	10
Storage capacity:	17 l
Climate class:	SN/N
Noise emissions:	38 dB
Dimensions (W x H x D):	38,5 x 34,1 x 42,5 cm
Weight:	approx. 7.3 kg
Propellant gas	cyclopentane
Interior light, LED	0.6 W

* kWh / year energy consumption calculated on the basis of conformity testing results over 24 hours. The actual consumption will depend on the use and location of the appliance.

Declaration of conformity



Medion AG hereby declares that the product MD 37182 complies with the requirements set out in the following European standards:

- EMC Directive 2014/30/EU
- Low Voltage Directive 2014/35/EU
- Regulation (EC) No 1935/2004

Service information

Please contact our Customer Service team if your device ever stops working the way you want or expect it to. There are several ways for you to contact us:

- In our Service Community, you can meet other users, as well as our staff, and you can exchange your experiences and pass on your knowledge there. You will find our Service Community at <http://community.medion.com>.
- Alternatively, use our contact form at www.medion.com/contact.
- You can also contact our Service team via our hotline or by post.

Opening times	Hotline number UK
Mon – Fri: 08.00 – 20.00	☎ 0333 3213106
Sat – Sun: 10.00 – 16.00	Hotline number Ireland
	☎ 1 800 992508
Service address	
MEDION Electronics Ltd. 120 Faraday Park, Faraday Road, Dorcan Swindon SN3 5JF, Wiltshire United Kingdom	



You can download this and many other sets of operating instructions from our service portal at www.medion.com/gb/service/start/.

You will also find drivers and other software for a wide range of devices there.

You can also scan the QR code on the side of the screen, to download the operating instructions onto your mobile device from the service portal.

Privacy statement

Dear customer,

We wish to inform you that we, MEDION AG, Am Zehnthof 77, 45307 Essen, Germany process your personal data as a data controller.

For matters regarding data protection, we are supported by our company data protection officer who can be contacted at MEDION AG, Datenschutz, Am Zehnthof 77, D – 45307 Essen; datenschutz@medion.com. We process your data for the purpose of warranty processing and associated processes (e.g. repairs) and therefore rely on processing your data for the sales contract concluded with us.

Your data will be provided to repairers contracted to us for the purpose of warranty processing and associated processes. We generally store your personal data for a period of three years in order to fulfil your legal warranty rights.

You have the right to be informed of the personal data concerned as well as the right to rectification, deletion, restriction of processing, the right to object to processing, as well as the right to data portability.

In case of access and cancellation rights, restrictions apply according to S 34 and S 35 of BDSG (Federal Data Protection Act) (Art. 23 GDPR). In addition, there is a right of appeal to a competent data protection supervisory authority (Article 77 GDPR in conjunction with S 19 BDSG). The state official for data protection and freedom of information for MEDION AG is Nordrhein Westfalen, P box 200444, 40212 Düsseldorf, Germany. www.lidi.nrw.de.

The processing of your data is necessary for warranty processing: it is not possible to process the warranty without the provision of the required data.

Legal Notice

Copyright © 2020

Date: 06.05.2020

All rights reserved.

These operating instructions are protected by copyright.

Mechanical, electronic and any other forms of reproduction are prohibited without the written permission of the manufacturer.

Copyright is owned by the company:

MEDION AG

Am Zehnthof 77

45307 Essen

Germany

Please note that you cannot use the address above for returns. Please always contact our Customer Service team first.



Great care has gone into the manufacture of this product and it should therefore provide you with years of good service when used properly. In the event of product failure within its intended use over the course of the first 3 years after date of purchase, we will remedy the problem as quickly as possible once it has been brought to our attention. In the unlikely event of such an occurrence, or if you require any information about the product, please contact us via our helpline support services, details of which are to be found both in this manual and on the product itself.



PRODUCED IN CHINA FOR:

ALDI STORES LTD. PO BOX 26, ATHERSTONE
WARWICKSHIRE, CV9 2SH.

ALDI STORES (IRELAND) LTD.
PO BOX 726, NAAS, CO. KILDARE.
VISIT US AT WWW.ALDI.COM

AFTER SALES SUPPORT

705123/705124



GB

0333 3213106

Standard local land-
line call rate

IE

1 800 992508

Free hotline



www.medion.co.uk

MODEL:

MD 37182

09/2020

3

**YEAR
WARRANTY**