



MEET YOUR FIRE HD 8

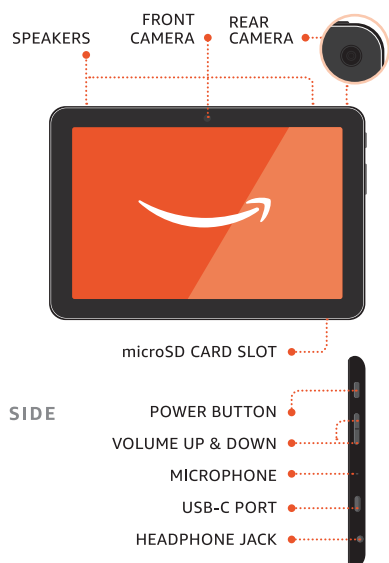

Also included: USB-C cable, power adapter

ACTIVATE YOUR FIRE HD 8

- 1 POWER**
Power on your tablet.
- 2 SETUP**
Follow the on-screen instructions to complete setup.

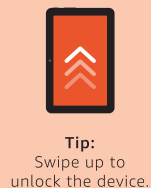

Tip:
Swipe up to unlock the device.

NAVIGATION FROM HOME SCREEN

- Go back
- Return home
- Switch between apps

EXPLORE YOUR FIRE HD 8

TO ACCESS SETTINGS AND CONTENT



Swipe down for settings and quick controls.

Swipe right for movies, TV shows, games, books, your library and more.


EXPAND YOUR STORAGE



Install microSD for up to 1TB of additional storage.
microSD card sold separately.

CHARGE YOUR FIRE HD 8

- USB-A**
Adapter side
- USB-C**
Tablet side

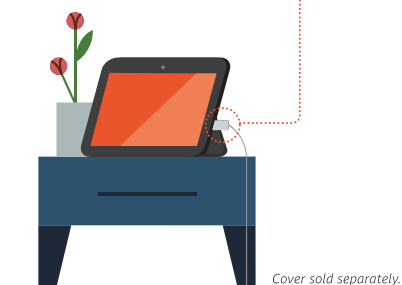

Cover sold separately.



TROUBLESHOOTING

For troubleshooting tips and Amazon Customer Service, visit www.amazon.com/devicesupport.