

12 month warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Statement

- This product shall not be connected to power supply source exceeding PS1 (5V d.c. 1A).
- Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

| Contact for Kmart purchases | Contact for Target purchases |
|--|--|
| Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au | Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us |


Bluetooth® Overear ANC ENC Headphones Operating instructions

includes:

- › Bluetooth® headphones
- › Charging cable
- › Use manual
- › Audio cable



Function overview:

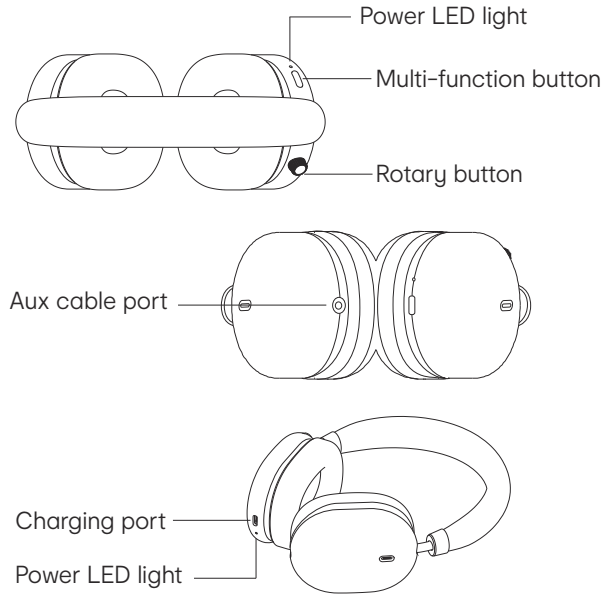

How to use these earbuds:

Multi-function button operation

Pause click the multi-function button

Play click the multi-function button

Next song Triple click the multi-function button

Previous song double the multi-function button

Power ON / OFF

Power ON

Long press the multi-function button 2 seconds and hear the prompt that it is turned on;

Power OFF

Long press the multi-function button 3 seconds and hear the prompt that it is turned off;

Different function of rotary button

Volume Up Turn the rotary button clockwise

Volume Down Turn the rotary button counterclockwise

Voice Assistant triple-click the rotary button to activate the voice assistant.

Movie Mode long press and hold 2 seconds on the rotary button, and you will successfully enter /exit the movie mode when you hear the prompt sound.

Game Mode double-click the rotary button, and you will successfully enter /exit the game mode when you hear the prompt sound.

Ambient sound click rotary button to switch between noise-control modes, ANC noise cancellation-Off-transparency.

Specifications:

Model No:
23BN03

Version:
V5.4

Support profiles:
A2DP, AVRCP, HFP

Working Distance:
10 meters

Music Time:
Up to 80 Hours

Talk time:
Up to 60 Hours

Standby time:
Up to 250 Hours

Charging voltage:
DC 5V

Charge time:
2 hours

Cable length:
0.3m

Pairing the earbuds with Bluetooth devices

- › Once the earbuds is powered on, it is in pairing mode (LED flashes) and will pair to the last paired device (if available).
- › Pair the headphone in Bluetooth menu in mobile phone and once it is paired, you can hear a pairing tone.
Bluetooth Name: 'anko43499663'

Phone calls

- › Double click the multi-function button to pick up phone calls.
- › Click the multi-function button to hang up the calls.
- › Press and hold the multi-function button 2s to reject the calls.

Playing music

When the bluetooth headphone connects with the mobile phone via Bluetooth you can enjoy music through the headphone wirelessly.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., and any use of such marks by KMART AUSTRALIA is under licence.

Battery Charging

This headphone is powered by rechargeable Li-ion battery.

Please use the accessory USB cable to recharge the battery.

- › Insert USB charging cable into a suitable USB port.
- › Connect charging cable with the charge box USB port .
- › Indicator LED turns RED to show battery is charging.
- › Indicator LED turns off when battery is fully charged.
- › It takes about 2 hours to fully charge the battery.