



SERIES: 193BC, 193BCT, 193CAC, 193HAC, 193MAC, 193VAC, 193VOA, 360BCC, 360BCDI, 360BCS, 360BCSS, 360CRR, 360GSM, 360RSD

## How to Reset the Temperature Range


1. Press “▼” for 10 seconds until the display shows “ON.”  
This means the controller is open for adjusting all parameters.

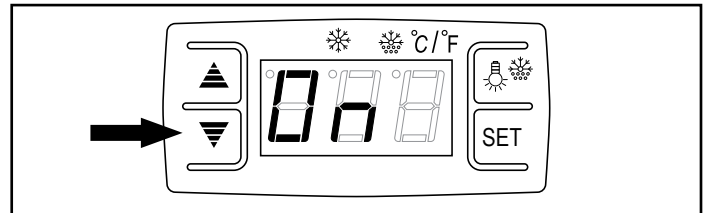


2. Press “SET” for 6 seconds until the display flashes “E1.”

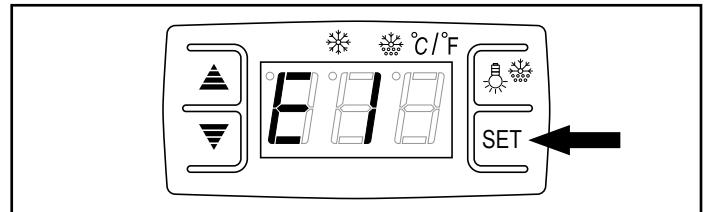


3. Press “▼” until you reach 32°F.

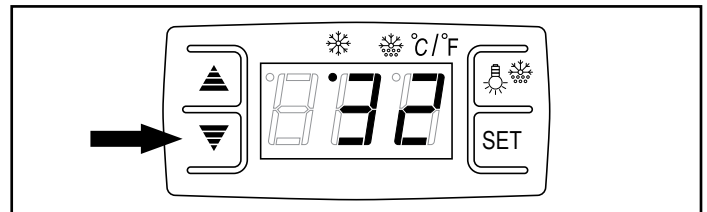

4. Do not touch the controller for 10 seconds.  
This will save the settings.

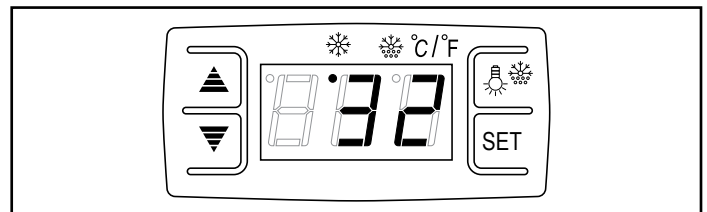

5. Press “▼” for 10 seconds until the display shows “OFF.”  
This will lock your settings in place.

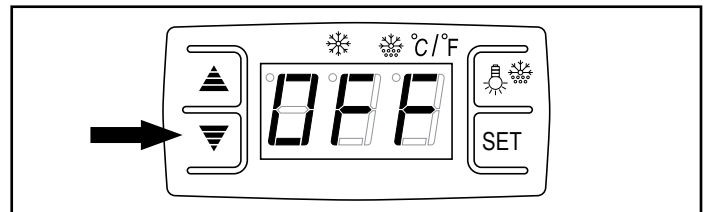

6. Press “SET” again. The display will flash the temperature at which the compressor currently cycles off. The compressor will kick on approximately 7-8 degrees above this set point.

