

USB 3.1 High Speed Active Optical Cable (10m, 20m, 30m)

Quick User Guide



NOTICE AND WARNING


- Please read this user guide before using the product.
- Please keep the product away from liquid to avoid wetting the product and the danger of electric shock.
- Excessive force on the cable may damage or break it. Connect all cables appropriately to avoid being damaged and hampering operation of the product.
- Do not drop, bump, scratch, hit, or store with vibration the product, and don't put heavy loads on the product.

FEATURES

- **Strong:** Reinforced fiber cable
- **High quality:** Compared with traditional copper wire cables, AVer USB extension cable is not only softer and slimmer, but also offers better signal quality with data rate up to 5Gbps.
- **Easy installation:** without the need for external power for USB 3.1 speed.
- **Hot-plug**
- **No driver**
- **Anti-jamming**

CONNECTIONS

Connect USB 3.1 optical cable type A plug to the USB3.1 type A of laptop/PC and connect USB 3.1 optical cable female type A to USB cable of the camera(See the below figure).

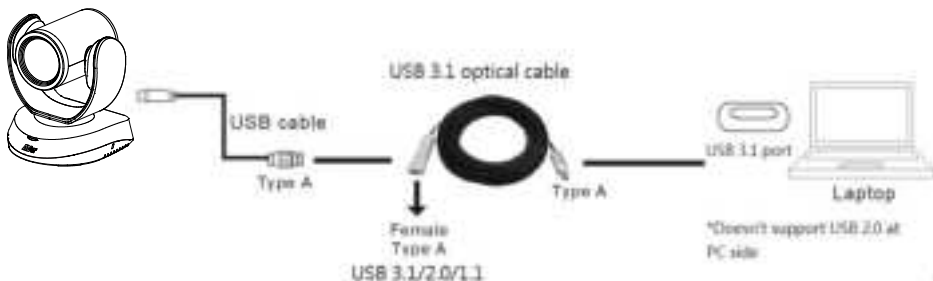

[Note]

1. Can be powered from the host by USB cable connected between the host A type and the product Micro B type receptacle if power supply shortage.
2. When connects to AVer camera, there is no needed a connection from Micro B to the PC since the power consumption is less than 2W. However, CAM540 requires to connect Micro B external power.

©2020 AVer Information Inc. All rights reserved.

AVer Information Inc.

www.aver.com

8F, No.157, Da-An Rd., Tucheng Dist., New Taipei City, Taiwan

Tel: +886-2-2269-8535