

# **CLEANING & MAINTENANCE**

To keep your appliance in the best possible condition, please follow the steps below:

## **General**

- Ensure the appliance is switched off, unplugged and cool. To clean the outside of the appliance, wipe with a damp cloth. Make sure that no water enters the appliance and it is completely dry before use.
- Do not wrap the lead around the appliance, instead coil the lead loosely by the side of the appliance.
- Do not use the appliance at a stretch from the power point.
- Always unplug after use.

## **Cleaning the Filter**

- Ensure the appliance is switched off, unplugged and cool.
- Holding the handle of the appliance firmly, twist the rear filter to the left to remove.
- Using a soft brush, clean any hair and other debris from the filter.
- Replace the rear filter by aligning the grooves and turning to the right until the filter clicks back in to place