


Operating Instructions – Oven BEKO BRIFF 22300X

Control Panel

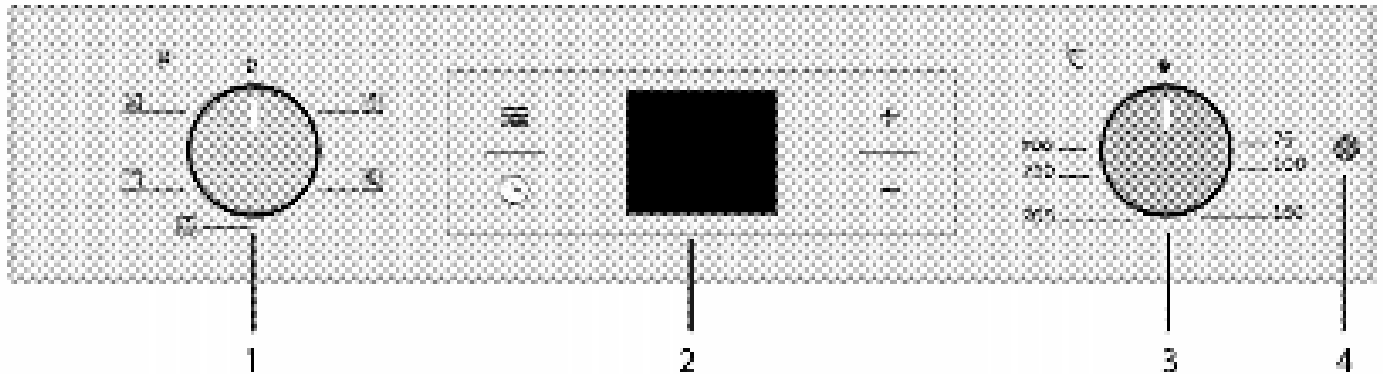

1. Function knob
2. Digital timer
3. Thermostat knob
4. Thermostat lamp

Operating Modes




Oven Lamp – The oven is not heated, only the oven lamp is turned on.



Operating with fan – The oven is not heated, only the fan is in operation.



Fan heating – Warm air heated which is evenly distributed throughout the oven.

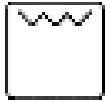

Full grill – Grill is in operation.



Full grill & Fan – Grill and fan are in operation

Using the oven

1. Select the operating mode using the function knob.
2. Select the temperature using the thermostat knob.
3. The oven heats up to the required temperature and maintains it. During heating the temperature lamp stays on.
4. To switch off the oven turn the function knob and temperature knob to the off (upper) position.