



**Commercial Electric™** **1005 974 764**  
BLACK NEGRO

Add a foot pedal switch or replace a worn or broken switch to your light fixture.

**INSTRUCTIONS:**

1. Turn off power supply before installation.
2. Separate the wires on the lamp cord by making a 2-inch-long slit between the two wires where switch is to be located.
3. Cut the non-ribbed wire at the center of the slit.
4. Remove four screws from switch base and remove top from base. Spring and button will also come loose.
5. Insert the end of each non-ribbed wire into small hole on either side of preassembled switch inside base. Keep the ribbed wire loose until non-ribbed wires have been inserted. Once non-ribbed wires are connected, note marking inside the base labeled "N" and route the ribbed wire into the track on that side. Make sure to press wire down completely so it remains under the tabs.
6. Place spring and button in order over switch, then squeeze top and base together completely; tighten all screws.

**NOTE:** If there is a need to remove a wire once it has been inserted, locate the small hole on the end of the switch with the wire to be removed. Insert a slotted screwdriver to release the wire and pull on the wire to remove it.

FOR ASSISTANCE, CALL:  
SI NECESITA AYUDA, LLAME AL:  
1-877-527-0313  
HOMEDEPOT.COM

MODEL/MODELO 804914

MADE IN VIETNAM  
HECHO EN VIETNAM

DISTRIBUTED BY:  
DISTRIBUIDO POR:  
HOME DEPOT  
2455 PACES FERRY RD.  
ATLANTA, GA 30339  
HOMEDEPOT.COM

Recycle Recicla

Country of Origin: XXXXXX  
Helvetica Condensed  
7pt

Vendor ID: XXXXXX  
Helvetica Condensed  
5pt

Vendor is responsible for updating the Country of Origin

Vendor is responsible for updating the vendor id#

		A DIVISION OF 	DATE <b>11.09.20</b>	ROUND <b>0</b>
BRAND: Commercial Electric	PART 804914	<b>PRINTED COLORS</b> 		
DESC. : Lamp Accessories	UPC #: 8 87480 04914 5			
PACKAGING TYPE: Card	SKU #: 1005 974 764			
3.4646" w x 4.9213"h	DESIGNER: TP			