

## USER MAINTENANCE

Your styling iron is virtually maintenance free. No lubrication is needed. Keep all vents and openings clear of dirt and dust. If cleaning becomes necessary, disconnect the unit from the power source, allow to cool and wipe exterior with a cloth. If any abnormal condition occurs, unplug the unit, allow it to cool, and return it for repair to an Authorized Service Center only. No repairs should be attempted by the consumer.

### CAUTION

 
NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the appliance. Damage will occur at the high flex point of entry into the appliance, causing it to rupture and short circuit. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

### STORAGE

When not in use, your appliance is easy to store. Allow appliance to cool, then simply store out of reach of children in a safe, dry location. Do not jerk or strain cord at plug connections. Do not wrap the line cord around the appliance. Allow the cord to hang or lie loose and straight at the point of entry into the appliance.

**WARNING:  
IF YOU THINK  
THE POWER IS OFF  
WHEN THE SWITCH  
IS OFF,  
YOU'RE WRONG.**

## KEEP AWAY FROM WATER

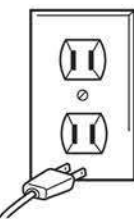

Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

## ALWAYS UNPLUG SMALL APPLIANCES

## LIMITED ONE YEAR WARRANTY (U.S. AND CANADA ONLY)

Conair will repair or replace, at our option, your appliance free of charge for 12 month from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service centre listed below, together with your purchase receipt. In the absence of a purchase receipt, the warranty period shall be 12 months from the date of manufacture.

**ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 12 MONTH DURATION OF THIS WARRANTY.**

**IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.**

This warranty gives you specific legal rights, and you may also have other rights which vary from province to province.

Due to continued product enhancements, the product featured may differ slightly from the actual product purchased.

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

## READ ALL INSTRUCTIONS BEFORE USING

## KEEP AWAY FROM WATER

**DANGER** — Any appliance is electrically live even when the switch is off. To reduce the risk of death by electric shock:

1. Always unplug appliance immediately after using.
2. Do not use while bathing or in the shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in, or drop into water or other liquids.
5. If an appliance falls into water, unplug it immediately. Do not reach into the water.

**WARNING** — To reduce the risk of burns, electrocution, fire, or injury to persons:

1. This appliance should never be left unattended when plugged in.
2. Do not pull, twist, or wrap line cord around appliance.
3. This appliance should not be used by, on or near children or individuals with certain disabilities.

4. Use this appliance only for its intended use, as described in this manual. Do not use attachments not recommended by the manufacturer.
5. Never operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been dropped or damaged, or dropped into water. Return the appliance to an Authorized Service Center for examination and repair.
6. Keep the cord away from heated surfaces.
7. Never use while sleeping.
8. Never drop or insert any object into any opening or hose.
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. Unit is hot when in use. Do not let heated surface touch eyes or skin.
11. Do not place the heated unit directly on any surface while it is hot or plugged in.
12. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of hair, lint and other debris.
13. Do not use an extension cord with this appliance.
14. Do not touch hot surfaces of the appliance. Use handles or knobs.
15. Do not attempt to touch the housing of your appliance near the plates, as it is hot when in use.
16. This appliance is not a toy. Keep away from children.
17. Do not use with a voltage converter.

## SAFETY INSTRUCTIONS

1. Do not use the unit if it is damp or if your hands are wet.
2. **WARNING:** Polyethylene bags containing this product or its packaging can be dangerous. To avoid the risk of suffocation, keep these bags out of the reach of babies and children. A polyethylene bag is not a plaything.
3. Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

4. If the appliance is used in a bathroom, unplug it after use. Leaving the appliance near a source of water may be dangerous, even if the appliance is off. For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your electrician for advice.

5. Do not immerse the appliance in water or any other liquid.

6. Stop using the appliance immediately if the cord is damaged. The power supply cord should not be replaced by the end user. The power supply cord should only be replaced by the manufacturer's authorized importer (or, in the United States and Canada, by an authorized Service Center).

7. Do not leave the appliance unattended while it is plugged in or in use.
8. Do not let the appliance's hot surfaces touch eyes or skin.
9. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of

the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance.

10. Allow the appliance to cool before storing.

11. After use, do not wind the cord around the appliance as this may damage it. Instead, roll the cord up loosely and let it rest by the side of the appliance.

## SAVE THESE INSTRUCTIONS OPERATING INSTRUCTIONS

This cool air styler appliance is intended for household use. Use on Alternating Current (60 hertz) only. This unit is designed to be operated at 125V AC.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

**NOTE: Do not use this styling appliance on hair extensions.**

## STYLING WITH THE QUARTZ CERAMIC-COATED EASY-GLIDE PLATES & BARREL

Your new styler has a quartz ceramic-coated, easy-glide surface. This means it's not only simpler to clean off styling product residue, etc.,

after each use, but you'll find that hair glides easily over the surface of the plates as you're styling. The ceramic surface also helps smooth down flyaways. It evenly distributes heat so that the style you create has a salon-perfect, silky smooth, shiny finish.

### UNIQUE AIRFLOW SYSTEM

This styling iron features a unique cooling system for the outer barrel. A fan releases cool air along the outside of the barrel to help set your style and creates long-lasting curls.

### USING INSTANT HEAT, THE 3 HEAT SETTINGS & UNIFORM HEAT RECOVERY SYSTEM

This styling iron features a heater that maintains constant temperature during use for precision styling.

The Instant Heat technology has 3 heat settings. There is a temperature range that's gentle and safe for every type of hair, from the finest to the most resistant, and helps you create the look you want.

If you have fine hair, a low temperature will provide the best results. If you have thick, wavy or hard-to-style hair, keep the heat setting on high. Always test a small section of hair to ensure the proper heat setting for your hair. You can vary the iron's temperature according to your particular need!

TEMPERATURE SETTING GUIDE	
HAIR TYPE	TEMP. CONTROL
FRAGILE/FINE HAIR	Low (I) - 320°F (160°C)
MEDIUM/ NORMAL HAIR	Medium (II) - 356°F (180°C)
WAVY/CURLY HAIR/ COARSE/THICK HAIR	High (III) - 400°F (205°C)
OUTER BARREL	Keeps warm with airflow

Conair's professional salon standards of engineering provide you with a uniform and improved heat recovery system that maintains the iron at constant temperatures. There is a constant supply of power to ensure that heat is continuously and quickly delivered for optimal styling results, unlike other units, which lose heat during use. This provides consistent styling power so that every strand of your hair is set with the same level of heat and comes out the same way for a perfect finish.

**Never leave your styler on and unattended. However, should you fail to turn the iron off, it will shut itself off automatically within 60 minutes.**



## GET TO KNOW YOUR STYLER

 
## GETTING STARTED

Plug the styler into any standard electrical outlet. The RED temperature setting and GREEN fan LED light up immediately. The lights blink and cycle through 3 times and then turn off. Press and hold ON/OFF button for 1–2 seconds to turn the styler on. The unit will automatically default to the II heat setting. The I and II setting turn to a red LED. The I red LED will remain solid, while the II red LED blinks. It will stop blinking and become solid when desired temperature is reached. The GREEN fan LED blinks and then becomes solid. The fan starts to release cool air until the temperature has reached the correct heat setting.


Press the ON/OFF button again to select your desired temperature setting. Press the ON/OFF button 2 times quickly to turn off fan. The GREEN LED will blink. Press the ON/OFF button 2 times quickly again to turn on the fan. The GREEN LED becomes solid. Press and hold the ON/OFF button for 1–2 seconds to turn the unit off. The RED LED light will turn off immediately. The fan and GREEN LED will remain for a few seconds and then turn off. Unplug the unit. Allow the styler to cool down before storing.

**WARNING: The styler will get very hot within a few seconds and should not be placed in contact with the skin after the unit has been turned on.**

## SWITCH FUNCTION FOR TEMPERATURE SETTING



 To select your temperature, press the ON/OFF button again. Press and release button until you reach the temperature you desire. As the temperature increases to the next setting, the LED lights will blink as follows:



Temperature setting is set to I setting. The I red LED light blinks, then turns solid when the temperature has been reached.



Temperature setting is set to II setting. The I red LED remains solid. II red LED light blinks, then turns solid when the temperature has been reached.



Temperature setting is set to III setting. The I and II red LED remains solid. III setting light blinks, then turns solid when the temperature has been reached.

INFINITI**PRO**  
BY CONAIR  
COOL AIR STYLER



## Have a Question?

Please do not return this product to the retailer.

### Call Us First!

Our customer service and product experts are ready to answer ALL your questions.

Please call our TOLL-FREE customer service number at: 1-855-926-6247 or visit us online at [www.conaircanada.ca](http://www.conaircanada.ca)

Model CD2112C  
Instruction Booklet

21CN079870 IB-17378

## TO CURL HAIR

Hair should be clean and completely dry before using the styler. Ensure hair is dry and combed through.

1. Separate a section of hair. The smaller the section, the more defined the curl. The larger the section, the looser the curl or wave.



2. Press and hold the Release button to open plates. Take a section of hair and place between the plates, roughly 2 inches from the roots. (See Fig. 1.) Release the plates by letting go of the Open/Close button.



3. Turn the styler 180° back on itself, so that the hair is wrapped once around the outside of the styler (Fig. 2).

Cool tips provide a safe, heat-resistant place to hold the styler while you curl.



4. Slowly glide the styler along the length of hair from roots to ends in a downward motion (Fig. 3).

5. Release the hair from the styler. The cool air outlet sets the style.

6. Repeat for each section of hair.