

THIS PRODUCT IS ONLY SUITABLE FOR WELL INSULATED SPACES OR OCCASIONAL USE.

Use this appliance in a good insulated room that can be aerated and ventilated regularly.

Do not cover the appliance or air flow.

Not recommended for use in draughty locations.

Power Details: 220-240V a.c.
50Hz
1200W

Accessories: Bottom basement, 2 Screws for basement

IMPORTANT NOTES for your Halogen heater

Please read this instruction manual thoroughly before starting and ensure you are familiar with the operation of your new Halogen heater

- This heater is not suitable for use on deep pile carpet and therefore must be placed on a flat surface.
- Do NOT cover the heater or any ventilation holes.
- Do NOT use to dry clothing. DO NOT use this heater in a closed cupboard or near laundry.
- Keep away from children and pets.

- Do NOT use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
- Do not use in areas where petrol, paint or flammable liquids are used or stored.

Assembly:

Assemble the main heater body and the base plate together in the following sequence:

Remove the butterfly nuts from the lower part of the main heater body.

Insert the power cord through the slot placed in the middle part of the base plate and then assemble the main heater body to the base plate.

Secure the main heater body to the base plate by means of the two butterfly nuts previously removed. Insert the power cord through the slot and then fix it with the clamp.

Operation:

Place the heater on a flat level surface.

Once the heater has been properly attached to the base plate and the heater plugged into a suitable power supply, switch on the first "POWER" switch. This will operate the first heat setting (400W) the second switch will operate the 800W setting bringing two of the halogen elements on and the third will operate the final power (1200W) setting.

The oscillation mode which rotates the heater through an angle of approximately 75 degrees. Pressing each switch again will switch each element off. The first power switch is the master control switch and needs to be on to control the other elements and oscillation.

Safety Device:

This appliance is provided with safety devices that disconnect the appliance when the radiator is tilted or when it is tipped by means of a switch situated in the lower part of the radiator.

Replacing the bulbs:

 
Warning! Before you begin replacing the bulbs make sure the heater is unplugged from the mains socket and the unit (including the bulbs) has fully cooled.

Please note that whilst the bulbs in this heater are replaceable we recommend that this is done by a professional electrician.


Replacement bulbs are available to order under item code 11156.

How to take out the tubes:

1. Take out the screws on both sides of the unit.

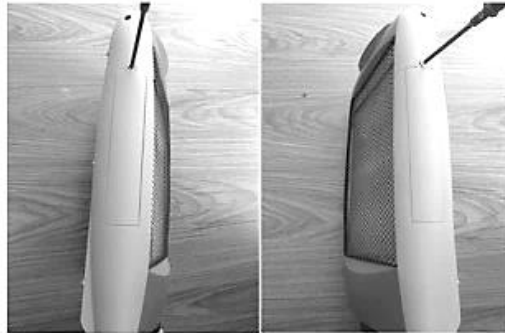

 
2. Use pliers to clamp the internal lock of latch.

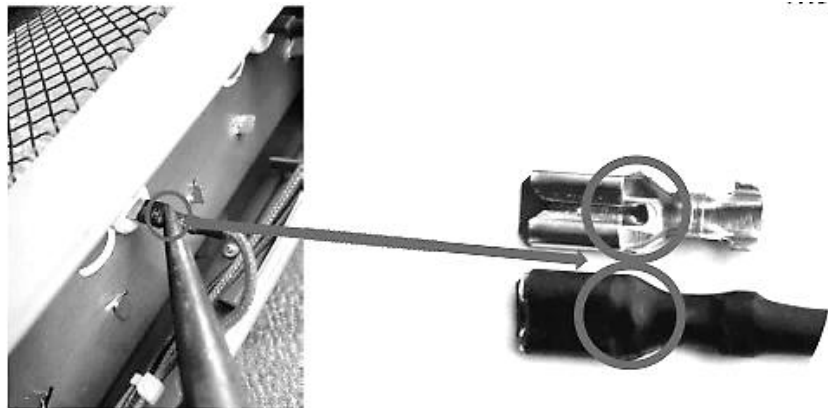


3. Disconnect the wires from the tube terminal on both sides.



 4. Open the tube holders on both sides.

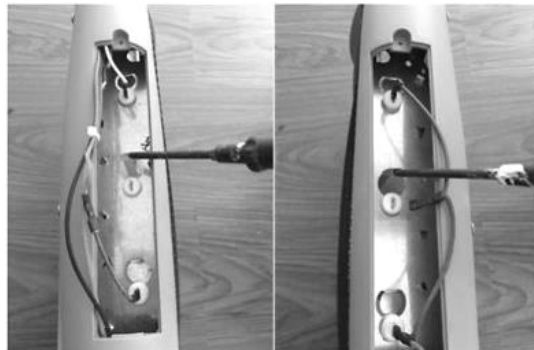


 5. Remove the tubes.

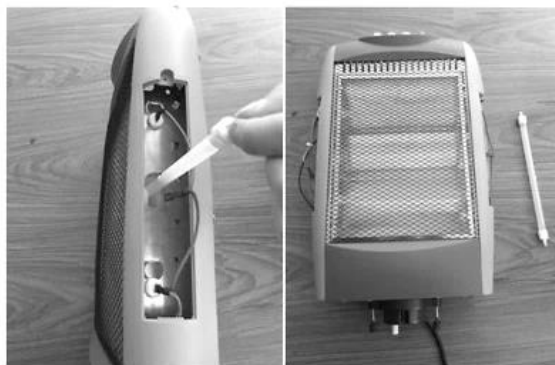

How to install the tubes:

 1. Insert the new tubes.

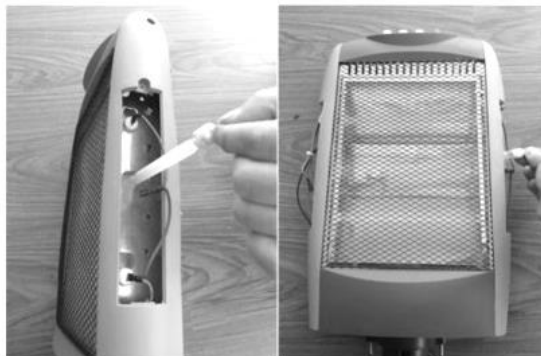


2. Close the tube holder on both sides.



1. Reconnect the wires to the tube terminals on both sides.



 2. Finish by closing the sides, fixing the panels with the screws.

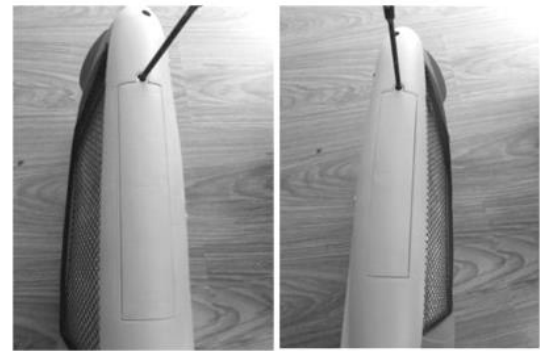**WARNING:**

- This heater is not equipped with a device to control the room temperature. Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
- The heater must not be used if the glass bulbs are damaged.
- Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

CLEANING AND MAINTENANCE:

- Before cleaning always remove the plug from the electrical socket.
- In order to avoid any hazard, only clean the appliance with a lightly dampened rag.
- After use (and before cleaning) always unplug the appliance and wait until the item is cool.
- The appliance needs only external regular cleaning.
- Never use abrasive powders or solvents. Only use a moistened cloth.
- **NEVER IMMERSE THE HEATER TO CLEAN IT.**

SAFETY INSTRUCTION:

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

- READ ALL INSTRUCTIONS BEFORE USE.
- TO PROTECT AGAINST ELECTRIC SHOCK, DO NOT IMMERSE CORD, PLUG OR APPLIANCE IN WATER OR ANY OTHER LIQUID.

- UNPLUG FROM OUTLET WHEN NOT IN USE AND BEFORE CLEANING. ALLOW THE ITEM TO COOL THOROUGHLY BEFORE PUTTING ON OR TAKING OFF PARTS.
- DO NOT OPERATE AN APPLIANCE WITH A DAMAGED CORD OR PLUG OR AFTER THE APPLIANCE MALFUNCTIONS, OR HAS BEEN DAMAGED IN ANY MANNER. WE RECOMMEND THAT THE POWER CORD IS NOT KINKED OR STORED IN A TWISTED MANNER, AND THAT YOU REGULARLY CHECK ITS CONDITION.
- THE USE OF ACCESSORY ATTACHMENTS NOT RECOMMENDED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- DO NOT USE OUTDOORS.
- DO NOT LET CORD HANG OVER THE EDGE OF A TABLE OR COUNTER, OR TOUCH HOT SURFACES.
- DO NOT PLACE ON OR NEAR HEAT SOURCES, AND USE THE HALOGEN HEATER ON A LEVEL, STABLE SURFACE.
- NEVER COVER THE ITEM IN ANY WAY WHEN IN USE, APART FROM THE CONTENTS INCLUDED WITH THIS PRODUCT.
- DO NOT PLACE UNDER OR NEAR FLAMMABLE MATERIALS SUCH AS CURTAINS, DRAPERIES, SHELVES, LOOSE WALL PAPER ETC.
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.

WARNING:

- CHECK THE APPLIANCE AND POWER CABLE CAREFULLY FOR DAMAGE BEFORE EACH USE.
- KEEP THE APPLIANCE AWAY FROM CHILDREN.
- BEFORE CONNECTING THE APPLIANCE, CHECK IF THE VOLTAGE INDICATED ON THE BOTTOM OF THE APPLIANCE IS IN ACCORDANCE WITH THE MAIN VOLTAGE IN YOUR HOME.
- THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED. CHILDREN SHALL NOT PLAY WITH THE APPLIANCE. CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN WITHOUT SUPERVISION.
- **SOME PARTS OF THIS PRODUCT CAN BECOME VERY HOT AND CAUSE BURNS. PARTICULAR ATTENTION HAS TO BE GIVEN WHERE CHILDREN AND VULNERABLE PEOPLE ARE PRESENT.**
- CHILDREN OF LESS THAN 3 YEARS SHOULD BE KEPT AWAY UNLESS CONTINUOUSLY SUPERVISED.
- DO NOT PLACE THIS ITEM IMMEDIATELY BELOW A SOCKET-OUTLET.

- KEEP ITEM AT LEAST 1M AWAY FROM COMBUSTIBLE MATERIAL SUCH AS FURNITURE, CUSHIONS, BEDDING, PAPER, CLOTHES, CURTAINS ETC.
- DO NOT USE IF THE POWER CORD OR PLUG IS DAMAGED. TO BE REPAIRED BY A QUALIFIED ELECTRICIAN OR TO BE REPLACED BY THE MANUFACTURER, SERVICE AGENT OR SIMILARLY QUALIFIED PERSON, IN ORDER TO AVOID A HAZARD.

PLUG WIRING (UK & IRELAND)


This appliance is fitted with a BS 1363 13-amp plug. If you have to replace the fuse, only those that are ASTA or BSI approved to BS1362 and with a rated current of 13-amps should be used. If there is a fuse cover fitted, this cover must be re-fitted after changing the fuse. If the fuse cover is lost or damaged the plug must not be used. Spare fuse holders and fuses are available from electrical outlets. If the socket outlets in your home or office are not suitable for the plug of this product, the plug must be removed and disposed of safely as insertion of the plug into a socket is likely to cause electric hazard. A replacement plug should be wired according to the following instructions:

The cable

A mains electricity cable contains three inner wires. Each has a core of copper and an outer layer of flexible plastic. This product is earthed; the wires in the cord set are colour coded in the following way:

BLUE	NEUTRAL
BROWN	LIVE
GREEN & YELLOW	EARTH


The diagram shows the key features of a correctly wired three-pin mains plug.

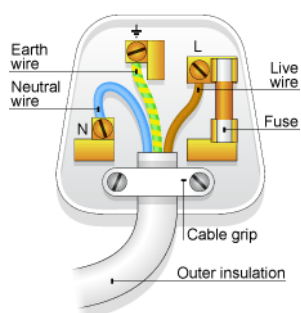 


DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- Plastics, polybags – Contains the following recyclable plastic.



Code & Symbol	
Type of Plastic	Polypropylene
Commonly used for	Microwaveable food containers, yoghurt pots, butter tubs, disposable plates and cups
Notes	Commonly recycled and collected from household recycling bins (packaging tape itself not recyclable but does not interfere with cardboard)

 - At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.

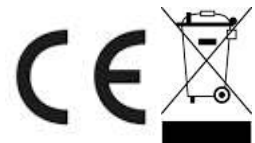

Heating Technical Details:

Model identifier(s): YQ-12-S			
Complies with EU Regulation 2015/1188.			
Seasonal space heating of electric visibly glowing radiant energy efficiency: 32%			
Item	Symbol	Value	Unit
Heat output			
Nominal heat output	P _{nom}	1.2	kW
Minimum heat output (indicative)	P _{min}	N/A	kW
Maximum continuous heat output	P _{max,c}	N/A	kW
Auxiliary electricity consumption			
At nominal heat output	e _{lmax}	N/A	kW
At minimum heat output	e _{lmin}	N/A	kW
in standby mode	e _{lSB}	0	W

Item	Unit
Type of heat input, for electric storage local space heaters only (select one)	
manual heat charge control, with integrated thermostat	No
manual heat charge control with room and/or outdoor temperature feedback	No
electronic heat charge control with room and/or outdoor temperature feedback	No
fan assisted heat output	No
Type of heat output/room temperature control (select one)	
single stage heat output and no room temperature control	No
Two or more manual stages, no room temperature control	YES
with mechanic thermostat room temperature control	No
with electronic room temperature control	No
electronic room temperature control plus day timer	No
electronic room temperature control plus week timer	No
Other control options (multiple selections possible)	
Other control options (multiple selections possible)	NONE
Contact details:	COOPERS OF STORTFORD, 11 BRIDGE STREET, BISHOP'S STORTFORD, HERTFORDSHIRE,UK, CM23 2JU



Head Office, 11 Bridge Street,
Bishop's Stortford CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595
www.coopersofstortford.co.uk

Coopers
OF STORTFORD

*Calls cost 7 pence per minute plus your
telephone company's network access charge