



REFRIGERATION AND
AIR CONDITIONING

INSTRUCTIONS

EKA 163A / 164A




084R9970




RI8KB700

084R9970

084R9970

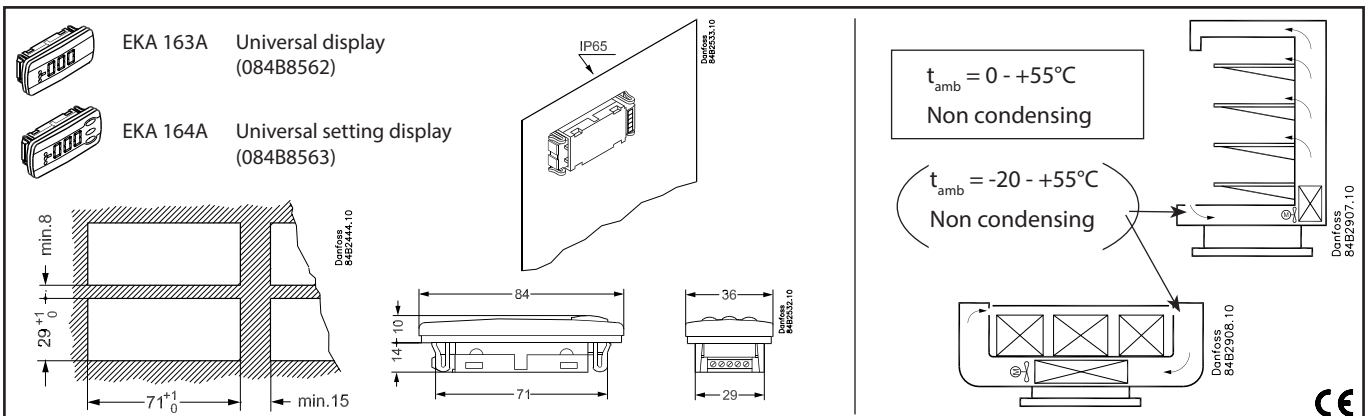


EKA 163A /
EKA 164A → EKC 4xx / EKC 5xx / AK..

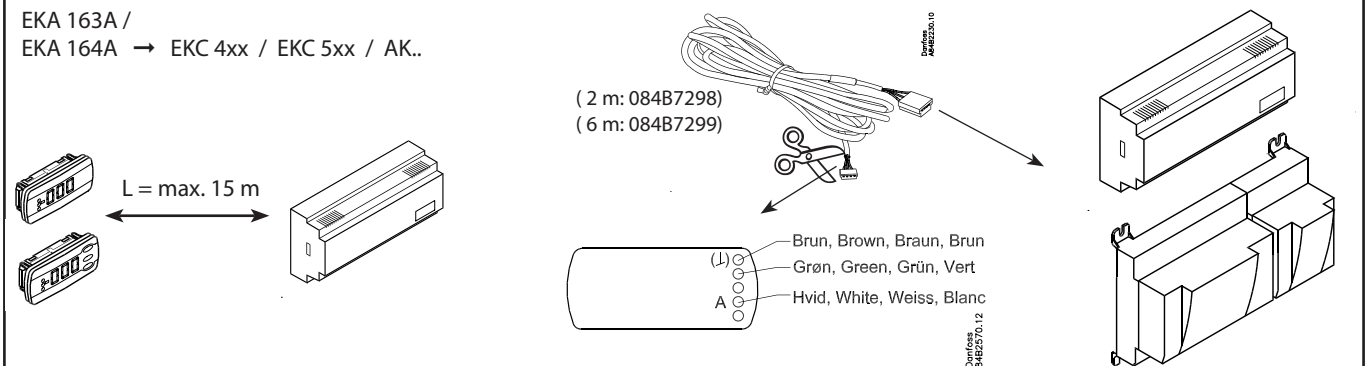


EKA 163A → EKC 202D / 204A1, AK-CC 210 / 260

Data communication: See literature RC8AC

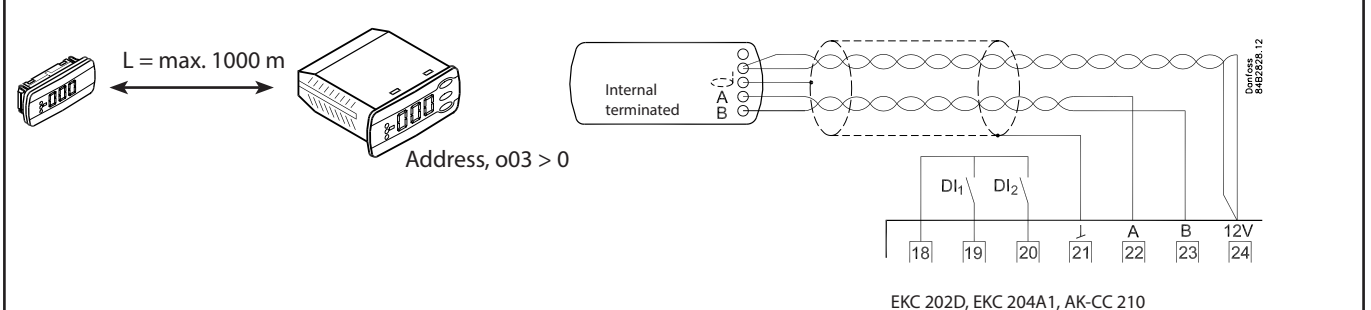

EKA 163A / 164A → AK-CC 450 / 550

Data communication: See literature RC8AC

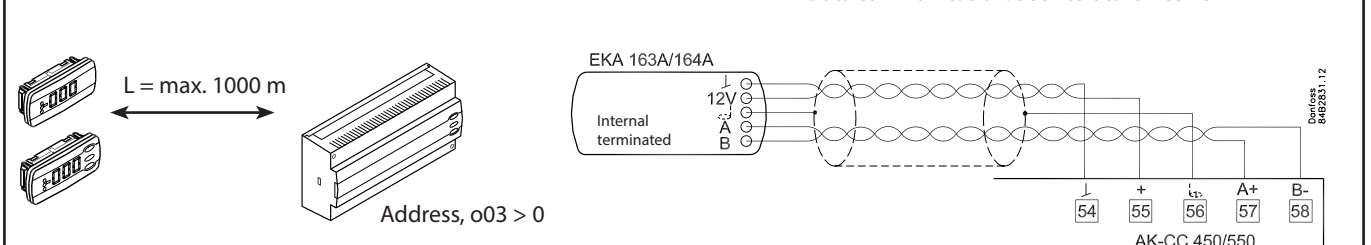

EKA 164A → EKD 316

Data communication: See literature RC8AC

