



1

Carefully remove all screw covers and screws from the LCD bezel. Then remove the screws that hold the frame onto the laptop lid. Finally, remove the holding screws from the LCD panel.



2

Take off the bezel: Gently insert your fingers between the bezel and the lower edge of the LCD panel, and then remove the bezel all around, up to the top edge of the panel. This process allows you to detach the bezel from the frame.



3

Carefully tilt the LCD panel towards the front. Watch out! The cables are still



4

Pull the data plug out of the display



5

Now remove the backlight plug from the inverter. Please remember that you should not pull at the connection!



6

For the installation of a new LCD panel, repeat the process in reverse