


Front Axle Housing Vent Hose


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Remove front LH wheel only.
Refer to: [Wheel and Tire](#) (204-04A Wheels and Tires, Removal and Installation).
2. Remove the engine rear undershield.
Refer to: [Engine Rear Undershield](#) (501-02 Front End Body Panels, Removal and Installation).
3. Remove the pin-type retainers and the fender splash shield.

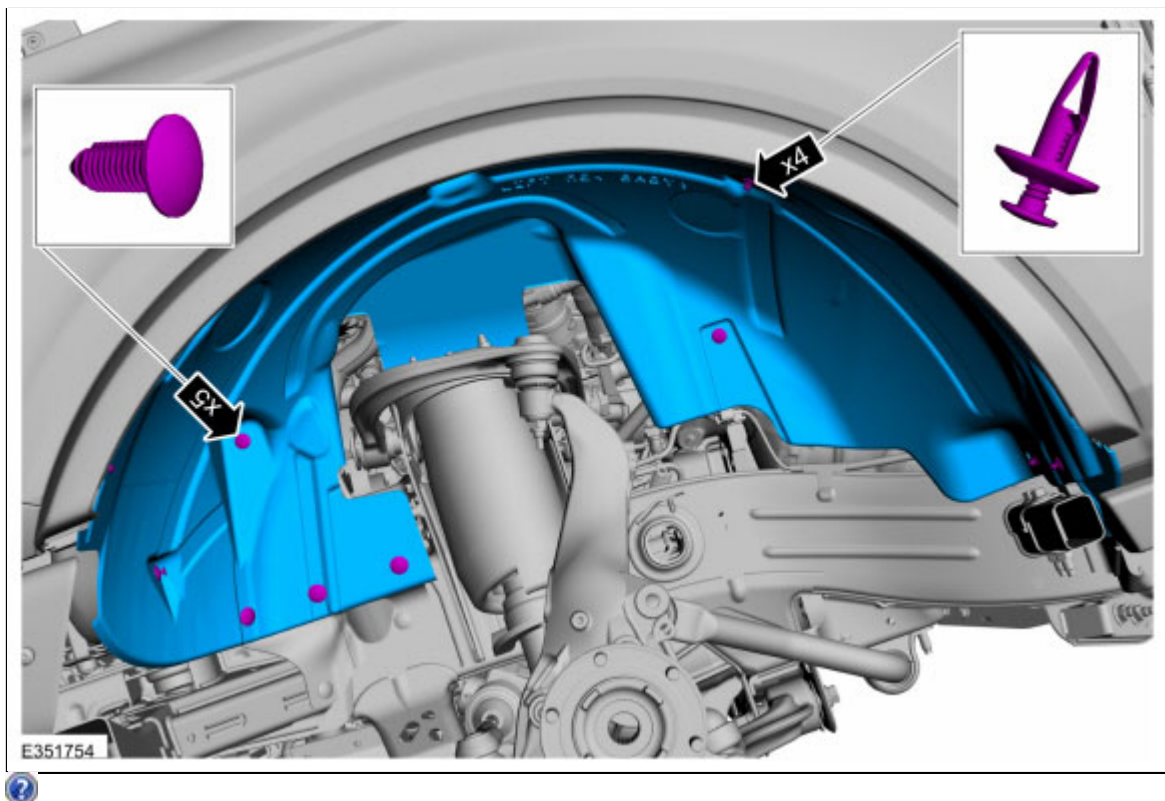


4.
 1. Disconnect the front axle housing vent hose.
 2. Detach the retainer clip from front axle housing vent hose and position aside.

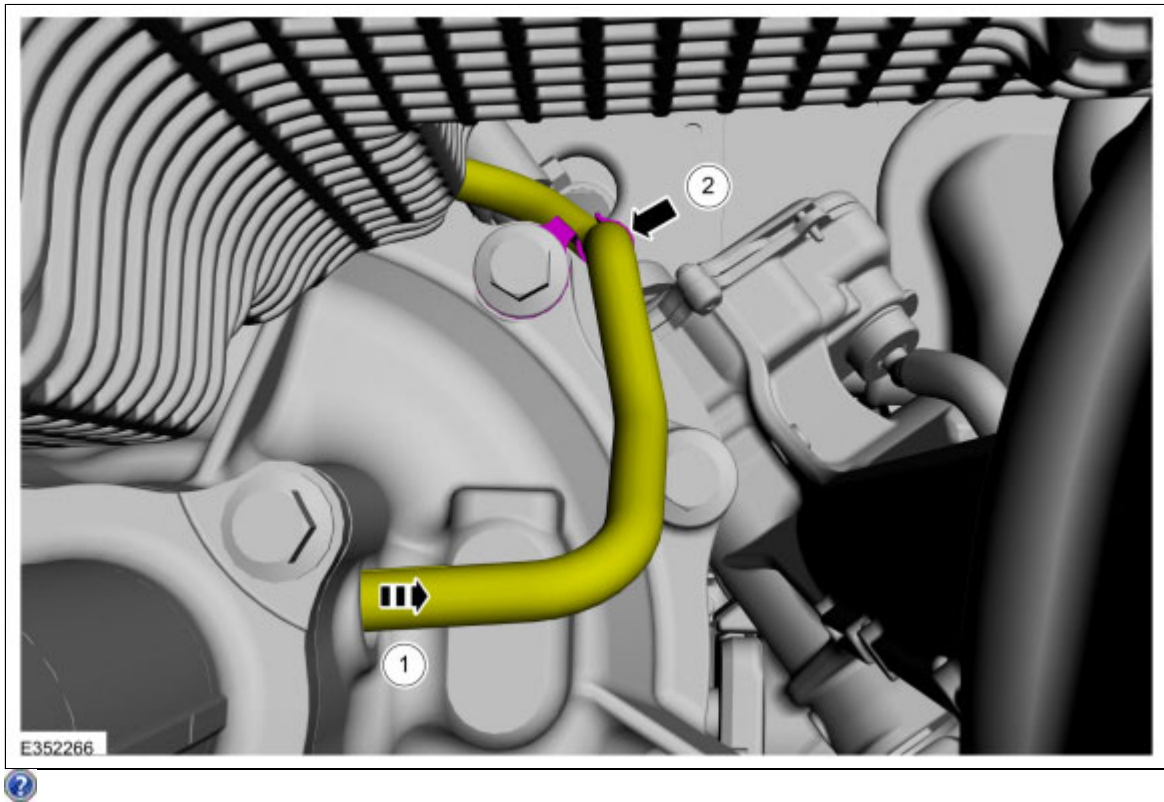

5.


- Make a note of installation mark.
- Detach the front axle housing vent hose from metal tube.

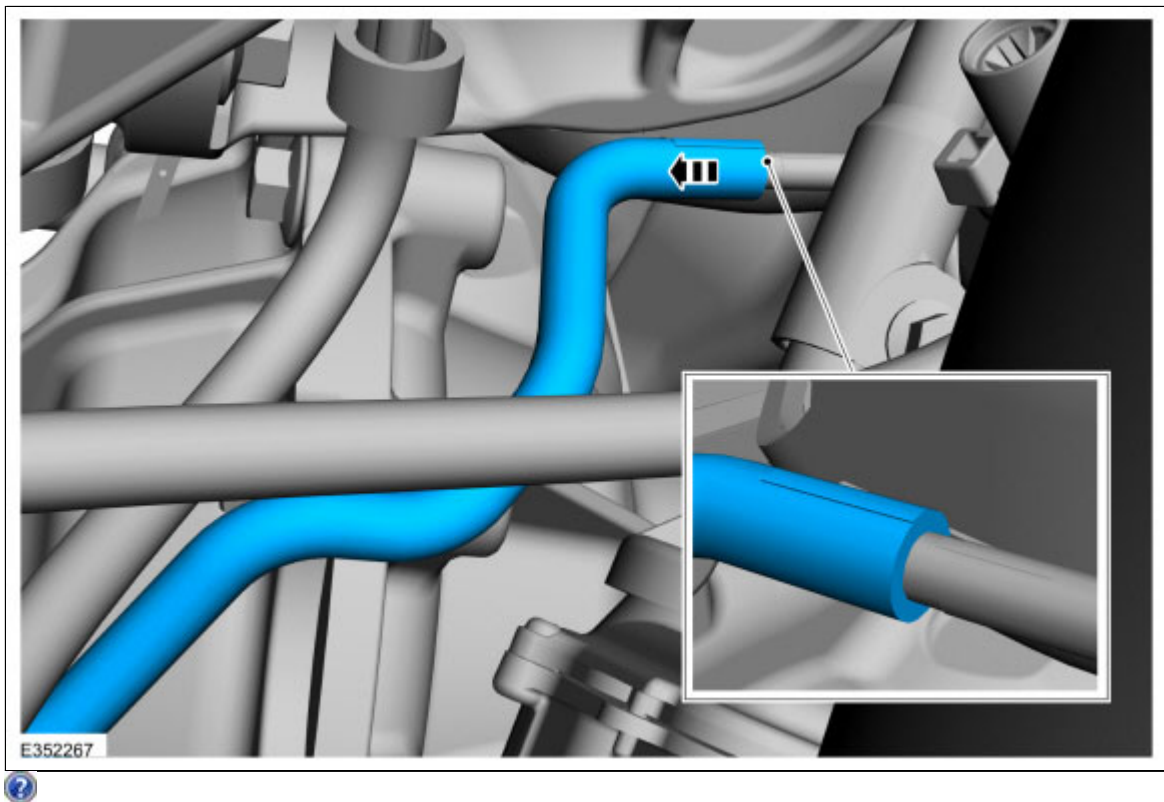

6. **NOTICE:** Make sure the front axle housing vent hose is not damaged or blocked.

NOTE: *This step is not necessary when installing a new component.*

Inspect the front axle housing vent hose for damage or clogged. If found damaged or clogged, replace with new vent hose.

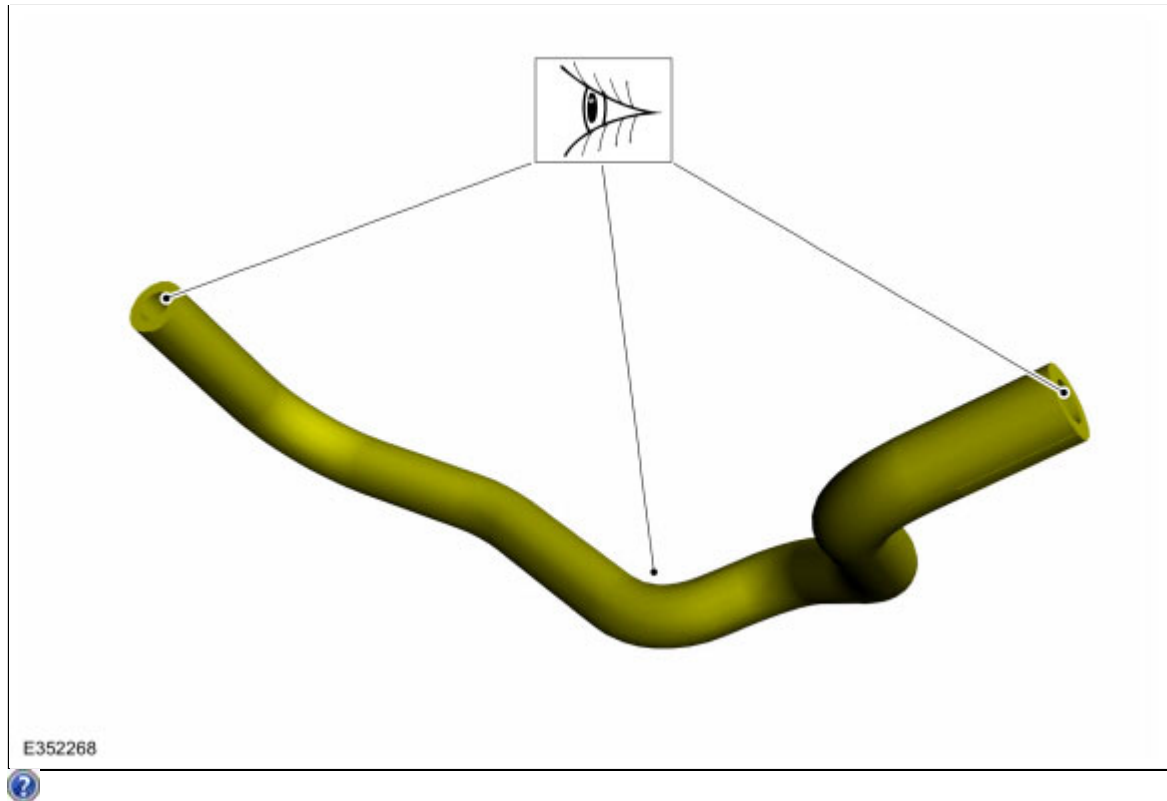

Installation

1. To install, reverse the removal the procedure.

Copyright © Ford Motor Company