


Goldair™

PLATINUM

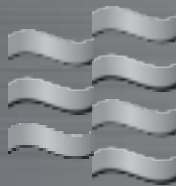

Operating Instructions

10L Dehumidifier with WiFi



Model: GPDH480

General Care and Safety Guide

YOUR SAFETY IS IMPORTANT TO US. PLEASE ENSURE YOU TAKE NOTE OF THE INSTRUCTIONS AND WARNINGS OUTLINED IN THIS MANUAL.

CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they are supervised or have been given instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

WARNING: You must not cover this appliance. Covering this appliance presents fire risk and will activate the safety fuse; permanently disabling the unit.

WARNING: Do not use this appliance in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

WARNING: To reduce the risk of fire, keep textiles, curtains, or any flammable material a minimum distance of 1 metre from the air outlet.

- Use only the voltage specified on the rating label of the appliance.
- Keep all objects at least 1 metre from the front, sides and rear of the appliance.
- This appliance is intended for household use only and not for commercial or industrial use.
- Indoor use only.
- Use this appliance only as described in this manual. Any other use is not recommended by the manufacturer and may cause fire, electric shock or injury.
- Do not use the appliance if it has been dropped or damaged.
- The common cause of overheating is deposits of dust or fluff in the appliance. Ensure these deposits are removed regularly by unplugging the appliance and vacuum cleaning the air vents and grills.



General Care and Safety Guide

- Never use the appliance to dry clothes.
- Always unplug appliance when not in use.
- When the appliance has been unpacked, check it for transport damage and ensure all parts have been delivered. If parts are missing or the appliance has been damaged, contact the Customer Services Team.
- Do not use if there are visible signs of damage to the appliance.
- Do not connect the appliance to mains supply until completely assembled and adjusted.
- Ensure hands are dry before handling the plug or main unit.
- Ensure appliance is on a flat, stable, heat-resistant surface.
- Do not operate with cord set coiled up as a heat build up is likely, which could be sufficient to become a hazard.
- Carry out regular checks of the supply cord to ensure no damage is evident
- Do not operate this appliance with a damaged cord, plug or after the appliance malfunctions or has been dropped or damaged in any manner. Take to a qualified electrical person for examination, electrical service or repair.
- Do not twist, kink or wrap the cord around the appliance, as this may cause the insulation to weaken and split. Always ensure that all cord has been removed from any cord storage area and is unrolled before use.
- It is recommended that this appliance is plugged directly into the wall socket. Power boards are not rated to supply power to high wattage appliances.
- A correctly specified, undamaged extension cord may be used with this appliance provided it is used in a safe manner.
- Do not remove plug from power socket until the appliance has been switched off.
- Do not remove plug from power socket by pulling cord; always grip plug.
- Do not place cord under carpet or cover with rugs or furniture. Arrange the cord so it cannot be tripped over.
- Don't place appliance on bedding or on thick & long carpet where the openings may get blocked.
- Switch off and use handle provided when moving
- Do not place appliance close to radiant heat source.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage to the appliance.
- Do not sit on the appliance.
- Do not use abrasive cleaning products on this appliance. Clean with a damp cloth (not wet) rinsed in hot soapy water only. Always remove plug from the mains supply before cleaning.
- Do not operate in areas where petrol, paint or other flammable liquids are used or stored.
- Do not use this appliance in the immediate surrounds of a bath, a shower, or a swimming pool or other liquids.

General Care and Safety Guide

- The appliance must not be immersed in any liquids.
 - There are no user serviceable parts installed in the unit.
 - Do not place the unit in wardrobes or other enclosed spaces as this may cause fire hazards.
 - This unit is not supposed to be used in or around locations where foodstuffs, works of art or delicate articles of science, etc. are stored.
 - If your appliance does not work, or is not working properly, contact the place of purchase or the Customer Services Team.
-
- This appliance contains a UV-C lamp.
 - Read the manufacturers instructions before opening the appliance
 - Unintended use of the appliance or damage to the housing may result in the escape of dangerous UV-C radiation. UV-C radiation may, even in small doses cause harm to the eyes and skin.
 - Appliances that are obviously damaged must not be operated.
 - The UV-C lamp is not user replaceable.


Operating Your Dehumidifier

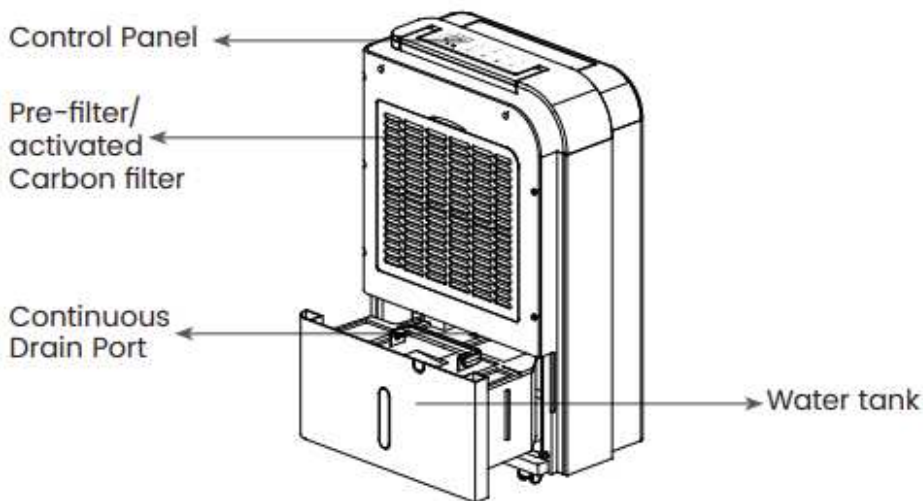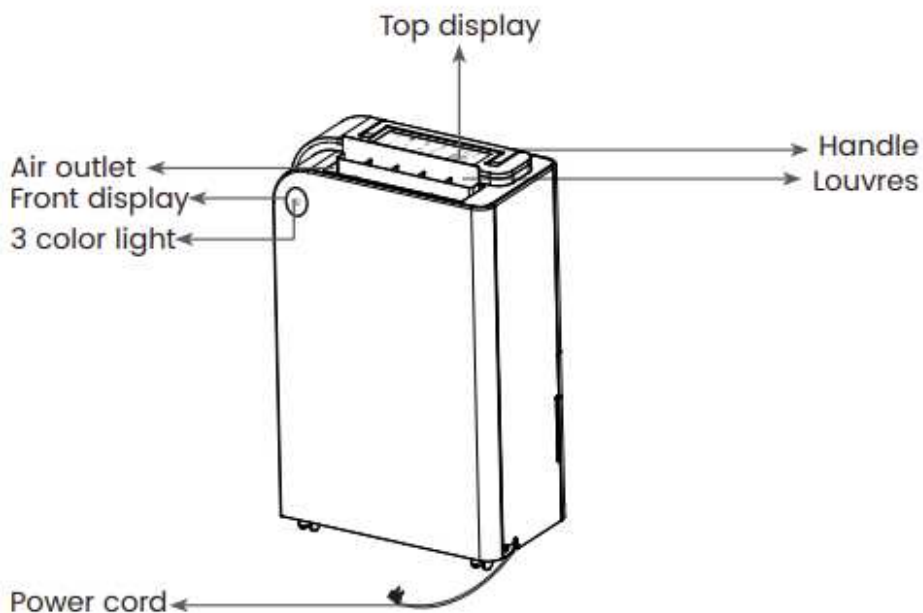


Operating Your Dehumidifier

ACCESSORIES Activated

Activated carbon filter

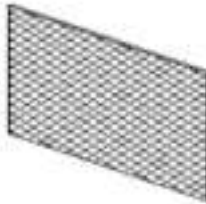


HEPA FILTER

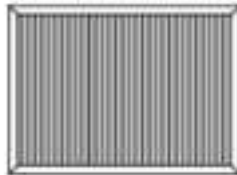

Water pipe



5 stage dual action dehumidifier and purifier great in improving indoor air quality

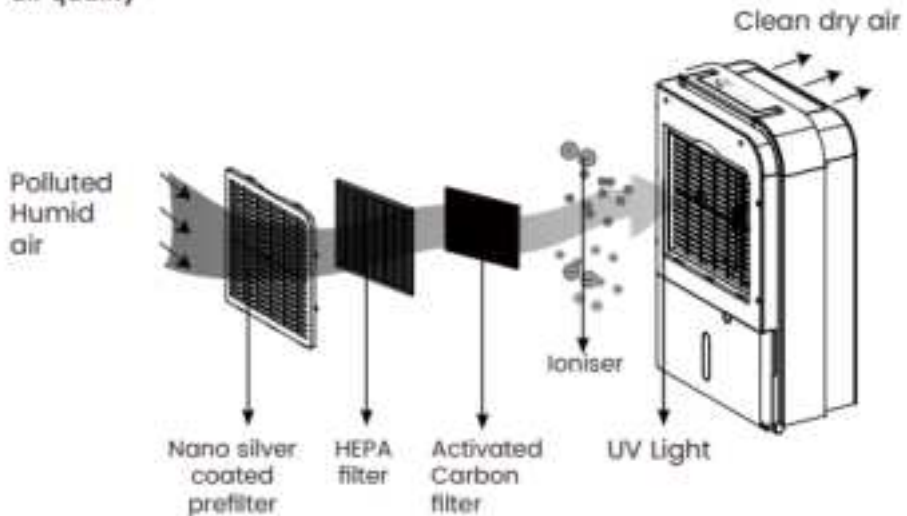

Operating Your Dehumidifier

Always choose a safe location for the dehumidifier, keeping in mind the safety precautions outlined. Ensure all packaging has been removed from the unit before use. Please follow the below instructions.

WARNING: In order to avoid overheating or fire, do not cover the dehumidifier.

WARNING: Keep all objects at least 200mm from all sides of the appliance.

WARNING: Do not use this dehumidifier with a programmer, separate timer, remote-control system or any other device that switches the dehumidifier on automatically, since a fire risk exists if the dehumidifier is covered or positioned incorrectly.

WARNING: Never leave this dehumidifier unattended.

Ensure dehumidifier is on a flat, stable, heat-resistant surface.

Once the dehumidifier is in a safe operating position and all switches are in the off position, insert the power plug into the mains outlet and switch on.


CAUTION: Ensure the power cord is not tight because if pulled it may partially pull the plug from the socket. A partially inserted plug will overheat the plug and socket and could result in fire.

Leave the appliance to stand for one hour after transport or after the unit has been on its side before connecting it to the mains supply to let the refrigerant settle.

Ensure all external windows and doors are closed before turning on the unit.

Ensure that the water container is positioned correctly.

Operating Your Dehumidifier

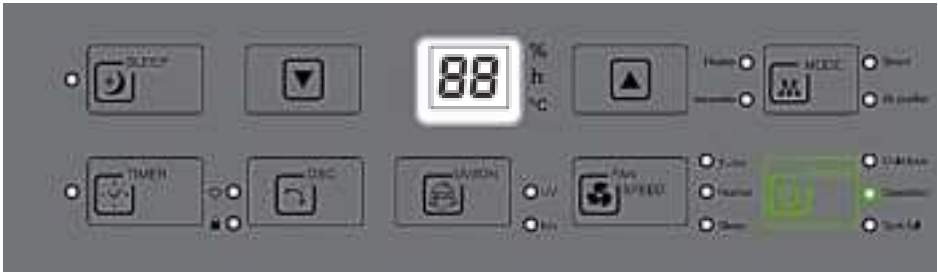

POWER BUTTON

- Press the 'Power' button to turn your dehumidifier ON and OFF. After turning unit OFF, the fan will continue to run for about 2 minutes to reduce the residual heat inside the unit. After 2 minutes, the fan and the louvre will automatically close and the unit will stop running. (Do not remove the plug directly while the power is still on or during the heat reduction time to avoid damage to the unit or reduce the unit's life). When the unit is OFF but plugged in, your dehumidifier is in STANDBY MODE.



MODE

When the unit is running, press the 'Mode' button to choose the operation mode.

- Smart: In this mode, the target humidity is set to 50%RH and cannot be adjusted. The fan speed is automatically adjusted according to the detected ambient humidity and cannot be manually adjusted by the 'Fan Speed' button.
- Heater: In this mode the unit will produce a very small amount of heat. You can adjust the temperature from 16-30 degrees. The fan speed can be adjusted in this mode.

Please note this unit is not a heater and should not be used as an alternative to a good quality heater.

- Dehumidifier: When in dehumidifier mode, the 2 digit display shows the current humidity and the LED display will show the current temperature. To amend the target humidity, press the '▲&▼' keys (the humidity is set to cycle from '35% - 80%', press '▲&▼' once to set the humidity increase by 5%), and adjust the air volume and dehumidification capacity by pressing the 'Fan Speed' button. Your set humidity will flash on the screen before defaulting back to the current humidity setting.
- Continuous dehumidification (drying) function: When the target humidity is set to 35% in the dehumidifier mode, the unit runs in dry mode, and continue to dehumidify until the water tank is full. This mode is suitable for helping to dry clothes. Do not place the clothing directly on the air outlet of the unit. Make sure that there is a distance of at least 1.5m between the clothes and the machine. Also set the louvre to the OSC mode to direct the airflow onto the clothes for drying.
- Air purifier: This will help to improve the indoor air quality using the purifier filters. The unit does not dehumidify in this mode. No air moisture will be extracted.

Operating Your Dehumidifier



FAN SPEED

When the unit is running, the air volume can be adjusted by pressing the Fan Speed button.

- Turbo: The fan runs at high speed and the dehumidification is at the maximum capacity.
- Normal: The fan runs at medium speed, the dehumidification is at normal capacity.
- Low: The fan runs at low speed and the dehumidification is at the minimum capacity.



UV & ION

The UV and ION functions are controlled by one button:

- Press once, the UV function is turned on, the UV indicator lights up, and the ION function and indicator light are off.
- Press again, the UV function is turned off and the ION function and indicator are lit.
- Press for a third time, the UV and ION functions are both turned on and the indicators are lit.
- Press for a fourth time, the UV and ION functions are turned off and the indicators are off.



OSC/SWING

When the unit is running, press the 'SWING' button, and the louvre will swing at '(45-90 degrees swing wind)—(stop)'. When the louvre is on, the 'SWING' button lights up. When you turn on the unit for the first time, the louvre defaults to the 90 degree position.



CHILD LOCK

The 'SWING' button doubles up as a Child Lock function. Press and hold this button to enter the child lock mode, you will see the child lock indicator light up and all functionality of the control panel will stop. To unlock, simply press and hold the child lock button until the child lock indicator light switches off.

Operating Your Dehumidifier



TIMER

Setting the timer to turn dehumidifier ON

- When the unit is in STANDBY MODE. Press the 'TIMER' button, its LED display will flash and the 2 digit display will default to show '01'.
- Press '▲&▼' button, to increase/decrease the timer by 1h, to a maximum of 24hrs. To cancel the timer, set it to '0'.
- Once a time is set and there is no operation for 3 seconds, the timer is confirmed.
- To alter a set time, press the 'TIMER' button and adjust with the '▲&▼' key.

Setting the timer to turn dehumidifier OFF

- When the unit is ON. Press the 'TIMER' button, its LED display will flash and the 2 digit display will default to show '01'.
- Press '▲&▼' button, to increase/decrease the timer by 1h, to a maximum of 24hrs. To cancel the timer, set it to '0'.
- Once a time is set and there is no operation for 3 sec, the timer setting is successful.
- After the time has lapsed, the unit stops running.
- To alter a set time, press the 'TIMER' button and adjust with the '▲&▼' key.

WiFi


- This dehumidifier is WiFi enabled, allowing full operation of your dehumidifier from the Goldair WiFi app.
- Follow the instructions in this manual under the section titled 'WiFi – Downloading and Setting up App' for information on how to operate the unit via the Goldair app.
- To set the unit in to WiFi pairing mode, press and hold the 'MODE' button, until the buzzer sounds and the SMART' indicator flashes.


Operating Your Dehumidifier

USING YOUR REMOTE CONTROL




The settings on the remote control are similar to the control panel.

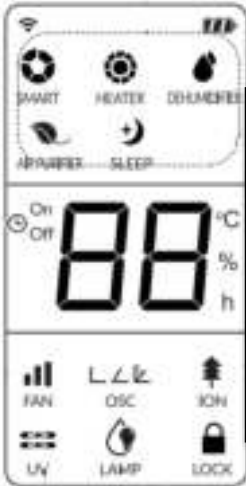Note: Ensure you always point the remote control at the LED light screen on the front of the unit.




 **POWER** : Turn unit on/off

SWING: Change the Oscillation setting. Choose between 3 modes:

-  Swing off and air blowing at 45 degrees
-  Swing off and air blowing at 90 degrees
-  Swing on and air blowing between 45-90 degrees

ION: Turn Ion mode on and off

TIMER: Use to turn unit on when in standby mode or off when in on mode. Press 'TIMER' and use the '+' / '-' buttons to choose between 1 – 24 hours. The device will turn on/off after the selected amount of time.

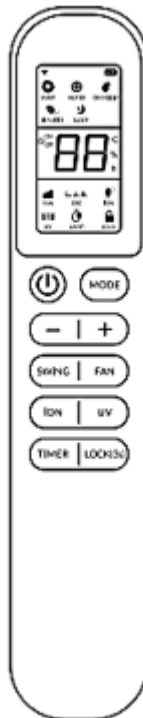

MODE: Change settings between SMART/HEATER/DEHUMIDIFIER / AIR PURIFIER. The functionality works the same as via the control panel.

+ / - : Use to increase and decrease temperature or humidity levels.

FAN: Change the fan speed between Turbo, Normal and Sleep

UV: Turn UV mode on and off

LOCK: Enable child lock setting by holding down for 3 seconds.

LAMP: Turn lamp on/off by holding down "ION" button for 3 seconds.

Operating Your Dehumidifier

TANK FULL INDICATOR

When the tank is full, the unit will stop running, and the Full indicator light will flash. Grip the tank by its handles and carefully pull out.

Empty the water tank and reinsert it into the dehumidifier.

The tank must be in place and securely seated for the dehumidifier to operate again. The dehumidifier will re-start when the tank is restored to its correct position.

CONTINUOUS DRAINAGE

This dehumidifier has a continuous drain hole that can be connected to a plastic pipe with a 15 mm inner diameter (Supplied in the packing).

Water can be smart plumbed in or drained into a sink, a larger receptacle or through the wall into an outside drain. Please follow the steps below to set your unit up for continuous drainage.

- Cut off the cover for the continuous drain on the back of the unit.
- Pull out the water tank and connect a water tube of inner diameter 15mm to the drain connector, and ensure the connection is tight.
- Return the water tank back into position within the unit.



This unit uses gravity to drain the water. The drain should be lower than the dehumidifier water outlet. Be sure to run the water pipe downward and let the water flow out smoothly. Do not kink or bend the pipe.

WiFi – Downloading and Setting up APP

This APP is supported only on 2.4GHz Wi-Fi channels. Please ensure your phone is 2.4GHz capable

**Note this device will only work within your home WIFI system.
This does not operate on 3G or 4G internet connections.
You will need a connection to your home Wi-Fi.**



Download Goldair mobile APP

- Open the APP Store or Google Play on your mobile phone.
- Open 'Search' and enter 'Goldair'
- Click 'GET' and begin to download and install.

Once downloaded to your phone open the APP

- Tap REGISTER near the bottom of the screen.
- Read and agree to the Privacy Policy.
- Add your email address.
- Tap 'Obtain verification code'




You will then receive an email with a verification code.


- Enter the verification code from your email.
- Create a password.
- Then tap confirm.

If you haven't received a verification code via email, tap the resend button and when the verification code is received follow above steps.

Your APP is now registered and ready for pairing to your device.

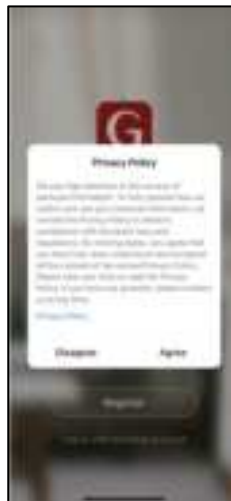

Pairing APP to Dehumidifier

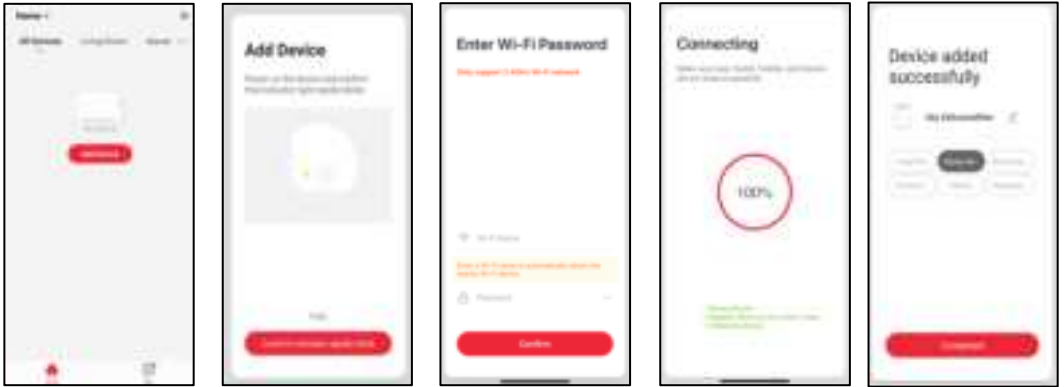

- On your phone tap 'Add Device' to connect to the dehumidifier.
- Press the 'MODE' button on the control panel for 5 seconds until the 'SMART' LED light starts rapidly flashing.
- Tap 'Confirm indicator rapidly blink' on your phone.
- Choose/confirm which WiFi to connect to.



Note: your phone may pick up other WiFi signals (e.g. neighbours) so you will need to choose.


- Enter your WiFi password
- The phone will then connect to the dehumidifier. Ensure you have a good strong signal from your WiFi router.

Note: The WiFi indicator on the dehumidifier may go off during this pairing process.

- Once complete the screen showing the device has been successfully added will appear.
- Rename your dehumidifier and choose the relevant location eg Master Bedroom.
- Tap 'Completed' to continue. To add additional dehumidifiers or devices to your app, tap 'Add Device' and repeat above process.
- If the phone and dehumidifier fail to connect, then you will need to try to connect again as per the above process.
- Click on your dehumidifier and the main control screen on your phone will appear.

Operating your dehumidifier from the APP

Dehumidifier operation screen

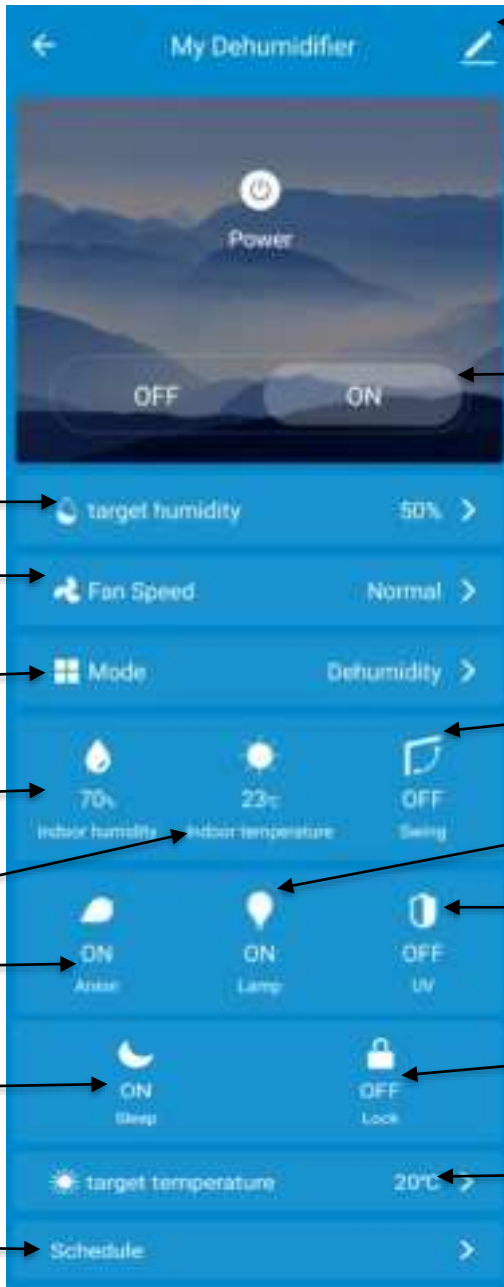

Device settings

ON/OFF switch

Change target humidity settings

Change fan speed

Change between dehumidify, heater and fan mode.

Current humidity

Current temperature

Turn Anion setting ON and OFF

Turn Sleep mode ON and OFF

Add timer schedule

Turn Swing/ air flow setting ON and OFF

Turn lamp ON and OFF

Turn UV setting ON and OFF

Turn Lock ON and OFF

Adjust temperature setting

Operating your Dehumidifier from the APP

Device settings:



Change the name of your device

Change the location of your device

Change the network of your device

Share device with family member

Group your devices

Review device information

Submit feedback

Remove device from app

Share device with family member:


- The person you add will need to have the Goldair APP installed on their phone.
- Enter your family member's details to share device operation with them.
- Tap 'Confirm' to complete the addition.

Remove family member from device:

- Tap 'Share Devices' to delete the number of the person you want to cancel. Tap 'Confirm' to confirm.

NOTE: There can only be one user operating the dehumidifier at a time. The APP needs to be closed on all other devices to enable the sharing to work.

NOTE: If someone else sets up their phone on the same Dehumidifier without using the 'Device Sharing' the original phone will be disconnected and the dehumidifier will disappear from the device list.

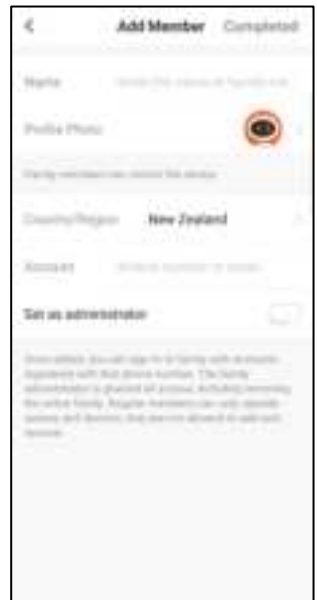


Operating your Dehumidifier from the APP

Group your devices:

Devices within the same group can be controlled simultaneously

- Under 'Create Group' setting, select all devices you wish to group together. Click 'Save'
- Enter a group name of choice. Click Save.


You can now operate all devices within this group simultaneously.

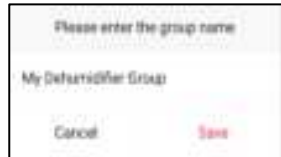

Ungroup your devices:

- Click on to pen icon within device group
- Select 'Dismiss Group'

You have now deleted your group.

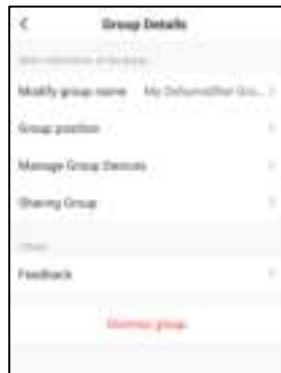

Submit app feedback

- If you come across an issue with your device or the app, or wish to submit feedback, please write a thorough description in the box provided.
- Choose the issue type from the dropdown menu, eg Device Issues.
- Enter your contact details and the time/date that the error occurred.
- Upload any relevant images



NOTE: As well as submitting feedback via the app, you can contact CDB Media Ltd on the contact details located on the back cover of this manual.

Operating your Dehumidifier from the APP




Device is Off



Device is On



'Target Humidity' icon

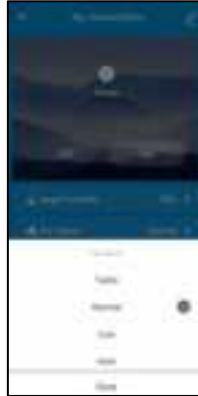

'Fan Speed' icon



'Mode' icon

Dehumidifier Operation Screen

- Tap the 'ON/OFF' icon to operate power

Target Humidity Function

- Tap the 'Target Humidity' Icon to amend the humidity setting. Choose between 30-80%. This function only operates in Dehumidity mode.
- When the set target humidity is lower than the relative humidity, the dehumidifier begins to operate.
- If the set target humidity is above the relative humidity the dehumidifier will be in standby mode and will not operate until the relative humidity increases above the set target humidity.

Fan Speed Function

- Tap the 'Fan Speed' icon to amend the fan speed. Choose between Turbo, Normal, Low and Auto.

Mode Function

- Tap the 'Mode' icon to amend the mode. Choose between Dehumidity, Heater, Air Purifier and Auto

Operating your Dehumidifier from the APP

Anion Function



- Tap the 'Anion' icon to turn ON or OFF. Anions or negative ions have strong absorption capabilities to absorb micro particles in the air to remove dust and bacteria.

Lamp function



- Tap the 'Lamp' icon to turn lamp ON or OFF.

UV function



- Tap the 'UV' icon to turn ON or OFF.

Sleep function



- Tap the 'Sleep' icon to turn ON or OFF.
- The Sleep Mode allows you to turn off the bright LED display panel. Press the Sleep button once to activate Sleep Mode, the button will illuminate and the unit will continue to operate, but the remainder of the LED display will turn off.
- If you would like to adjust the settings whilst in sleep mode, the app will allow you to do this without turning the display on. Press the relevant buttons to activate the desired settings.
- Press Sleep Mode button again to reset the LED control panel back to normal.

Lock function



- Tap the 'Lock' icon to turn ON or OFF.
- The lock function acts as a child lock and disables the control panel from use.

Target temperature



- Tap the 'target temperature' icon to amend target temperature using the '+' and '-' buttons.
- Choose between 16-30 degrees.



Operating your Dehumidifier from the APP

Schedule function

Schedule




The schedule in the APP has far more functionality than the dehumidifier control panel buttons.

- Tap 'Schedule' icon to set schedule and timer functions



Schedule edit screen

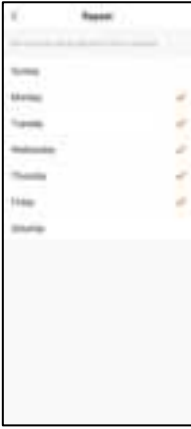


'REPEAT' icon



'POWER' icon



Schedule edit screen

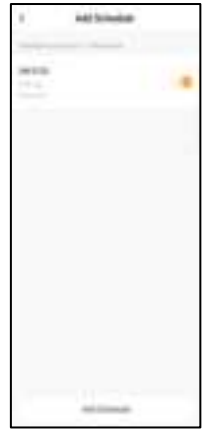

Schedule main screen

- Select your desired time on the Schedule edit screen
- Tap 'REPEAT' to select what days of the week you want the timer set for.

NOTE: Select as many days as you want, or if you want to set the timer as a one off, don't select any days.

- Tap 'POWER' to select whether you want the timer function to turn the dehumidifier ON or OFF
- Tap 'SAVE' on the Schedule edit screen to save your timer selection.
- To add another timer, select 'Add Schedule' and repeat the above process.

Note: Make sure the Smartphone or Tablet Clock that you are using has the right time you are providing from the connection network to the Internet. Possible delay or non-activation of the timer may be caused by an incorrect time setting on the device you are using.

Operating Your Dehumidifier

SAFETY DEVICES

This appliance has two protection devices:

- Resettable Thermal Link - this will automatically disconnect the power to the appliance at a pre-set overheat temperature. After cooling down it will reset and power on again. If this occurs, investigate what is causing the appliance to overheat.
- Thermal Fuse - this disconnects the appliance permanently in case of overheating. (It is non resettable).

CARE AND CLEANING

The dehumidifier requires regular cleaning to ensure trouble free operation:

- Unplug the dehumidifier from the mains supply before cleaning.
- Ensure that the dehumidifier has been allowed to cool down completely before cleaning.
- The common cause of overheating is deposits of dust or fluff in the appliance. Ensure these deposits are removed regularly by unplugging the appliance and vacuum cleaning the air vents and grills.

The air filter should also be cleaned regularly (every 2 weeks)

- The air-inlet may gather dust easily, please clean it often with a soft, damp cloth.
- If the filter is covered by dust, the airflow and the performance of the unit will be affected, it may even cause damage to the unit.
- We recommend that you regularly clean the filters.
- The dehumidifier must be disconnected from the socket before maintenance and the filters must be allowed to fully dry before re use.

- Remove the filters from the unit and tap the dust away.
- Clean the carbon , the HEPA and the mesh filter with a vacuum cleaner or soft-brush.
- If dirt and grease is accumulated wash the mesh filter only in hot soapy water.
- Replace the filters in position.

- Note: Never use the unit without the antibacterial mesh dust filter.

- The active carbon filter and HEPA filters should be replaced as necessary after 3-6 months of usage, depending upon the conditions of use.
- IMPORTANT: The **HEPA** and active carbon filters **CANNOT** be washed as they shall get damaged.

- **Unintended use of the appliance or damage to the housing may result in the escape of dangerous UV-C radiation. UV-C radiation may, even in small doses cause harm to the eyes and skin.**
- **Appliances that are obviously damaged must not be operated.**
- **The UV-C lamp is not user replaceable.**

Caring and Cleaning

CARE AND CLEANING CONTINUED...

- The water tank should be cleaned every few weeks to prevent growth of mould, mildew, and bacteria.
- Partially fill the tank with clean water and add a little mild detergent. Swish it around and then empty the tank and rinse.

To thoroughly clean and dry the tank, you can remove the handle and lid to gain access to the inside of the tank by following these instructions:



Move handle to this position



Detach the handle



Remove handle and water tank cover



You can now access inside of water tank

Note: After cleaning, drying, and reassembling the water tank, it must be reinserted securely into dehumidifier in order to restart operation.

STORAGE

If you plan on not using your dehumidifier for a long time, store your dehumidifier by following these instructions:

1. Switch off the unit and unplug it from the mains socket.
2. Empty and clean the water tank.
3. Clean the unit and the filters (Please refer to the Care and Cleaning Section).
4. Cover the unit and keep it in a dry place.

Troubleshooting

Problem	Possible Cause	Possible Solution
Both fan and compressor are not working.	No power to the unit.	Check the mains power supply. Check the control panel is switch to 'ON'.
Not collecting water.	Room temperature and humidity may be too low.	The dehumidifier will not operate if the room humidity is already below the level set.
	Air intake filter may be blocked.	Clean the filter of any obstructions.
Unit is making loud noise.	Floor may be uneven.	Re-position the unit on an even stable surface.
Leaking from the unit.	The water tank may not be installed correctly.	Remove the tank and re-fit correctly.
	Unit may have frozen.	Unplug the unit and allow the temperature to rise.

PROOF OF PURCHASE

To receive warranty retain receipt as proof of purchase.

TECHNICAL SPECIFICATION

Model No: GPDH480
 Supply: 220-240VAC 50Hz
 Max Rated Input Power: 710W
 Unit Capacity: 10L/day max (20°C/60%RH)
 Water Tank Capacity: 6.5L
 Sound Pressure Level: 45db(A)

SUPPORT AND TECHNICAL ADVICE



Goldair – New Zealand
 Monday – Friday 8am-5pm
 Phone +64 (0)9 917 4000
 Phone 0800 232 633
 info@cdb.co.nz

Goldair – Australia
 Monday – Friday 8am-5pm
 Phone +61 (0)3 9365 5100
 Phone 1300 465 324
 info@cdbgoldair.com.au



Three Year Warranty

Thank you for purchasing this Goldair Platinum product. Your product is warranted against faults and manufacture when used in normal domestic use for a period of **three years**. In non-domestic use Goldair limits the voluntary warranty to **three months**.

Goldair undertake to repair or replace this product at no charge if found to be defective due to a manufacturing fault during the warranty period.

This warranty excludes damage caused by misuse, neglect, shipping accident, incorrect installation, or work carried out by anyone other than a qualified electrical service technician.

PLEASE KEEP YOUR RECEIPT AS THIS WILL HELP VERIFY YOUR WARRANTY.

The benefits given to you by this warranty are in addition to other rights and remedies available to you under law in relation to the goods or services to which this warranty relates.

In Australia, our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

In New Zealand this warranty is additional to the conditions and guarantees of the Consumers Guarantee Act (1993).

Goldair – New Zealand

CDB Goldair
PO Box 100-707
N.S.M.C
Auckland

Phone +64 (0)9 917 4000
Phone 0800 232 633
www.goldair.co.nz

Goldair – Australia

CDB Goldair Australia Pty
PO Box 574
South Morang
Victoria, 3752

Phone +61 (0)3 9365 5100
Phone 1300 GOLDAIR (1300 465 324)
www.goldair.com.au

Goldair Three Year Warranty (IMPORTANT: Please complete and retain this warranty card)

Name _____

Address _____

Place Of Purchase _____ Date Of Purchase _____

Name Of Product _____ Model Number _____

Attach a copy of the purchase receipt to this warranty card

GoldairSM PLATINUM



CDB  GoldairSM

New Zealand
PO Box 100707,
North Shore Mail Centre,
Auckland, 0745
www.goldair.co.nz

Australia
PO Box 574,
South Morang,
Victoria, 3752
www.goldair.com.au