

Hamilton Beach®

ella

COLLECTION

2-Slice Toaster Matt Finish

INSTRUCTIONS

HBT1322MB

HBT1322MC

HBT1322MW



THANK YOU

For purchasing the Hamilton Beach Ella 2-Slice Toaster



REGISTER YOUR PURCHASE



hamiltonbeach.co.uk/registermywarranty



Scan QR code using mobile device

WARRANTY REGISTRATION

To register your purchase please visit hamiltonbeach.co.uk/registermywarranty or call 01274 752624 to register your new Hamilton Beach product within 30 days of purchase. You will be asked to provide the store you purchased from, model number, along with your name and address.

The registration will enable us to contact you in the unlikely event of a product safety notification. You can find more detail about guarantee and service on page. 8.

CONTENTS

Product Registration	1
Specifications	2
Important Safeguards	3
Cautions	4
Components	4
Using Your Appliance	5
Cleaning and Maintenance	6
Disposing of the Appliance	6
Customer Service	7
Guarantee and Service	8

SPECIFICATIONS

Power Consumption:	220-240V~ ,50-60Hz
Power:	800W
Capacity:	2 Slices
Product Dimensions (cm):	19 (H) x 19.5 (W) x 30(L)
Net Weight:	Approx. 1.92 kg

IMPORTANT SAFEGUARDS



Read all instructions before use. When using electrical appliances, basic safety precautions should ALWAYS be followed including the following:

1. This appliance is intended for domestic use only, it should not be used for commercial purposes.
2. Before connecting the toaster to the power supply, check that the voltage indicated on the appliances rating label corresponds with the voltage in your home. If this is not the case, contact customer services and stop using the toaster.
3. DO NOT let the cord hang over the edge of a table or counter, or allow to touch a hot surface.
4. To protect against fire, electric shock or personal injury; DO NOT immerse cord, electric plugs or the kettle in water or any other liquids.
5. DO NOT place on or near a hot gas or electric burner or in a heated oven.
6. Ensure that the toaster is used on a firm, flat and secure surface - out of reach of children, to avoid damage or injury.
7. This appliance is suitable for children aged 8 years and older and individuals with reduced physical, sensory, or mental abilities or limited experience, may use it under supervision with proper instructions to ensure safety.
8. Children should be supervised to ensure they do not play with the appliance.
9. DO NOT touch the hot surface. Make sure you use the handles or knobs.
10. DO NOT use outdoors. The toaster is for household use only.
11. The use of accessories, which are not recommended by the manufacturer, may result in fire, electric shock or personal injury.
12. ALWAYS unplug the toaster from the power source, when not in use and allow to cool before cleaning.
13. If the supply cord is damaged, it must be replaced by the manufacturer or serviced by a qualified electrician to avoid a hazard.
14. Bread may burn, therefore toasters must not be used near or below curtains and other combustible materials.
15. Oversized food, metal foil packages or utensils must not be inserted in the toaster as they may cause fire or electric shock.
16. DO NOT attempt to dislodge food when the toaster is in operation.
17. WARNING: Potential burning risk. Bread slices less than 85mm in length, need particular attention, when being removed from the toaster.

CAUTIONS

Before using your toaster for the first time, be sure to:

Remove all protective wrapping and packaging prior to toasting.

If toaster starts to smoke, turn the knob to the left to stop toasting.

Avoid using food with runny ingredients such as butter.

Never attempt to remove jammed bread in the slot, without unplugging the toaster from the power source first. Take care not to damage the internal mechanism or heating elements when removing stuck bread.

The bread slots are only suitable for toasting regular bread slices.

COMPONENTS



1 Colour Control Knob

2 Removable Crumb Tray

3 Cancel Button

4 Defrost Button

5 Reheat Button

6 Bread Slot

7 Carriage Handle

USING YOUR APPLIANCE

Before using your toaster for the first time, be sure to:

If you are using the toaster for the first time, please note that there may be manufacturing residue or oil in the toasters heating element, it may emit odour during the first use. This is normal and should not occur after a few uses.

USING YOUR TOASTER:

Make sure the removable crumb tray is fully inserted before use.

Plug the power cord into the power outlet.

Place desired number of slices of bread into the slots. (Two slices is the most)

Set the colour control knob to your desired setting. There are 7 levels of browning to choose from. For first use, choose '4' for an average setting and adjust accordingly.

PLEASE NOTE: Colour setting must be adjusted before toasting. It should not be adjusted during baking.

5. Press the carriage handle down vertically until it is positioned in place. Once the bread has been toasted to desired colour, the carriage handle will automatically spring up and you can remove the slices of toast.
6. During the toasting process, you may observe the toasting colour by cancelling the cycle at anytime.
7. If you want to toast bread from frozen - set colour knob to desired setting and press carriage handle down. Then press DEFROST button and the indicator will illuminate and begin to toast.
8. If you want to reheat cold toasted bread - turn the knob to the heating position and press the carriage handle down. In this setting the toasting time is fixed, when it has finished the carriage handle will automatically spring up and end the reheating process.

CLEANING & MAINTENANCE

Always disconnect the appliance from the power outlet and allow it to cool down completely before cleaning.

Never immerse the toaster or power cord in water - or allow moisture to get in contact with these parts.

Wipe the exterior of the toaster body with a clean, damp cloth - NEVER use an abrasive or poisonous cleaner.

Pull the removable crumb tray at the bottom of the toaster out and empty it. It is recommended to do this at least once a week.

When the toaster is not in use, and stored away, the power cord may be wound around the base of the toaster.

DISPOSING OF THE APPLIANCE

Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately.

Please visit www.recycle-more.co.uk or www.recyclenow.co.uk for access to information about the recycling of electrical items.

Please visit www.weeeireland.ie for access to information about the recycling of electrical items purchased in Ireland.

The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill. Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.

Correct Disposal of this Product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

If you have any questions or concerns about your new product, please contact our helpful Customer Support Team:



01274 752624



customerservice@hamiltonbeach.co.uk



www.hamiltonbeach.co.uk

Please have your Model No. available. This can be found on the front cover of this instruction manual and on the appliance's rating label.

Love your purchase?
Please leave us a review!



The user manual can also be downloaded from our website:
www.hamiltonbeach.co.uk

GUARANTEE AND SERVICE



REGISTER YOUR PURCHASE



hamiltonbeach.co.uk/registermywarranty



Scan QR code using mobile device

To make a warranty claim, do not return this appliance to the store.

Please call **01274 752624** or email **customerservice@hamiltonbeach.co.uk**. For faster service, locate the model number on the rating label on your appliance. Alternatively, **please scan the QR code above** to be directed to our warranty registration page.

This product is covered by a 12-month warranty, please read the guarantee and service carefully and keep for future use.

Please Note: To maintain the validity of the warranty, it is imperative to register it within the initial 30 days of purchase. Any registration made beyond this time frame will result in the warranty being deemed void.

This warranty applies to products purchased and used in the UK. This is the only express warranty for this product and is in lieu of any other warranty or condition.

This product is warranted to be free from defects in material and workmanship for a period from the date of original purchase; this time frame can vary based on the product. Please refer to our product pages or contact our customer service team if you are unsure of the duration of the products warranty period. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us and our returning a product or component under this warranty to you. If the product or component is no longer available, we will replace with a similar one of equal or greater value.

This warranty does not cover glass, filters, wear from normal use, not in conformity with the printed directions, or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as specified on the rating label (e.g., 120V ~ 60 Hz). We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty.

cook with **confidence**

Trusted quality for over 100 years.

Discover the innovative and dependable products that have made Hamilton Beach a trusted name since 1910.

We make your cooking experience easier.

Join our community!

Follow us for news, recipe ideas, offers and tips...



[@hamiltonbeachuk](https://www.instagram.com/hamiltonbeachuk)

www.hamiltonbeach.co.uk



Hamilton Beach
Belfry House, Roydsdale Way
Bradford, BD4 6SU
01274 752624
www.hamiltonbeach.co.uk

Illustrations may differ from actual product. We are consistently striving to improve our products, therefore all specifications contained herein are subject to change without notice.

©2023 Hamilton Beach® Brands, Inc. Trademarks by Hamilton Beach® Brands, Inc. All rights reserved. Hamilton Beach® is a registered trademark of Hamilton Beach Brands, Inc. used under license by EPE International Limited.

The user manual can also be downloaded from our website.

