

# Harley Benton

## Bass Camp

### Quick Start Guide

This quick start guide contains important information on the safe operation of the product. Read and follow the safety advice and instructions given. Retain the quick start guide for future reference. If you pass the product on to others please include this quick start guide.

### Safety instructions

#### Intended use

This device is intended for use as effects pedal for electric bass guitars. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damages resulting from improper use.

#### Danger for children



Ensure that plastic bags, packaging, etc. are disposed of properly and are not within reach of babies and young children. Choking hazard! Ensure that children do not detach any small parts from the product. They could swallow the pieces and choke!

#### Where to use the product

Never use the product

- in conditions of extreme temperature or humidity
- in extremely dusty or dirty areas
- at locations where the unit can become wet

#### General handling


- To prevent damage, never use force when handling the product.
- Never immerse the product in water. Just wipe it with a clean dry cloth. Do not use liquid cleaners such as benzene, thinners or flammable cleaning agents.

### Features

- Dual effects pedal for electric bass guitars
- The effect modules A and B can be used simultaneously or individually and in any order
- Analogue dynamic bandpass filter with funk style (effect module A)
- Classic, analogue chorus (effect module B)
- True Bypass when device is powered off
- Buffer Bypass when device is connected to power supply
- 3-way switch for effects order
- Foot switches with LED indicators
- Power supply via 9V power adapter (not included, suitable optional power adapter: item no. 409939, no battery operation)

### Operating elements

- 9V power adapter socket for connecting a power adapter (not included)
- RANGE Rotary control for adjusting the frequency range in Clean mode and Fuzz mode of the bass filter
- Clean/Fuzz Switch for selecting the tone mode of the bass filter  
*Clean:* clean sound  
*Fuzz:* singing, sawing sound
- RESO Rotary control for adjusting the resonance of the bass filter
- HIGH Rotary control for adjusting the intensity of the bass filter
- INPUT 1/4" jack socket for connecting instruments
- Bass Filter Foot switch for switching on/off the bass filter
- Bass Chorus Foot switch for switching on/off the Chorus effect
- OUTPUT 1/4" jack socket for connecting an amplifier
- RATE Rotary control for adjusting the tone rate of the Chorus effect
- Switch for selecting the operation mode
  - A - B The bass filter and the Chorus effect can simultaneously be enabled. The signal will go through the bass filter and then to the Chorus effect.
  - A or B Either the bass filter or the Chorus effect can be enabled.
  - B - A The Chorus effect and the bass filter can simultaneously be enabled. The signal will go through the Chorus effect and then to the bass filter effect.
- LEVEL Rotary control for adjusting the volume of the Chorus effect
- tone color of the Chorus effect
- DEPTH Rotary control for adjusting the depth of the Chorus effect

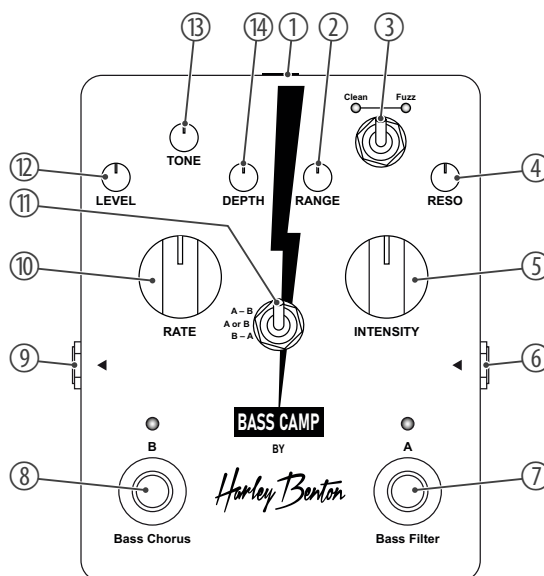

### Technical specifications

- |                      |                                                                         |                          |                                                                                     |
|----------------------|-------------------------------------------------------------------------|--------------------------|-------------------------------------------------------------------------------------|
| • Input connections  | 1/4" jack socket<br>Socket for connecting a power adapter               | • Dimensions (W x H x D) | 95 mm x 37 mm x 120 mm                                                              |
| • Output connections | 1/4" jack socket                                                        | • Weight                 | 322 g                                                                               |
| • Power supply       | External power adapter, 100 - 240 V ~ 50/60 Hz                          | • Ambient conditions     | Temperature range 0 °C...40 °C<br>Relative humidity 20 %...80 %<br>(non-condensing) |
| • Power adapter      | Current draw 200 mA<br>Operating voltage 9V<br>Polarity centre negative |                          |                                                                                     |



For the transport and protective packaging, environmentally friendly materials have been chosen that can be supplied to normal recycling. Ensure that plastic bags, packaging, etc. are properly disposed of. Do not just dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the notes and markings on the packaging.



This product is subject to the European Waste Electrical and Electronic Equipment Directive (WEEE) in its currently valid version. Do not dispose of your old device with your normal household waste. Dispose of this product through an approved waste disposal firm or through your local waste facility. Comply with the rules and regulations that apply in your country. If in doubt, consult your local waste disposal facility.