



SKU # 1007 599 760
 Model # 22RT19922141

ASSEMBLY INSTRUCTIONS

3-Piece Ice Shimmer LED Snowman Family

USE AND CARE GUIDE

PLANNING ASSEMBLY

Carefully remove all the parts from the box and place them on the ground. Many parts are connected by the lighting string that runs throughout the item. Take special care not to pull, cut or damage the lighting string. Read the entire manual prior to assembly and identify all the parts included in the package against the parts list. It is recommended to assemble parts of the product while laying flat on the ground or a table versus standing the item up to assemble the parts. If any parts are missing or damaged do not attempt assembly but contact our customer service center or return to place of purchase with purchase receipt.

Assembly of this product may require more than one person.
 1-855-HDHoliday (1-855-434-6543)

Pre-Operation

CAUTION: Grasp the plug to insert or remove from the power source. Do not unplug by pulling on cord.

CAUTION: The lighting string on this product is rated at 12 Watts (0.1 Amps). Do not overload. Do not connect to another lighting string, decorative outfit or other electrical products. Before you use or re-use this product inspect it carefully. Discard or return to place of purchase with purchase receipt if the product has cuts, damage, frayed wire insulation on cords, cracks in the socket enclosures, loose connections, exposed copper wire or other obvious damage.

Care and Cleaning

- Carefully remove the product from wherever it is placed. This helps to avoid any undue strain or stress on the product connections, and wires. If the product is placed somewhere other than the ground it should be well secured, flat and stable.
- Carefully disassemble the unit taking caution not to cut any electrical wires.
- Wipe the unit with a damp cloth and allow the unit to dry before storing.
- Store the product neatly in a cool, dry location protected from sunlight.

Troubleshooting

- Ensure that the ground or surface that the item sits on is flat and level
- Be sure to plug the item correctly to a wall outlet or a UL Listed Power Cord
- Ensure all parts are assembled properly per the Instruction Manual
- If the item does not light check for loose or broken bulbs and connections
- Do not plug into other electrical items
- If the item has multiple Light String Cords be sure to plug in all cords
- Check for Broken or Burned Out Fuse In Plug

Guarantee

What is Covered

The product is intended for residential seasonal use for 90 days maximum per year. This product is covered by a 90 days limited guarantee due to defects in material and workmanship. Return the product with purchase receipts to the location of purchase for refund within 90 days of purchase.

What is Not Covered

This warranty does not cover commercial use, normal wear and tear, products not used in accordance with directions provided on or with the product, burn out of bulbs or LEDs, batteries, products that have been subjected to unauthorized repair and/or modification and damage caused by shipping and improper handling, alterations, misuse, in store display models or accidents. Questions, problems, missing parts? Before returning to the store, call Home Accents Holiday Customer Service 8 a.m.-6 p.m., EST, Monday-Friday 1-855-HDHoliday (1-855-434-6543)



Thank you!


We appreciate the trust and confidence you have placed in Home Accents through the purchase of this 3-Piece Ice Shimmer LED Snowman Family. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Home Accents!

1-855-HDHoliday (1-855-434-6543)
HOMEACCENTSHOLIDAY.COM

Parts List		
Locater	Name	Qty.
A	Hat of Mother Snowman	1
B	Head of Mother Snowman	1
C	Arm of Mother Snowman	2
D	Upper Half of Mother Snowman's Body	2
E	Lower Half of Mother Snowman's Body	2
F	Hat of Child Snowman	1
G	Head of Child Snowman	1
H	Arm of Child Snowman	2
I	Half of Child Snowman's Body	2
J	Hat of Father Snowman	1
K	Head of Father Snowman	1
L	Arm of Father Snowman	2
M	Upper Half of Father Snowman's Body	2
N	Lower Half of Father Snowman's Body	2
O	Scarf	3

Hardware List		
Locater	Name	Qty.
P	Spare Bulb	6
Q	Spare Fuse	6
R	Plastic Tie	40
S	Ground Stake	12


Diagram of Parts

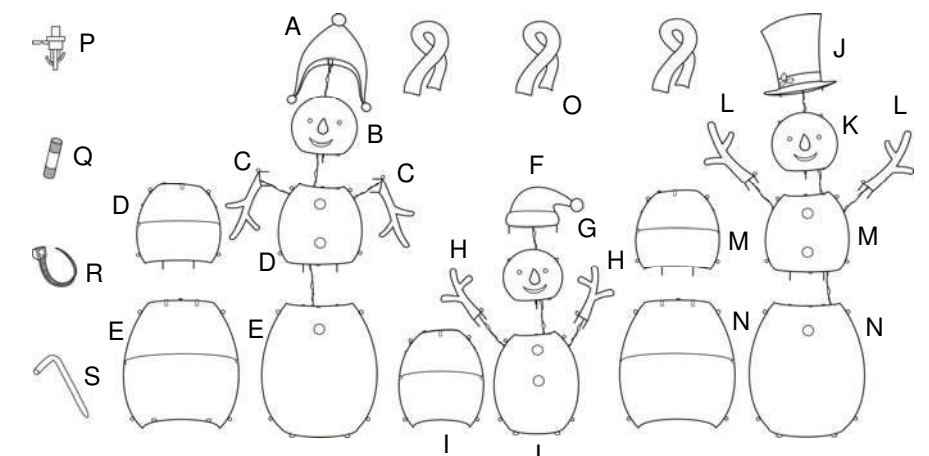

ASSEMBLY


1 Assembling the Upper & Lower Body of Mother Snowman

Align the two Halves of Upper Body (D) and the two Halves of Lower Body (E) with each other then insert the connecting rods on one half into the connecting holes on the other half. Insert the connecting rods on the bottom of Upper Body (D) into the connecting holes at the top of the Lower Body (E) and fasten together at the connecting loops with Plastic Ties (R).

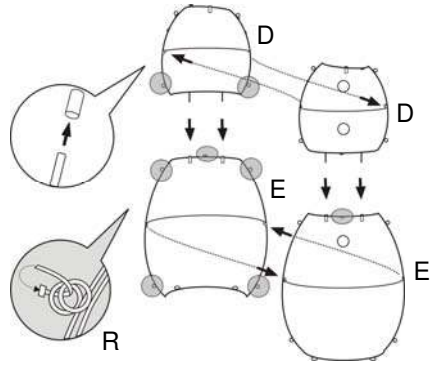


2 Assembling the Head/Hat/Arms of Mother Snowman

Insert the connecting rods at the bottom of Head (B) into the connecting holes at the top of the Upper Body (D). Insert the connecting rods at the bottom of the Hat (A) into the connecting holes at the top of Head (B). Insert the connecting rods on the Arms (C) into the matching connecting holes on the Body (D) and fasten at the connecting loops with Plastic Ties (R).

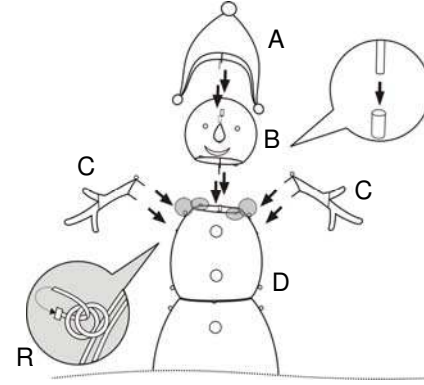


3 Assembling the Body of the Child Snowman

Align the two Halves of Body (I) with each other then insert the connecting rods on one half into the connecting holes on the other half and fasten at the connecting loops with Plastic Ties (R).

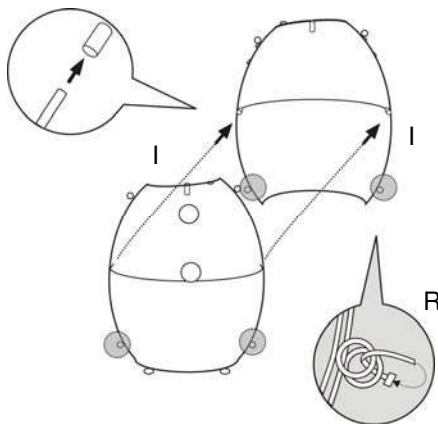


4 Assembling the Head/Hat/Arms of Child Snowman

Insert the connecting rods at the bottom of Head (G) into the connecting holes at the top of the Body (I). Insert the connecting rods at the bottom of Hat (F) into the connecting holes at the top of Head (G). Insert the connecting rods on the Arms (H) into the matching connecting holes on the Body (I) then fasten at the connecting loops with Plastic Ties (R).

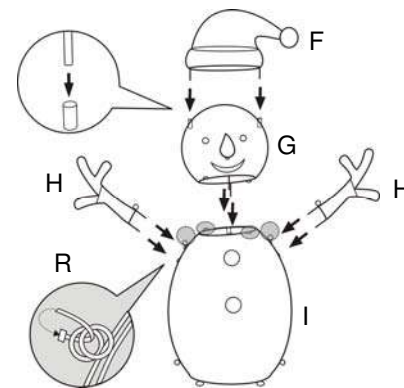


5 Assembling the Upper & Lower Body of Father Snowman

Align the two Halves of Upper Body (M) and the two Halves of Lower Body (N) with each other then insert the connecting rods on one half into the connecting holes on the other half. Insert the connecting rods at the bottom of the Upper Body (M) into the connecting holes at the top of the Lower Body (N) and fasten together at the connecting loops with Plastic Ties (R).

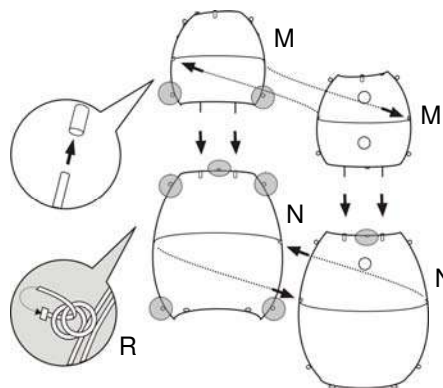


6 Assembling the Head/Hat/Arms of Father Snowman

Insert the connecting rods at the bottom of Head (K) into the connecting holes at the top of the Upper Body (M). Insert the connecting rods at the bottom of Hat (J) into the connecting holes at the top of Head (K). Insert the connecting rods on the Arms (L) into the matching connecting holes on the Body (M) and fasten at the connecting loops with Plastic Ties (R).

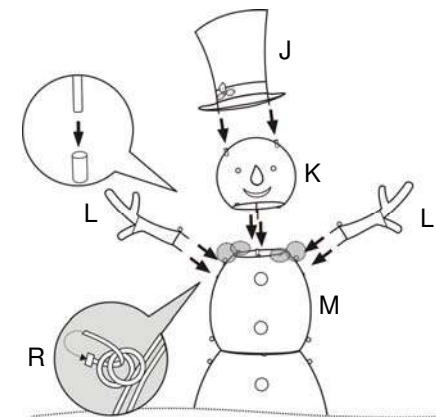

7 Assembling the Scarves

Wrap the Scarves (O) around the neck of three snowmen for your desired look. Hint: Use the image on this sheet as a reference.

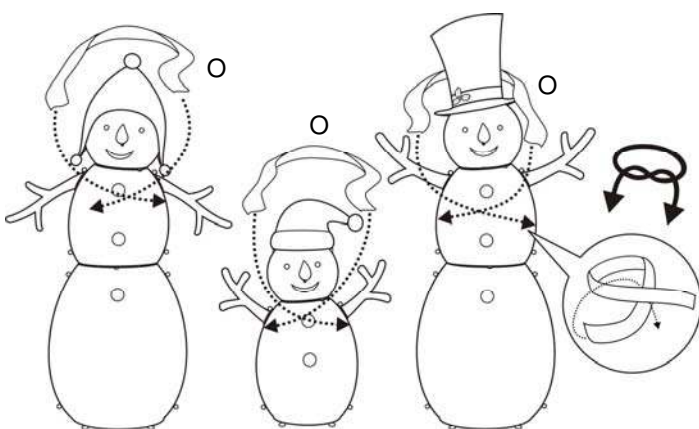

8 Assembling the Ground Stakes

Insert the Ground Stakes (S) over the metal frame at the four ground connecting loops on each of the Snowmen's bottom then into the ground firmly.

