



SKU # 1006 224 646  
 Model # 21RT45820112

# ASSEMBLY INSTRUCTIONS

## 3-Piece Polar Wishes LED Gold Deer Scene

### USE AND CARE GUIDE

#### PLANNING ASSEMBLY

Carefully remove all the parts from the box and place them on the ground. Many parts are connected by the lighting string that runs throughout the item. Take special care not to pull, cut or damage the lighting string. Read the entire manual prior to assembly and identify all the parts included in the package against the parts list. It is recommended to assemble parts of the product while laying flat on the ground versus standing the item up to assemble the parts. If any parts are missing or damaged do not attempt assembly but contact our customer service center or return to the place of purchase with purchase receipt. 1-855-HDHoliday (1-855-434-6543)

\*Assembly of this product may require more than one person.

#### Pre-Operation

**CAUTION:** Grasp the plug to insert or remove from the power source. Do not unplug by pulling on cord.

**CAUTION:** The lighting string on this product is rated at 12 Watts (0.1 Amps). Do not overload. Do not connect to another lighting string, decorative outfit or other electrical products. Before you use or re-use this product inspect it carefully. Discard or return to place of purchase with purchase receipt if the product has cuts, damage, frayed wire insulation on cords, cracks in the socket enclosures, loose connections, exposed copper wire or other obvious damage.

#### Care and Cleaning

- Carefully remove the product from wherever it is placed. This helps to avoid any undue strain or stress on the product connections and wires. If the product is placed somewhere other than the ground it should be well secured and flat.
- Carefully disassemble the unit taking caution not to cut any electrical wires.
- Wipe the unit with a damp cloth and allow the unit to dry before storing.
- Store the product neatly in a cool, dry location protected from sunlight.

#### Troubleshooting

- Ensure that the floor, ground or surface that the item sits on is flat and level
- Be sure to plug the item correctly to a wall outlet or a UL Listed Power Cord
- Ensure all parts are assembled properly per the Instruction Manual
- If the item does not light check for loose or broken bulbs and connections
- Do not plug into other electrical items
- If the item has multiple Light String Cords be sure to plug in all cords
- Check for Broken or Burned Out Fuse In Plug

### Guarantee

#### What is Covered

The product is intended for residential seasonal use for 90 days per year. This product is covered by a 90 days limited guarantee due to defects in material and workmanship. Return the product with purchase receipts to the location of purchase for refund within 90 days of purchase.

#### What is Not Covered

This warranty does not cover commercial use, normal wear and tear, products not used in accordance with directions provided on or with the product, burn out of bulbs or LEDs, batteries, products that have been subjected to unauthorized repair and/or modification and damage caused by shipping and improper handling, alterations, misuse, in store display models or accidents. Questions, problems, missing parts? Before returning to the store, call Home Accents Holiday Customer Service 8 a.m.-6 p.m., EST, Monday-Friday 1-855-HDHoliday (1-855-434-6543)



#### Thank you!


We appreciate the trust and confidence you have placed in Home Accents through the purchase of this 3-Piece Polar Wishes LED Gold Deer Scene. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Home Accents!

1-855-HDHoliday (1-855-434-6543)  
 HOMEACCENTSHOLIDAY.COM

Parts List		
Locater	Name	Qty.
A	Antler of Deer	2
B	Ear of Deer	2
C	Head/Neck of Deer	1
D	Body of Deer	1
E	Front Leg of Deer	2
F	Hind Leg of Deer	2
G	Tail of Deer	1
H	Head/Neck of Doe	1
I	Ear of Doe	2
J	Body of Doe	1
K	Front Leg of Doe	2
L	Hind Leg of Doe	2
M	Tail of Doe	1
N	Head/Neck of Baby Deer	1
O	Ear of Baby Deer	2
P	Body of Baby Deer	1
Q	Tail of Baby Deer	1
R	Bow Tie	3

Hardware List		
Locater	Name	Qty.
S	Spare Bulb	5
T	Spare Fuse	6
U	Plastic Tie	30
V	Ground Stake	12


#### Diagram of Parts

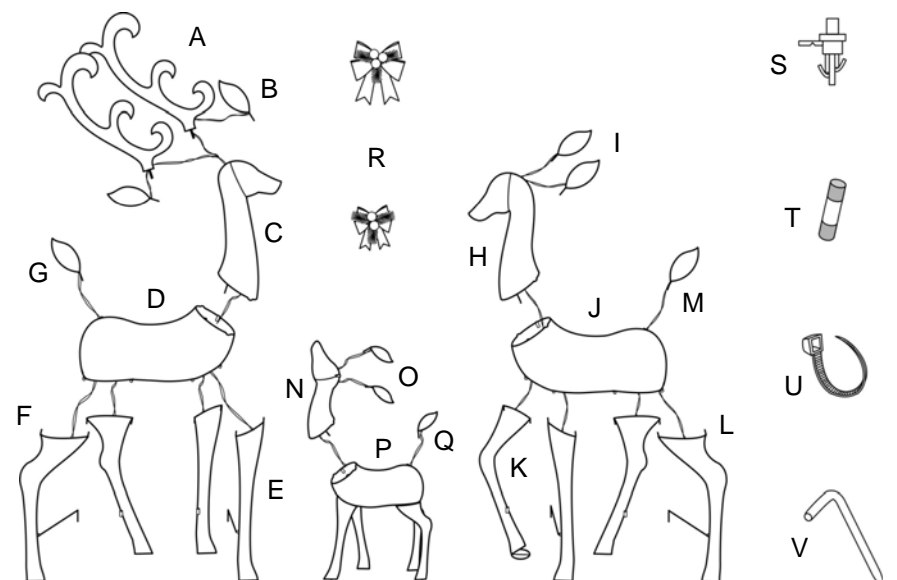

# ASSEMBLY


## 1 Assembling the Legs to Body of Deer

Insert the connecting rods on the Front and Hind Leg of Deer (E,F) into the connecting holes on the underside of the Body of Deer (D) and fasten over the metal frame with Plastic Ties (U). The Legs come with metal bars attached to stabilize the Deer. Insert the hooked end of the metal bars into the metal hole on the opposite Leg.

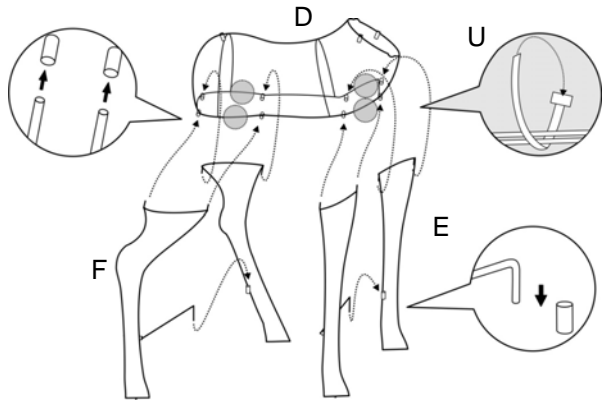


## 2 Assembling the Head/Neck to Body of Deer

Insert the connecting rods on the bottom of the Head/Neck of Deer (C) into the connecting hole on the front of the Body of Deer (D) and fasten at the connecting loops with Plastic Ties (U).

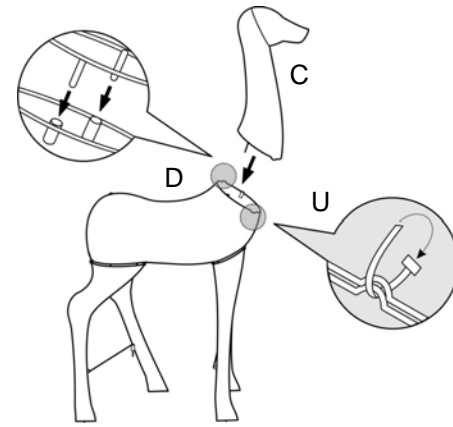


## 3 Assembling the Antlers, Ears & Tail to Body of Deer

Insert the connecting rods on both Antlers and Ears (A,B) into the matching connecting holes at the top of Head/Neck of Deer (C). [Note: The ears go to the outside of the Antlers]. Insert the connecting rod on the Tail (G) into the connecting hole at the rear of Body (D).

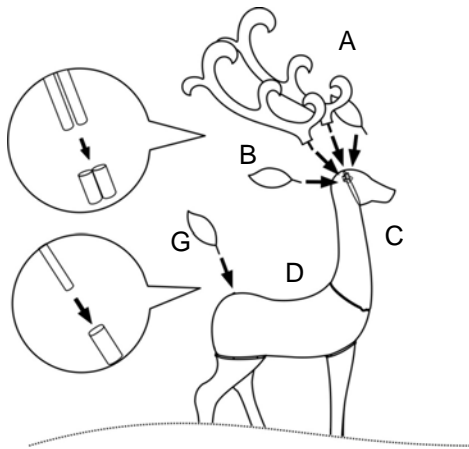


## 4 Assembling the Ears to Head/Neck & Tail to Body of Baby Deer

Insert the connecting rods on the Head/Neck of Baby Deer (N) into the connecting holes on the Body of Baby Deer (P) and fasten at the connecting loops with Plastic Ties (U). Insert the connecting rods on both Ears of Baby Deer (O) into the connecting holes on Head/Neck of Baby Deer (N). Insert the connecting rod on the Tail of Baby Deer (Q) into the connecting hole at the rear of the Body of Baby Deer (P).

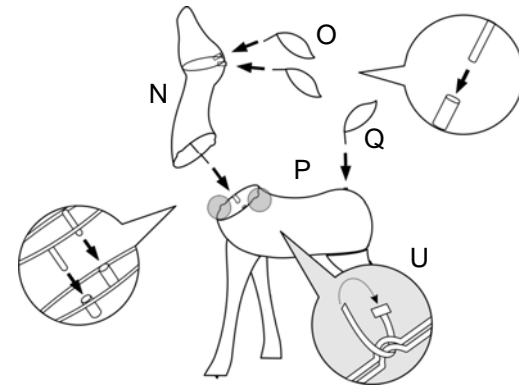


## 5 Assembling the Legs to Body of Doe

Insert the connecting rods on the Front and Hind Legs of Doe (K,L) into the connecting holes on the underside of Body of Doe (J) and fasten over the metal frames with Plastic Ties (U). The Legs come with metal bars attached to stabilize the Doe. Insert the hooked end of the metal bars into the metal hole on the opposite Leg.

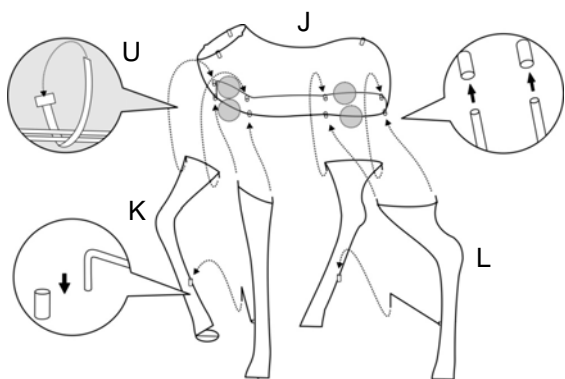


## 6 Assembling the Ears to Head/Neck & Tail to Body of Doe

Insert the connecting rods on the Head/Neck of Doe (H) into the connecting holes on the Body of Doe (J) and fasten at the connecting loops with Plastic Ties (U). Insert the connecting rods on both Ears of Doe (I) into the connecting holes on the Head/Neck of Doe (H). Insert the connecting rod on the Tail of Doe (M) into the connecting hole at the rear of Body of Doe (J).

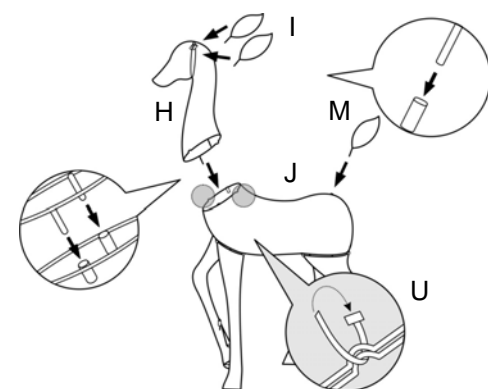

## 7 Assembling the Bow Ties

Insert the wires on the backside of the Bow Ties (R) through the material on the bodies then twist the wires together to secure.

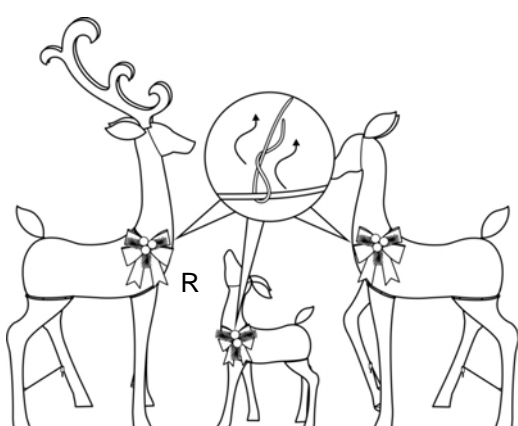

## 8 Assembling the Ground Stakes

Place the Ground Stakes (V) over the metal frame at each hoof of the Deer, Doe and Baby Deer then into the ground.

