



SKU # 1007 581 512  
Model # 22RT1932214

# ASSEMBLY INSTRUCTIONS

## 48in LED 70 Light Warm White Gift Stacking Snowman

### USE AND CARE GUIDE

#### PLANNING ASSEMBLY

Carefully remove all the parts from the box and place them on the ground. Many parts are connected by the lighting string that runs throughout the item. Take special care not to pull, cut or damage the lighting string. Read the entire manual prior to assembly and identify all the parts included in the package against the parts list. It is recommended to assemble parts of the product while laying flat on the ground or table versus standing the item up to assemble the parts. If any parts are missing or damaged do not attempt assembly but contact our customer service center or return to place of purchase with purchase receipt.

Assembly of this product may require more than one person.  
1-855-HDHoliday (1-855-434-6543 )

#### Pre-Operation

**CAUTION:** Grasp the plug to insert or remove from the power source. Do not unplug by pulling on cord.

**CAUTION:** The lighting string on this product is rated at 4.8 Watts (0.04 Amps). Do not overload. Do not connect to another lighting string, decorative outfit or other electrical products. Before you use or re-use this product inspect it carefully. Discard or return to place of purchase with purchase receipt if the product has cuts, damage, frayed wire insulation on cords, cracks in the socket enclosures, loose connections, exposed copper wire or other obvious damage.

#### Care and Cleaning

- Carefully remove the product from wherever it is placed. This helps to avoid any undue strain or stress on the product connections, and wires. If the product is placed somewhere other than the ground it should be well secured, flat and stable.
- Carefully disassemble the unit taking caution not to cut any electrical wires.
- Wipe the unit with a damp cloth and allow the unit to dry before storing.
- Store the product neatly in a cool, dry location protected from sunlight.

#### Troubleshooting

- Ensure that the floor or surface that the item sits on is flat and level
- Be sure to plug the item correctly to a wall outlet or a UL Listed Power Cord
- Ensure all parts are assembled properly per the Instruction Manual
- If the item does not light check for loose or broken bulbs and connections
- Do not plug into other electrical items
- If the item has multiple Light String Cords be sure to plug in all cords
- Check for Broken or Burned Out Fuse In Plug

### Guarantee

#### What is Covered

The product is intended for residential seasonal use for 90 days per year. This product is covered by a 90 days limited guarantee due to defects in material and workmanship. Return the product with purchase receipts to the location of purchase for refund within 90 days of purchase.

#### What is Not Covered

This warranty does not cover commercial use, normal wear and tear, products not used in accordance with directions provided on or with the product, burn out of bulbs or LEDs, batteries, products that have been subjected to unauthorized repair and/or modification and damage caused by shipping and improper handling, alterations, misuse, in store display models or accidents. Questions, problems, missing parts? Before returning to the store, call Home Accents Holiday Customer Service 8 a.m.-6 p.m., EST, Monday-Friday 1-855-HDHoliday (1-855-434-6543)



#### Thank you!


We appreciate the trust and confidence you have placed in Home Accents through the purchase of this 48in LED 70 Light Warm White Gift Stacking Snowman. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Home Accents!

1-855-HDHoliday (1-855-434-6543)  
HOMEACCENTSHOLIDAY.COM

Parts List		
Locater	Name	Qty.
A	Hat / Head	1
B	Body	1
C	Arm	2
D	Leg / Foot	2
E	Bottom and Middle Gift Box	1
F	Top Gift Box	1
G	Base Stand	1
H	Support Bar	1

Hardware List		
Locater	Name	Qty.
I	Cotter Pin	2
J	Spare Bulb	4
K	Spare Fuse	4
L	Plastic Tie	15
M	Ground Stake	4


#### Diagram of Parts

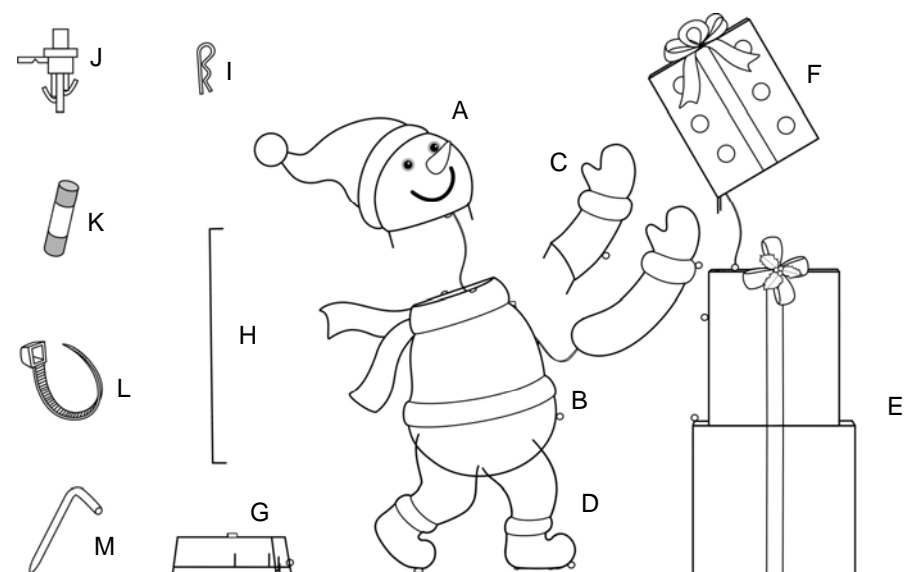

# ASSEMBLY


## 1 Assembling the Head to Body

Insert the connecting rods on the bottom of Head (A) into connecting holes on the top of the Body (B) then fasten together at the connecting loops with the Plastic Ties (L).

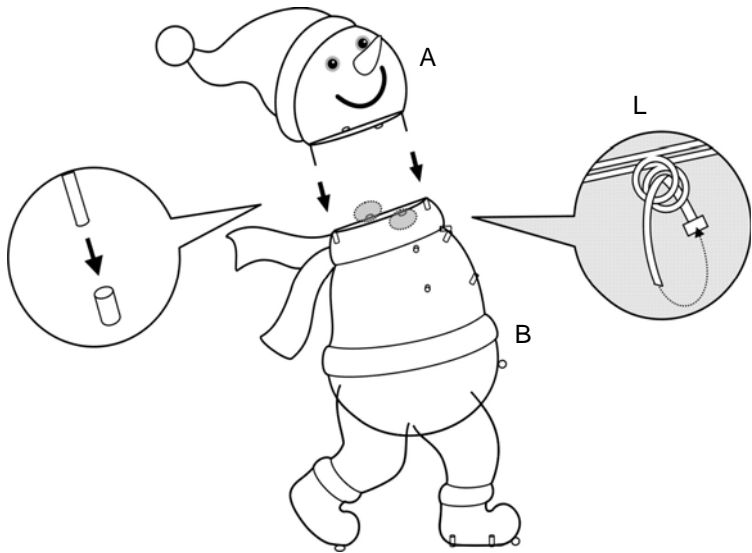


## 2 Assembling the Snowman to Base Stand

Insert the connecting rods on the Base Stand (G) into connecting holes on the bottom of the Leg / Foot (D) then fasten together at the connecting loops with the Plastic Tie (L).

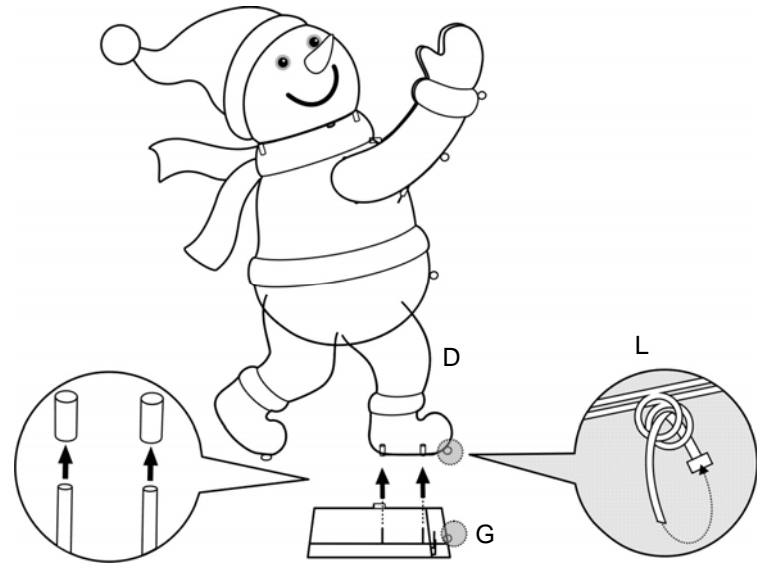


## 3 Assembling the Support Bar

Insert each hooked end of the Support Bar (H) into the matching connecting holes on the back of the Body (B) and the Base Stand (G) then secure with the Cotter Pins (I).

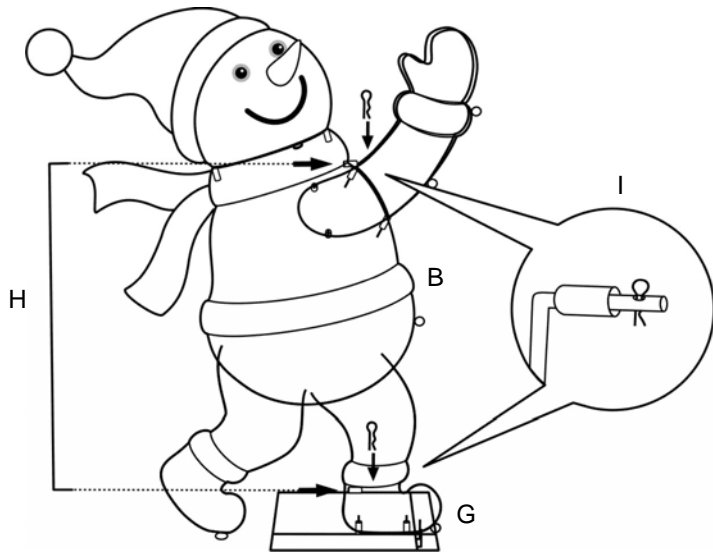


## 4 Assembling the Gift Box

Insert the connecting rods on the bottom of the Top Gift Box (F) into the connecting holes on the top of the Middle Gift Box (E). Insert the connecting rod of Base Stand (G) into the connecting hole on the bottom of Bottom Gift Box (E) then secure at the connecting loops of Snowman's Body (B) and Gift Box (E) with Plastic Tie (L).

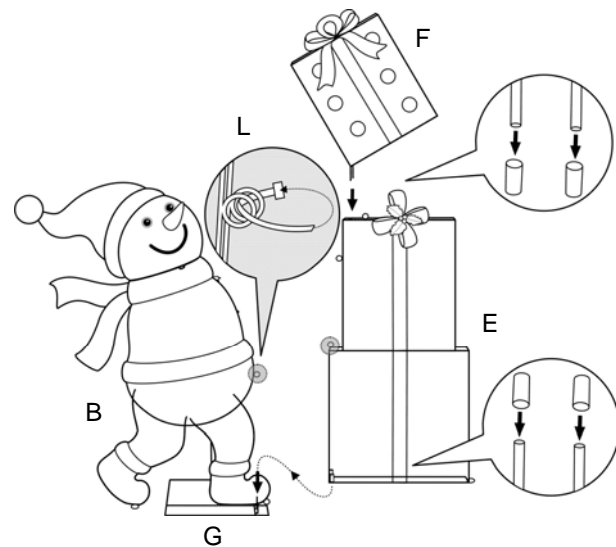

## 5 Assembling the Arms

Insert the connecting rods on each Arm (C) into the matching connecting holes on the Body (B). Secure at the connecting loops of Arms (C) and Gift Box (E) with Plastic Ties (L).

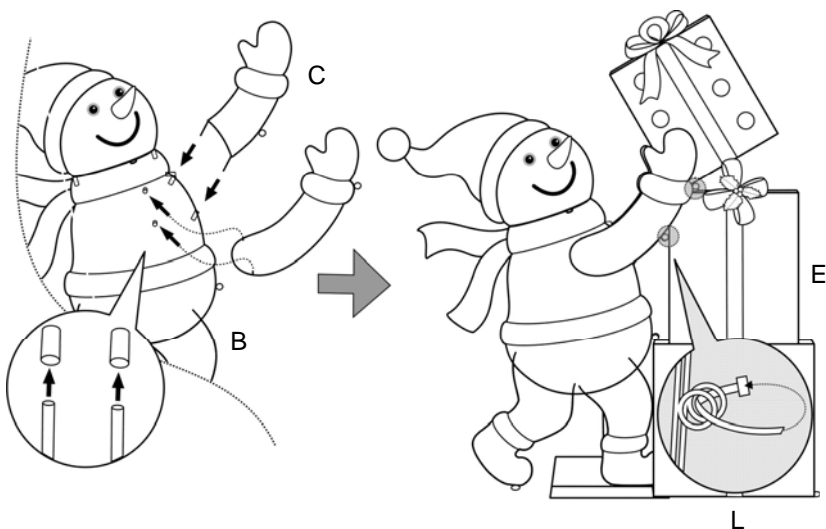

## 6 Assembling the Ground Stakes

Secure the Snowman and Gift Box to the ground with the Ground Stakes (M) at the ground connecting loops on the Snowman and Gift box base.

