



SKU # 1007 610 852
Model # 22RT13722111

ASSEMBLY INSTRUCTIONS

6ft Polar Wishes MOTION LED Snowman Juggling Snowballs

USE AND CARE GUIDE

PLANNING ASSEMBLY

Carefully remove all the parts from the box and place them on the ground. Many parts are connected by the lighting string that runs throughout the item. Take special care not to pull, cut or damage the lighting string. Read the entire manual prior to assembly and identify all the parts included in the package against the parts list. It is recommended to assemble parts of the product while laying flat on the ground or table versus standing the item up to assemble the parts. If any parts are missing or damaged do not attempt assembly but contact our customer service center or return to place of purchase with purchase receipt.

Assembly of this product may require more than one person.
1-855-HDHoliday (1-855-434-6543)

Pre-Operation

CAUTION: Grasp the plug to insert or remove from the power source. Do not unplug by pulling on cord.

CAUTION: The lighting string on this product is rated at 19.8 Watts (0.165 Amps). Do not overload. Do not connect to another lighting string, decorative outfit or other electrical products. Before you use or re-use this product inspect it carefully. Discard or return to place of purchase with purchase receipt if the product has cuts, damage, frayed wire insulation on cords, cracks in the socket enclosures, loose connections, exposed copper wire or other obvious damage.

Care and Cleaning

- Carefully remove the product from wherever it is placed. This helps to avoid any undue strain or stress on the product connections, and wires. If the product is placed somewhere other than the ground it should be well secured, flat and stable.
- Carefully disassemble the unit taking caution not to cut any electrical wires.
- Wipe the unit with a damp cloth and allow the unit to dry before storing.
- Store the product neatly in a cool, dry location protected from sunlight.

Troubleshooting

- Ensure that the ground or surface that the item sits on is flat and level
- Be sure to plug the item correctly to a wall outlet or a UL Listed Power Cord
- Ensure all parts are assembled properly per the Instruction Manual
- If the item does not light check for loose or broken bulbs and connections
- Do not plug into other electrical items
- If the item has multiple Light String Cords be sure to plug in all cords
- Check for Broken or Burned Out Fuse In Plug

Guarantee

What is Covered

The product is intended for residential seasonal use for 90 days maximum per year. This product is covered by a 90 days limited guarantee due to defects in material and workmanship. Return the product with purchase receipts to the location of purchase for refund within 90 days of purchase.

What is Not Covered

This warranty does not cover commercial use, normal wear and tear, products not used in accordance with directions provided on or with the product, burn out of bulbs or LEDs, batteries, products that have been subjected to unauthorized repair and/or modification and damage caused by shipping and improper handling, alterations, misuse, in store display models or accidents. Questions, problems, missing parts? Before returning to the store, call Home Accents Holiday Customer Service 8 a.m.-6 p.m., EST, Monday-Friday 1-855-HDHoliday (1-855-434-6543)



Thank you!


We appreciate the trust and confidence you have placed in Home Accents through the purchase of this 6ft Polar Wishes MOTION LED Snowman Juggling Snowballs. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Home Accents!

1-855-HDHoliday (1-855-434-6543)
HOMEACCENTSHOLIDAY.COM

Parts List		
Locater	Name	Qty.
A	Hat	1
B	Head	1
C	Nose	1
D	Upper Half of Body	2
E	Lower Half of Body	2
F	Arm / Hand	2
G	Scarf	1
H	Snowball Lamp String	2

Hardware List		
Locater	Name	Qty.
I	Spare Bulb	6
J	Spare Fuse	4
K	Plastic Tie	25
L	Ground Stake	8
M	Anchoring String	4


Diagram of Parts

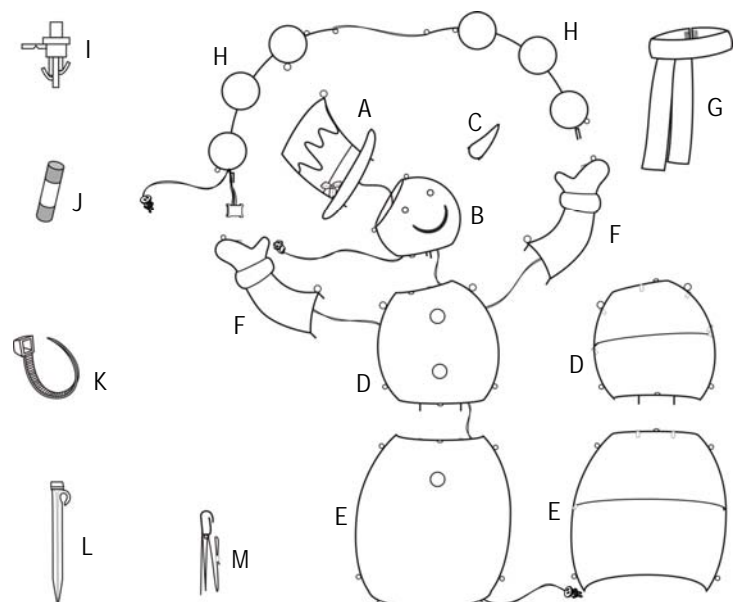

ASSEMBLY


1 Assembling the Lower Body

Align the two Halves of Lower Body (E) with each other then insert the connecting rods on one half into the connecting holes on the other half and fasten at the connecting loops with Plastic Ties (K).

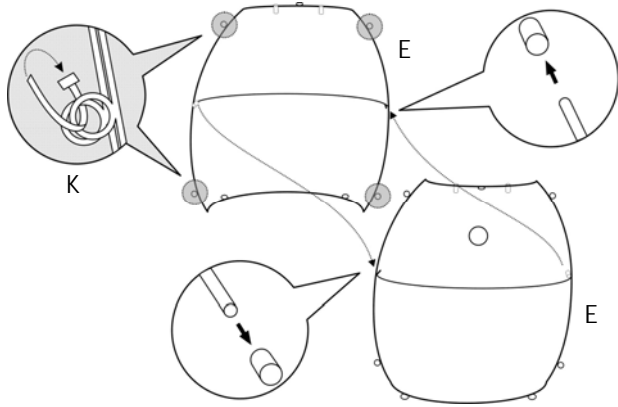


2 Assembling the Upper Body

Align the two Halves of Upper Body (D) with each other then insert the connecting rods on one half into the connecting holes on the other half and fasten at the connecting loops with Plastic Ties (K).

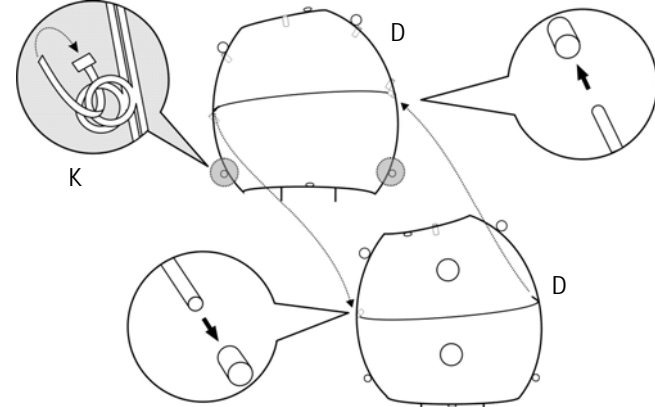


3 Assembling the Upper & Lower Body together

Insert the connecting rods at the bottom of Upper Body (D) into the connecting holes at the top of the Lower Body (E) and fasten at the connecting loops with Plastic Ties (K).

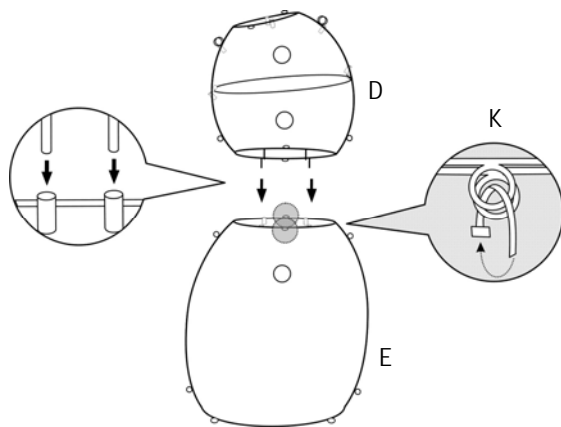


4 Assembling the Head and Nose

Insert the connecting rods at the bottom of Head (B) into the connecting holes at the top of the Upper Body (D) and fasten at the connecting loops with Plastic Ties (K). Insert the connecting rods on the Nose (C) into the connecting holes on the front of the Head (B).

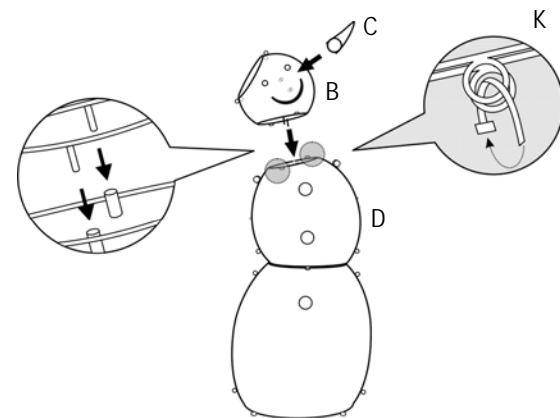


5 Assembling the Hat and Arms

Insert the connecting rods at the bottom of Hat (A) into the matching connecting holes at the top of the Head (B). Insert the connecting rods on each Arm (F) into the matching connecting holes on Upper Body (D) and fasten at the connecting loops with Plastic Ties (K).

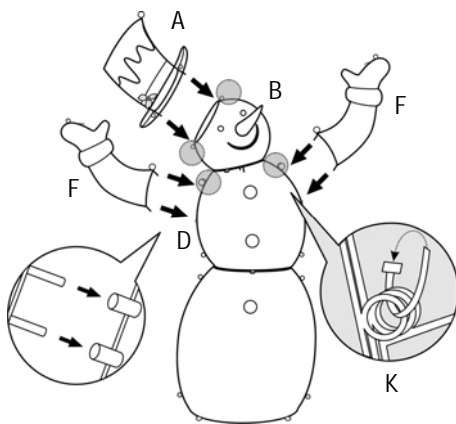


6 Assembling the Snowball Lamp String

Connect the two sections of Snowball Lamp String (H) and fasten at the connecting loops with Plastic Ties (K). Insert the connecting rods on the ends of the Snowball Lamp String (H) into the matching connecting holes on each Arm / Hand (F) and fasten at the connecting loops with Plastic Ties (K). Secure at the connecting loops on the top of the Hat and under the third Snowball, on the right side, with Plastic Ties (K).

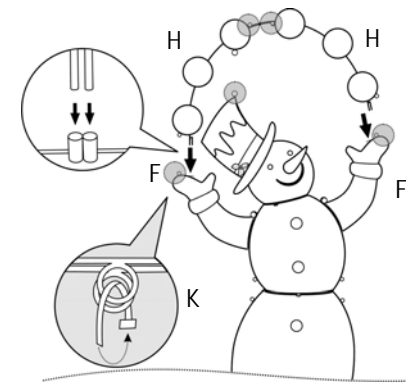

7 Assembling the Scarf

Wrap the Scarf (G) around the neck of the snowman for your desired look. Connect the electrical plug from right Arm / Hand (F) into the electrical plug from the right side of the Snowball Lamp String (H).

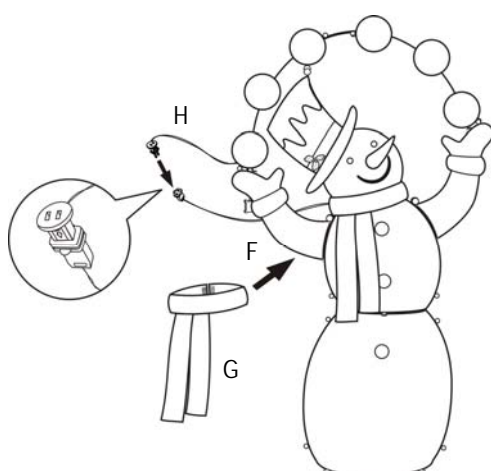

8 Assembling the Strings and Ground Stakes

Hook the plastic clipped end on each of the Anchoring Strings (M) onto the matching connecting loops on the shoulder area of the body. Attach the free looped end of each Anchoring String (M) to the hooked end of the Ground Stake (L) then tightly pull the Ground Stake and Anchoring String out and away from the Snowman evenly then firmly plant the Ground Stake into the ground.

