

INSTRUCTION MANUAL

SET-UP INSTRUCTIONS FOR THE 8FT GIANT-SIZED JACK-O-LANTERNS



STACKED AND UNSTACKED DISPLAY OPTIONS



1-855-HDHoliday (1-855-434-6543), Monday-Friday,
8am-7pm EST, and Saturday, 9am-6pm, EST



info@pan-asian.com.hk.



Questions, problems, missing parts? Before returning the product to your local Home Depot store, please call our Home Accents Holiday customer care department at 1-855-HDHoliday (1-855-434-6543), Monday-Friday, 8am-7pm EST, and Saturday, 9am-6pm, EST or email the manufacturer at info@pan-asian.com.hk.



WARNING: This is not a toy and is for decorative purposes only. For indoor/outdoor use. This item is not intended for use by children under the age of 14. Do not place product near an open fire or heat source such as a radiator, stove, etc.



**KEEP OFF, DO NOT SIT OR CLIMB ON THE PUMPKIN STACK
THIS IS NOT A TOY. THIS ITEM IS FOR DECORATION ONLY.**

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Responsible party for FCC: Pan Asian Creations Limited.
Address: PO Box 165, New Hartford, NY 13413
For FCC email: info@pan-asian.com.hk

SAFETY INSTRUCTIONS:

1. All cautions in these operating instructions should be followed completely.
2. Do not use near water; such as a bathtub, laundry tub, kitchen sink, wet basement or swimming pool, etc.
3. Do not display the product near any heat source such as radiators, stoves, fireplaces, etc.
4. Display should be serviced by a qualified service person only. Do not attempt to service this unit beyond what is described in the operating instructions.
5. Take extra care when displaying any figure that may contain small parts around small children.
6. Use of this decoration should always be supervised by an adult.
7. Remove AC/DC adapter when not in use.

IMPORTANT SAFETY INSTRUCTIONS:

When using electrical products, basic precautions should always be practiced including the following:

1. READ AND FOLLOW ALL SAFETY INSTRUCTIONS.
2. Read and follow all instructions that are on the product or provided with the product.
3. Do not use an extension cord.
4. Reference the National Electrical Code, ANSI/NFPA 70, specifically for the installation of wiring and clearance from power and lighting conductors.
5. Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.
6. Do not install or use within 10 feet of a pool.
7. Do not use in a bathroom.
8. **WARNING: Risk of Electric Shock.** When used outdoors, install only to a covered Class A GFCI protected receptacle that is weatherproof with the power unit connected to the receptacle. If one is not provided, contact a qualified electrician for proper installation. Ensure that the power unit and cord do not interfere with completely closing the receptacle cover.

SAFETY INSTRUCTIONS:

1. All cautions in these operating instructions should be followed completely.
2. Do not use near water; such as a bathtub, laundry tub, kitchen sink, wet basement or swimming pool, etc.
3. Do not display the product near any heat source such as radiators, stoves, fireplaces, etc.
4. Display should be serviced by a qualified service person only. Do not attempt to service this unit beyond what is described in the operating instructions.
5. Take extra care when displaying any figure that may contain small parts around small children.
6. Use of this decoration should always be supervised by an adult.
7. Remove AC/DC adapter when not in use.

IMPORTANT SAFETY INSTRUCTIONS:

When using electrical products, basic precautions should always be practiced including the following:

1. READ AND FOLLOW ALL SAFETY INSTRUCTIONS.
 2. Read and follow all instructions that are on the product or provided with the product.
 3. Do not use an extension cord.
 4. Reference the National Electrical Code, ANSI/NFPA 70, specifically for the installation of wiring and clearance from power and lighting conductors.
 5. Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.
 6. Do not install or use within 10 feet of a pool.
 7. Do not use in a bathroom.
 8. WARNING: Risk of Electric Shock. When used outdoors, install only to a covered Class A GFCI protected receptacle that is weatherproof with the power unit connected to the receptacle. If one is not provided, contact a qualified electrician for proper installation. Ensure that the power unit and cord do not interfere with completely closing the receptacle cover.
 9. WARNING: Risk of Fire. Installation involves special wiring methods to run wiring through a building structure. Consult a qualified electrician.
 10. WARNING: Risk of Electric Shock. Mount the unit at a height greater than 1 foot from the ground surface.
 11. Not for use with receptacles that are weatherproof only when the receptacle is covered (attachment plug cap not inserted and receptacle cover closed).
- SAVE THESE INSTRUCTIONS – This manual contains important safety and operating instructions for power units.

IMPORTANT: This product can be powered by a UL Listed, 4.5 V, 1.5A adapter (included). Adapter should be plugged into 100-240 V household outlet.

TO ACTIVATE:

The ON/OFF/TIMER toggle switch is located on the cable of Pumpkin 1 (F). Press the "ON" position switch to activate LED lights. Press the "OFF" position switch and unplug the adapter when not in use. Press the "TIMER" position switch to activate LED lights and the timer feature, which will automatically turn lights on for 6 hours and will shut off for 18 hours.

TROUBLESHOOTING:















Problem	Solution
The product does not work	1. Check all wire connections and make sure all parts are securely attached.
	2. Check and make sure the ON/OFF/TIMER switch is in the "ON" position.
	3. Check to make sure the adapter is connected to a working power source. Make sure the adapter is plugged into a standard 100V-240V household outlet.

If you are still experiencing problems with the product, please call 1-855-HDHOLIDAY (1-855-434-6543) or email info@pan-asian.com.hk for further assistance.

DISTRIBUTED BY:
HOME DEPOT
2455 PACES FERRY ROAD
ATLANTA, GA 30339

03302022_2008482
Printed in China




PARTS LIST:

<p>A. Metal Base</p>  <p style="text-align: right;">X 1</p>	<p>B. Metal connecting support for Pumpkin 1</p>  <p style="text-align: right;">X 1</p>	<p>C. Metal connecting support for Metal Base</p>  <p style="text-align: right;">X 2</p>
<p>D. Metal connecting support for Pumpkin 2 and Pumpkin 3</p>  <p style="text-align: right;">X 2</p>	<p>E. Metal connecting support for Pumpkin 4</p>  <p style="text-align: right;">X 1</p>	<p>F. Pumpkin 1 with ON/OFF/TIMER toggle switch cable</p>  <p style="text-align: right;">X 1</p>
<p>G. Pumpkin 2</p>  <p style="text-align: right;">X 1</p>	<p>H. Pumpkin 3</p>  <p style="text-align: right;">X 1</p>	<p>I. Pumpkin 4</p>  <p style="text-align: right;">X 1</p>
<p>J. Pumpkin 5</p>  <p style="text-align: right;">X 1</p>	<p>K. Cable (for unstacked display)</p>  <p style="text-align: right;">X 1</p>	<p>L. Pumpkin stem for Pumpkin 5</p> 
<p>M. AC/DC adapter</p>  <p style="text-align: right;">X 1</p>	<p>N. Ground Stakes</p>  <p style="text-align: right;">X 3</p>	


ASSEMBLY:

NOTE: For outdoor yard display it is recommended that you start the assembly process by first determining the intended display location, making sure that the surface is flat and/or level for the placement of the base, and then securing the base firmly into the ground with the included ground stakes.



Step 1

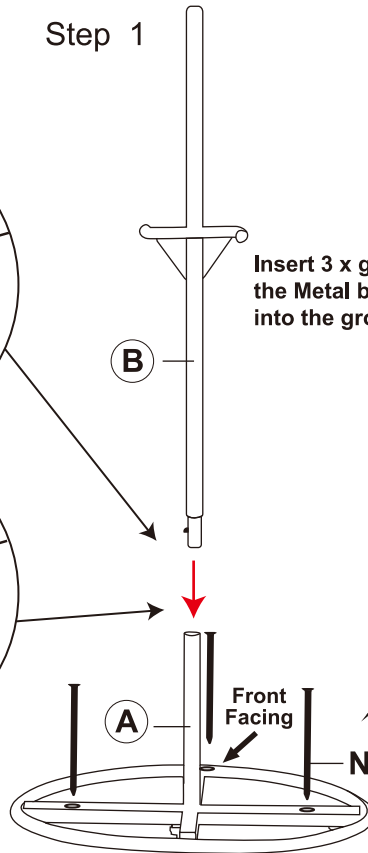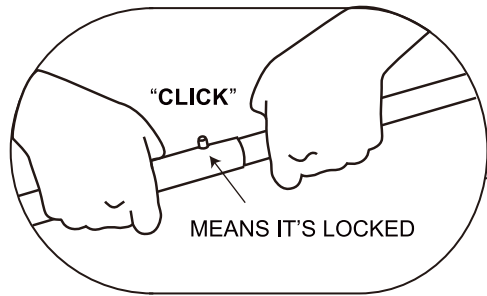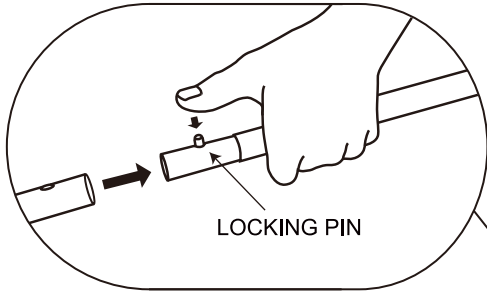


Insert 3 x ground stakes (N) through the corresponding holes located in the Metal base (A) and push or gently hammer (not included) to secure into the ground for outdoor display stability as shown.

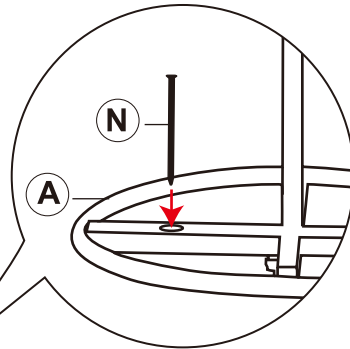




Step 2

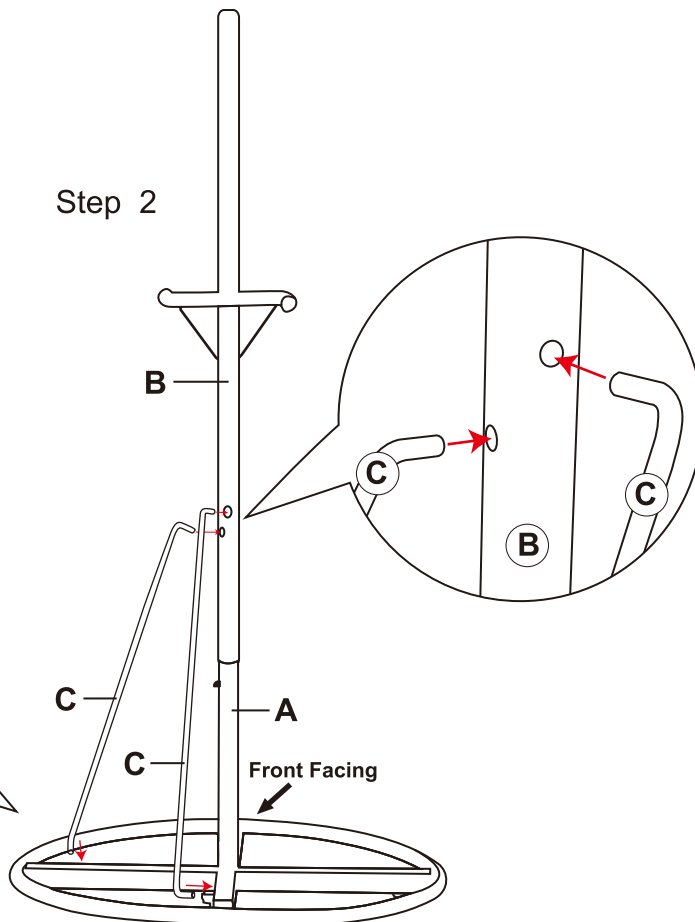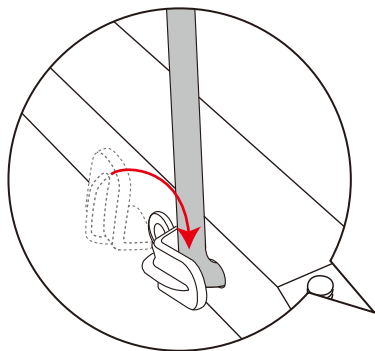

Turn the 2 x locking tabs to secure the bottom ends of the 2 x Metal Connecting Supports (C) into the Metal base (A) as shown.

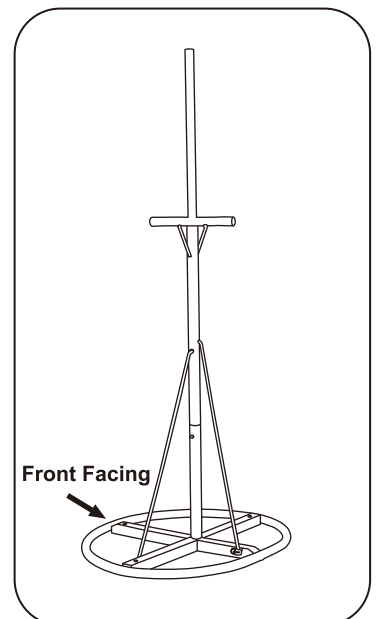



How to Close Pumpkin 2 (G)

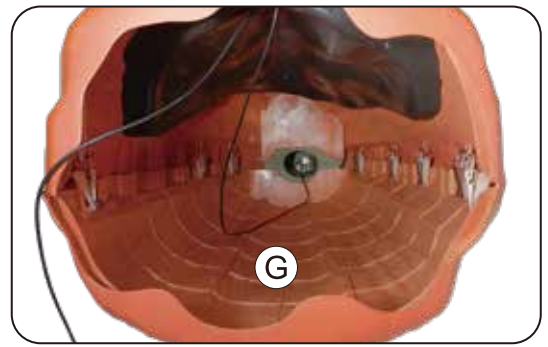
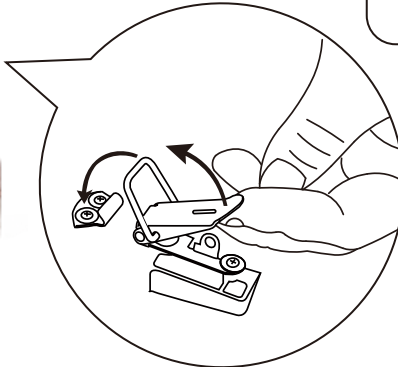
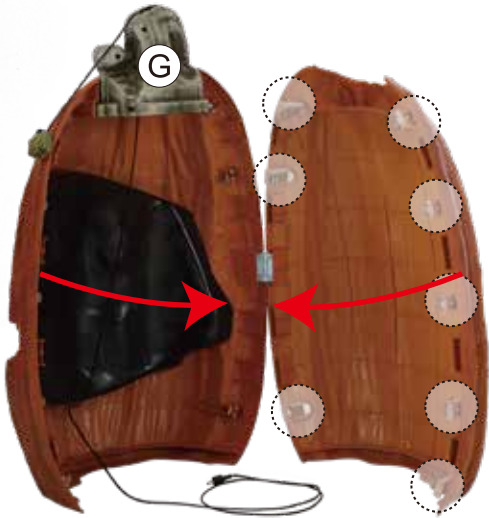


Fasten the 8 x "Locking Clips" located inside Pumpkin 2 (G) onto the corresponding 8 x "Locking Clip Attachments" to close and secure the 2 halves of the pumpkin together.


Please follow this step to close Pumpkin 3 (H) and Pumpkin 4 (I)

* The location and number of locking clips & locking clip attachments will vary for each pumpkin

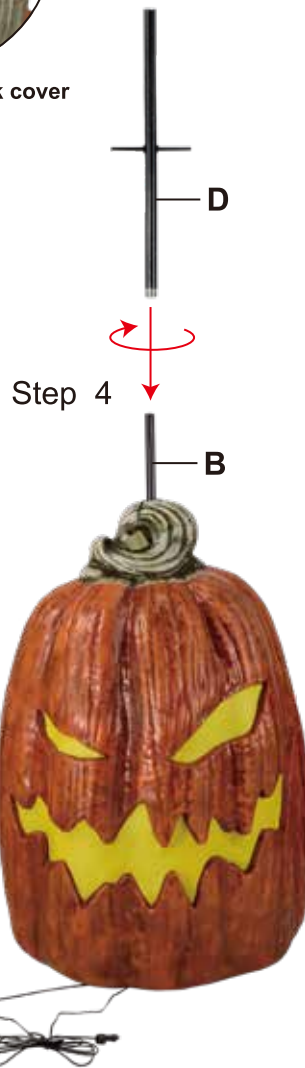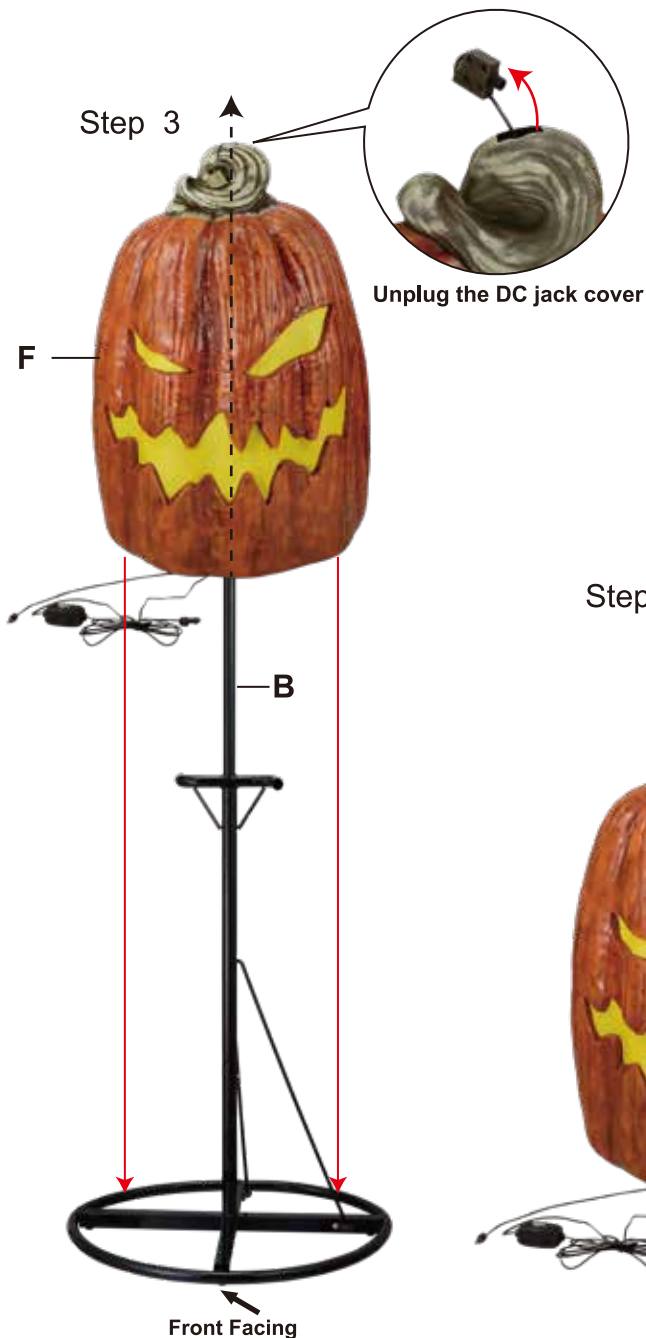


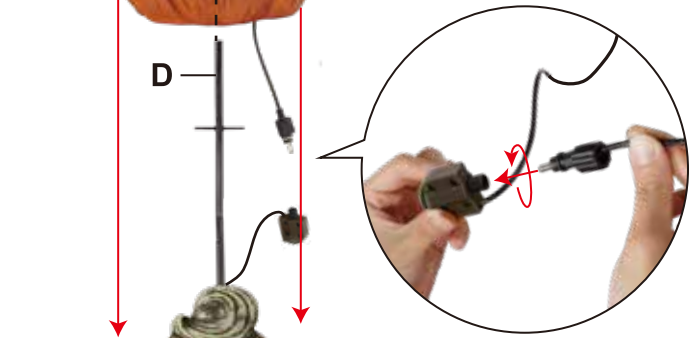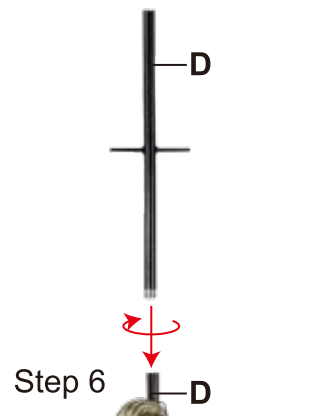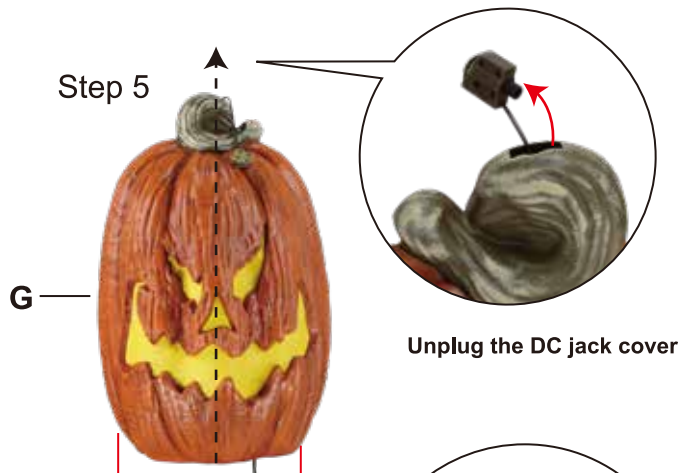


Connect the cable from the bottom of Pumpkin 2 (G) into the DC jack on the top of Pumpkin 1 (F)

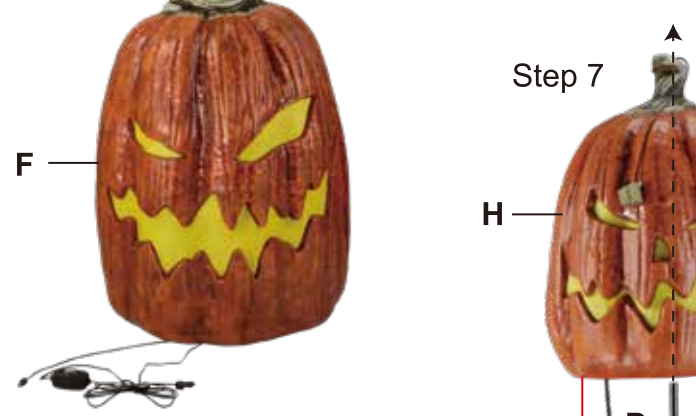

Step 7

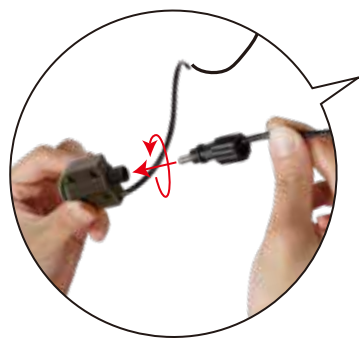


Connect the cable from the bottom of Pumpkin 3 (H) into the DC jack on the top of Pumpkin 1 (G)

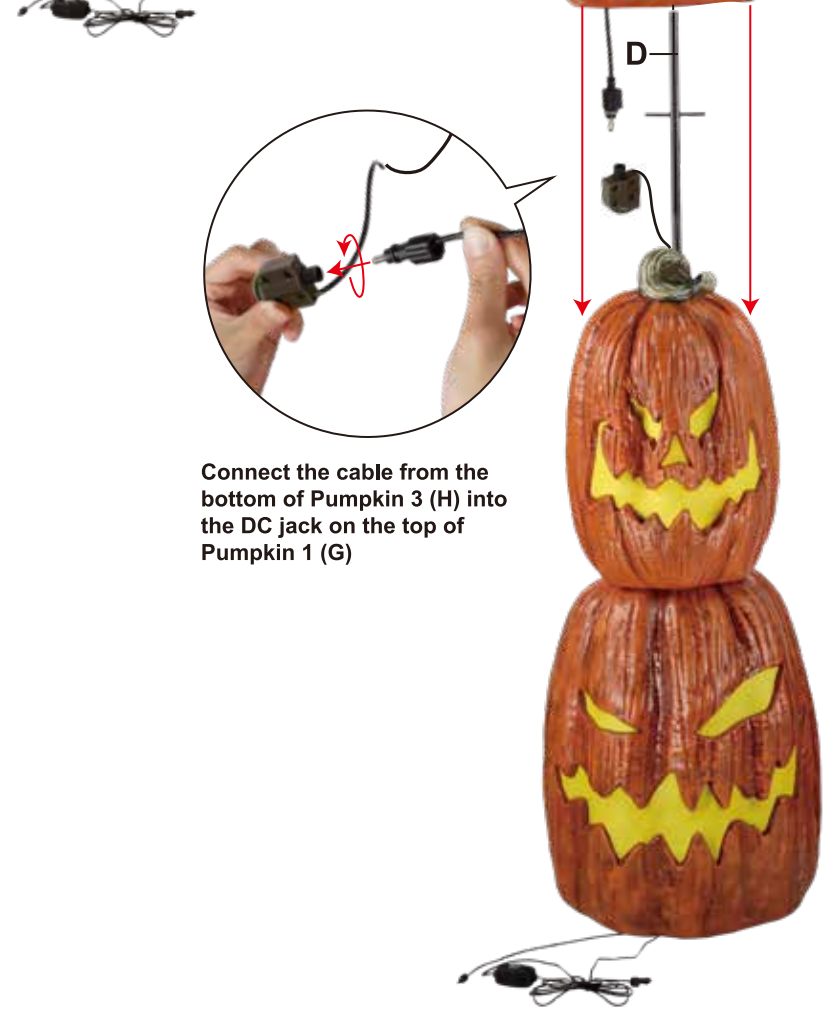


Step 8



Step 9

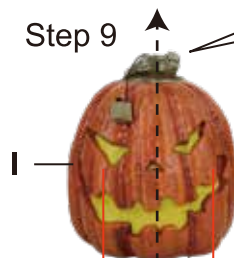

Unplug the DC jack cover

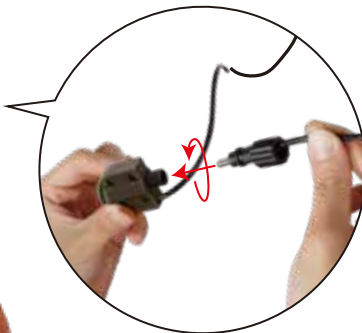


Connect the cable from the bottom of Pumpkin 4 (I) into the DC jack on the top of Pumpkin 3 (H)





Step 10

Connect the cable from the bottom of Pumpkin 5 (J) into the DC jack on the top of Pumpkin 4 (I)

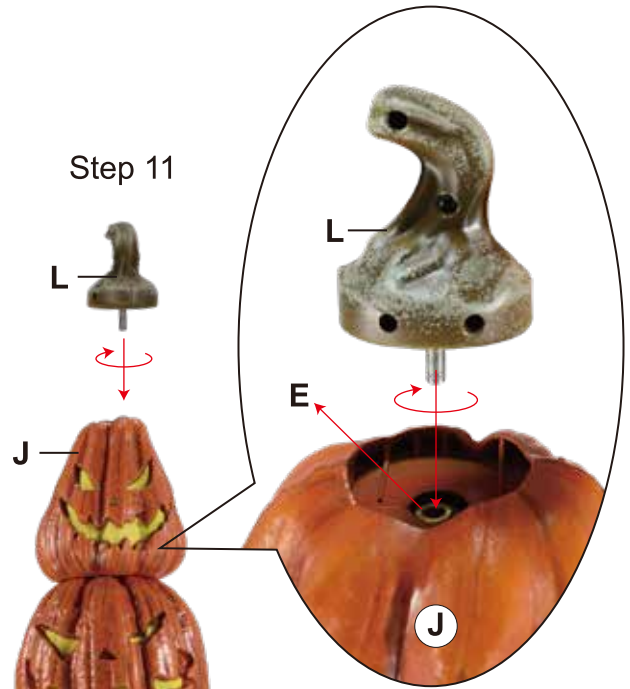


Step 11

Tighten the pumpkin stem (L) onto the top end of the metal connecting support for pumpkin 4 (E) to secure Pumpkin 5 (J) into place.






Step 12


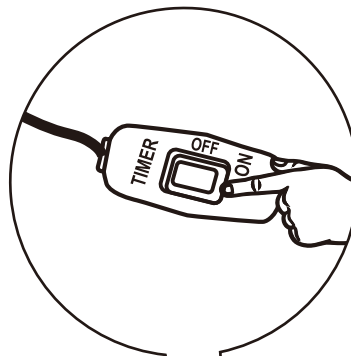


Once the power supply has been plugged in, locate the ON/OFF/TIMER toggle switch on the cable of pumpkin 1 (F) and press the "ON" position switch to activate LED lights.

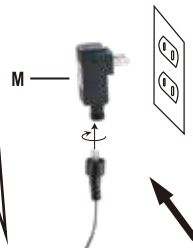

Connect the UL-Listed, 4.5V 1.5A AC/DC Adapter (M) into the connection at the end of the ON/OFF/TIMER toggle switch cable of pumpkin 1 (F), and plug it into a standard 100V-240V household power outlet.

UNSTACKED DISPLAY OPTION

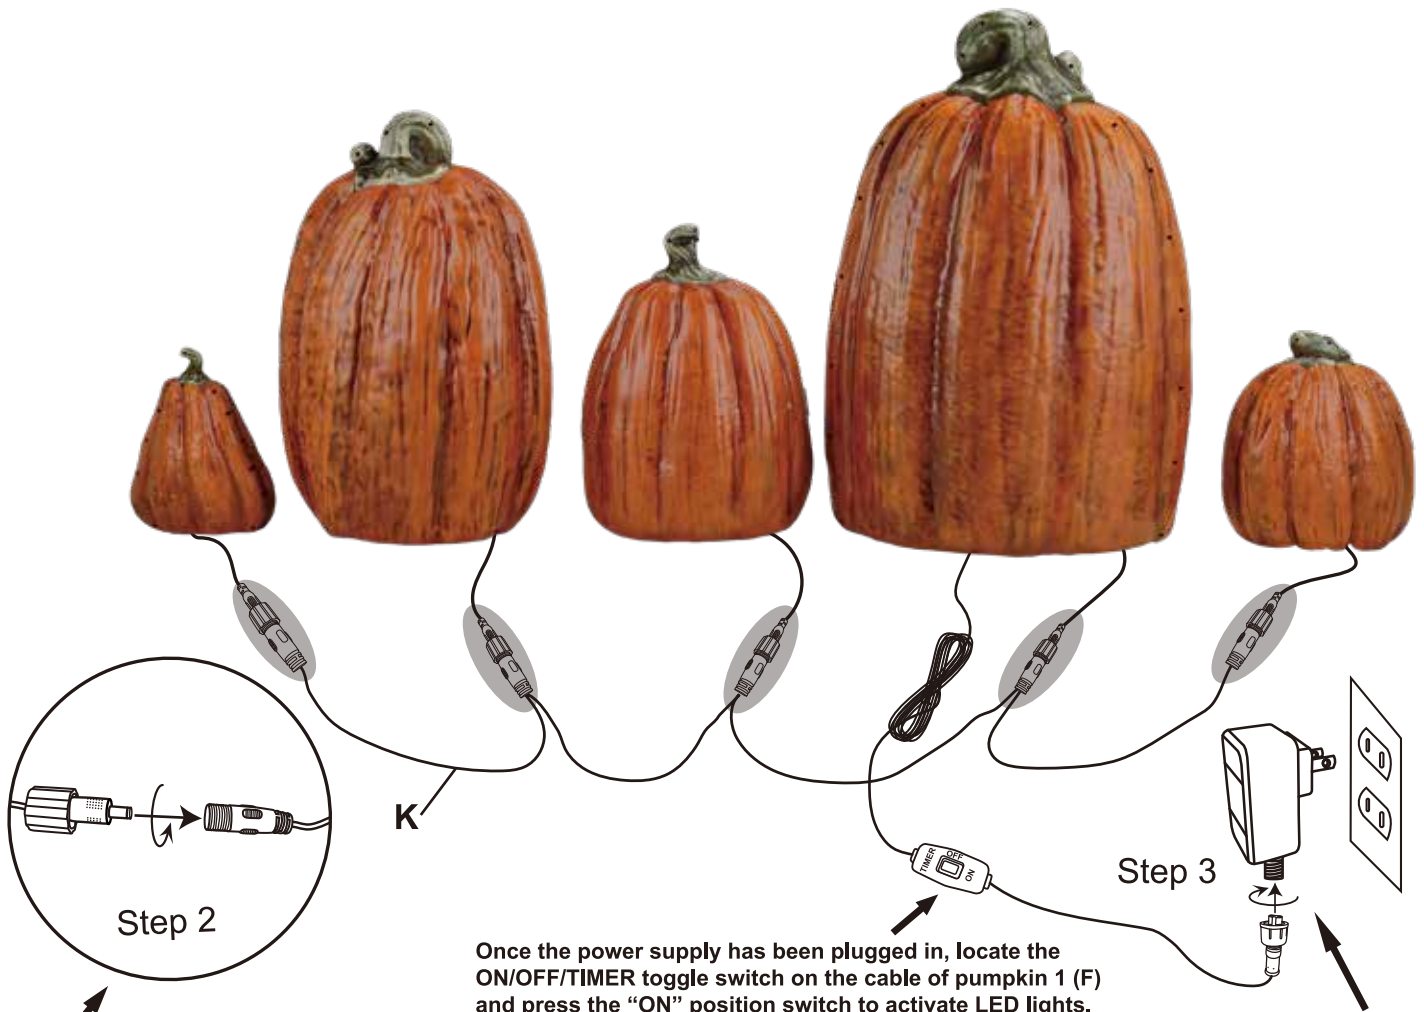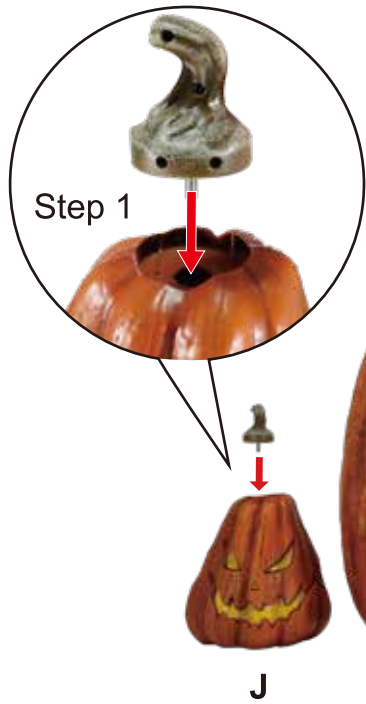

Once the power supply has been plugged in, locate the ON/OFF/TIMER toggle switch on the cable of pumpkin 1 (F) and press the "ON" position switch to activate LED lights.

Connect the ends of cable (K) into the end of the cable of pumpkin 1 (F), pumpkin 2 (G), pumpkin 3 (H), pumpkin 4 (I) and pumpkin 5 (J)

Connect the UL-Listed, 4.5V 1.5A AC/DC Adapter (M) into the connection at the end of the ON/OFF/TIMER toggle switch cable of pumpkin 1 (F), and plug it into a standard 100V-240V household power outlet.

