

NEED HELP? DO NOT RETURN TO STORE.

CALL: 1-855-HDHoliday (1-855-434-6543)

Monday - Friday 8am to 7pm EST, Saturday 9am to 6pm EST

NOTE: DEMO MODE ACTIVATED

Please reference "Demo Mode Instructions" for more details.

Safety Information

IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed, including the following:

- a. **READ AND FOLLOW ALL SAFETY INSTRUCTIONS.**
- b. Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- c. This seasonal product is not intended for permanent installation or use.
- d. Do not mount or place the product near gas or electric heaters, fireplaces, candles, or other similar sources of heat.
- e. Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- f. Do not let lamps rest on the supply cord or on any wire.
- g. Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- h. This is an electric product and not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
- i. Do not use this product for other than its intended use.
- j. Do not hang ornaments or other objects from cord, wire, or light string.
- k. Do not close doors or windows on the product or extensions cords as this may damage the wire insulation.
- l. Do not cover the product with cloth, paper, or any material that is not a part of the product when in use.
- m. The lamps of this product are not replaceable. Do not attempt to change or modify the lamps.
- n. Read and follow all instructions that are on the product or provide with the product.

o. SAVE THESE INSTRUCTIONS

Pre-Assembly

 
Package Contents

Part	Description	Quantity
A	Tree top	1
B	Tree center, Sticker 2	1
C	Tree bottom, Sticker 1	1
D	Tree stand	1

Assembly

Assembling the tree stand

- Step 1.** Choose a location near a wall outlet.
- Step 2.** Unfold the legs of the tree stand and lay the stand on the floor.
- Step 3.** Slide the locking disk of the tree stand down until it snaps into place.

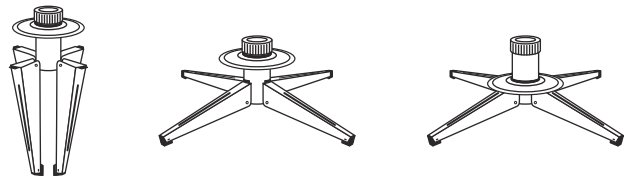


Assembling the tree


This tree assembles with Quick Set® feature

---Set up and light up your tree in less than 10 minutes!

 
- Step 1.** Remove the protective caps from the tree bottom and insert the pole into the tree stand.
Note: Do not step on the tree stand legs during the setup. This may deform the tree stand and may result in an unbalanced tree.
- Step 2.** Continue by inserting the upper tree section(s) to the lower section(s) until inserting the tree top.
- Step 3.** Shape the branches to your preference by working from the bottom to the top. When adjusting branches, ensure that all wires are free of branch hinges.
- Step 4.** Insert the adapter into the wall outlet. All your lights should now be lit.
- Step 5.** Shape the tree from the bottom to the top. Start with the branches farthest from the pole – fan out in a star shape, and continue until the entire tree is shaped.



 - Step 6.** When finished shaping the branches, slightly upsweep all branch tips for a uniform look.

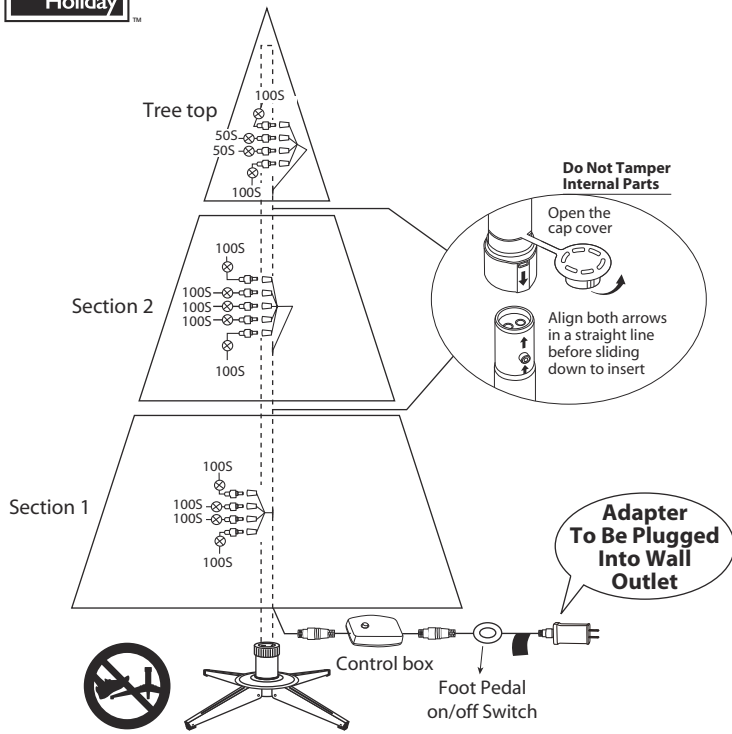

 - When storing the product, carefully remove the product from wherever it is placed, including tree, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections, and wires. Cover the protective cap on the poles to avoid damaging the internal parts.

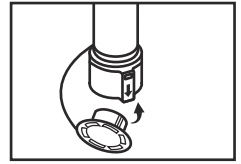


- When not in use, store neatly in a cool, dry location protected from sunlight.

User servicing instructions

HOW TO USE THE DUAL COLOR LIGHT CONTROLLER:

 - This tree is preset to Demo mode.**
 Before selecting other light functions, the Demo mode has to be deactivated. Follow the steps "To deactivate the Demo mode" under **Demo Mode Instructions** to do so.
- Press the selector button on the "Light Controller" to select among:
 - (1) SLOW FADING**
 - (2) TWINKLE**
 - (3) FAST FADING**
 - (4) COMBINATION**
 - (5) STEADY ON**

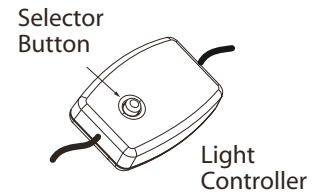

Operation

Turning on the tree

- Step 1.** Connect the light strings of the tree together and plug the adapter into a wall outlet.
- Step 2.** If the tree comes with a foot pedal, step on the On/Off button.

Maintenance

Spare parts

This tree package includes hinge pins & washers for any replacement or repair that you need to perform on your tree. If extra parts are needed, contact the Customer Service Team at 1-855-HDHoliday (1-855-434-6543) from 8am to 7pm EST, Monday through Friday, and 9am to 6pm EST, Saturday.

Repairing Loose Hinges

- Step 1.** Place the branch into the slot of the bracket
- Step 2.** Insert a new hinge pin through the holes of the bracket and secure with a washer.

Use and Care Instructions

- Before using or reusing, inspect product carefully. Discard any products that have cut, damaged or frayed wire insulation or cords, cracks in the lampholders or enclosures, loose connections, or exposed copper wire.
- Before disassembling the tree, unplug the tree and remove all ornaments and decorations.
- Gently lift the tree top straight up to remove from the center section and fold all branches towards the pole.
- Repeat this step for the center and bottom tree sections.

Demo Mode Instructions

This tree is preset to Demo Mode.

 
To activate the DEMO mode:

- With the tree plugged in, press and hold the FUNCTION button of the in-line controller for **5 seconds**.
- The Clear Lights will blink 3 times. The tree is now in DEMO mode.
- Within DEMO mode, the tree will display the COMBO pattern at all times unless the function button is pressed to change the flashing pattern. The tree will return to COMBO pattern whenever the controller is idle for 30 seconds.

To deactivate the DEMO mode:

- With the tree plugged in and in DEMO mode, press and hold the FUNCTION button of the in-line controller for **5 seconds**.
- The Clear Lights will flash 5 times indicating that DEMO mode is off.
- The tree is now in normal mode. Flashing pattern can be set to desired function and tree will remember the last setting until new setting is selected.

*Controller

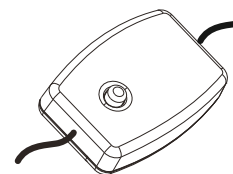

*IN-LINE CONTROLLER

NOTE: Demo mode can only be activated/deactivated using the inline light controller.



CAUTION:

1. To reduce the risk of fire and electric shock:
 - a) Use only the power supply that was provided with this product. Using a different adapter will damage the lights and may cause fire, or electrical shock hazards.
 - b) Do not install on trees having needles, leaves or branch coverings of metal or materials which look like metal.
 - c) Do not mount or support strings in a manner that can cut or damage wire insulation.
2. The controller and remote controller (if included) can only be used with this product.
3. Use of ladder to set up tall trees:

Ensure the ladder is securely fixed and is not slippery.
 Be cautious when climbing up and down the ladder.



Troubleshooting

Problem	Solution
The tree does not light	Ensure that all tree sections are plugged into each other and that the tree is plugged into the wall. If your tree came with a foot pedal, step on the On/Off button.

<p>Section Out? Ensure pole is fully connected</p>	<p>No Lights Working? Check For Loose Connection</p>	<p>Not Full? Spread Branches</p>
<p>Tree Topper?</p> <p>Run Extension Cord</p>	<p>Branch Hanging Low?</p> <p>Bend up</p>	<p>Lights Cycle Through Functions? This tree is preset to Demo Mode.</p> <p>Function button</p> <p>To deactivate: Press & hold until warm white lights blink 5 times</p> <p>To activate: Press & hold until warm white lights blink 3 times</p>
<p>Other Issue? Call 1-855-HDHoliday (1-855-434-6543)</p>		