

2022-2023 11th Gen Honda Civic

Base trim: Rear sensors only on OEM screen.
 Mid/High trims: Display on both dashboard and OEM screen.



Sensor installation positions



Civic Hatch Front Parking Sensor Installation

Civic Hatch Rear Parking Sensor Installation



Civic Sedan Front Parking Sensor Installation

Civic Sedan Rear Parking Sensor Installation

2022 Honda Civic/Integra

Wiring method 1: Driver's side

3. Pink wire 4. Blue wire

Above fuse box

11th Gen Civic/Integra/HR-V

White wire (CAN+) → Connect to pink wire
 Red wire (CAN-) → Connect to blue wire

2024 Honda Civic

Blue wire to blue wire | Pink wire to pink wire

Connect to the ACC power source

11th Gen Civic Front 4 Sensors (Displays on dashboard)
 Requires 11th Gen Civic-specific ECU & adapter harness

ECU: Located in the right side of the vehicle's trunk.

10th Gen Civic 8 Sensors

Front & Rear 8-Sensor System - Wiring Reference


Wiring Location 1: Driver's side

Wiring Location 2: Behind OEM screen



6-pin connector

Accord/Civic/CR-V/Breeze

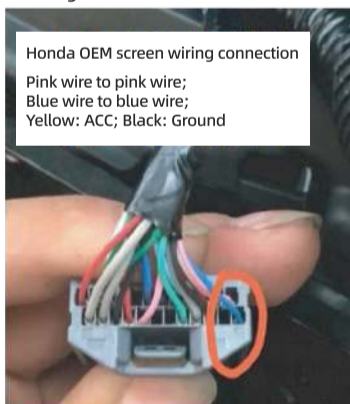


Honda OEM screen wiring connection

Pink wire to pink wire;
 Blue wire to blue wire;
 Yellow: ACC; Black: Ground

10th Gen Civic Front 4 Sensors (Rear parking system's ECU located behind OEM screen's right side. Requires Honda front 4-sensor specific ECU).



16-pin connector

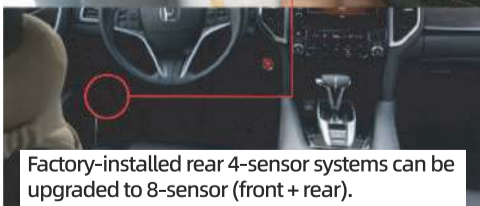

Factory-installed rear 4-sensor systems can be upgraded to 8-sensor (front + rear).



Honda front 4-sensor plug-and-play harness
 ECU: located near driver's left knee panel OR left side of trunk.
 Civic ECU: located behind OEM screen, right side.