



BSR idware GmbH
Jakob-Haringer-Str.3
A-5020 Salzburg
<https://www.bsr.at>
sales@bsr.at

Honeywell

Voyager 1602g

Wireless Area-Imaging Pocket Scanner

Quick Start Guide

Aller à www.honeywellaidc.com pour le français.

Vai a www.honeywellaidc.com per l'italiano.

Gehe zu www.honeywellaidc.com für Deutsch.

Ir a www.honeywellaidc.com para español.

Para Português, acesse www.honeywellaidc.com.br.

Перейти на русскоязычный сайт www.honeywellaidc.com.

Pro češtinu jdi na www.honeywellaidc.com.

Pre slovenčinu choď na www.honeywellaidc.com

日本語：www.honeywellaidc.com をご覧ください。

查看中文简体版请登陆 www.honeywellaidc.com。

查看繁体版请登陆 www.honeywellaidc.com

한글 www.honeywellaidc.com 로 이동합니다 .

לגרסה בעברית, עבור לאתר האינטרנט בכתובת www.honeywellaidc.com

انتقل إلى www.honeywellaidc.com للغة العربية.



VG1602-ENUS-QS


Rev D
2/17

Note: Refer to your User's Guide for information about cleaning your device.

Getting Started

The scanner's battery must be fully charged before the first use. It can be charged using a power supply or by connecting the USB cable to a computer.


Charging via Power Supply:

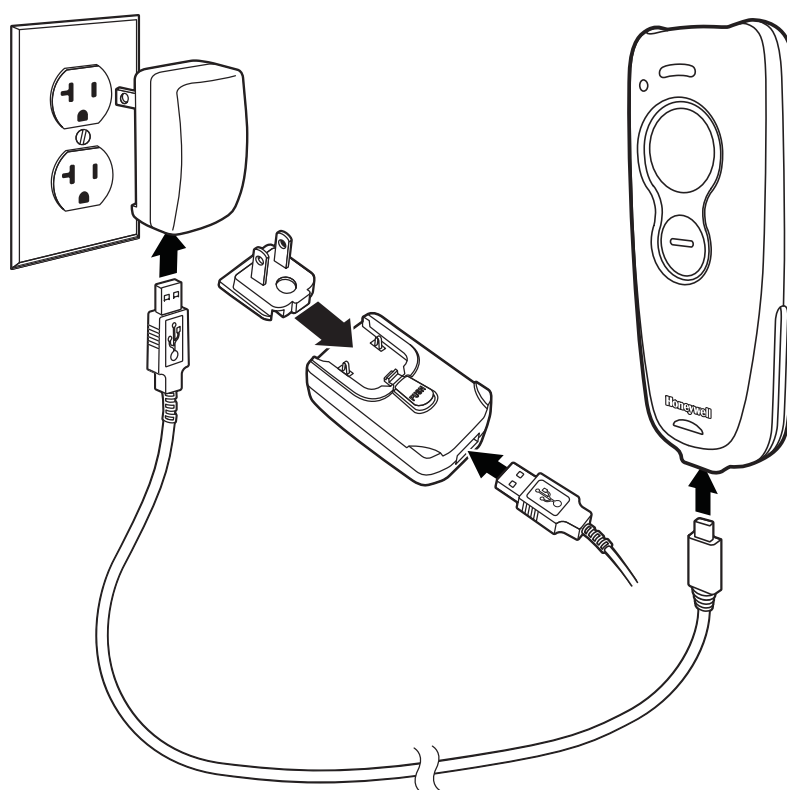

Note: The power supply must be ordered separately, if needed.

Connecting the Scanner to a USB Port:


Turn off the computer's power before connecting the scanner, then power up the computer once the scanner is fully connected.

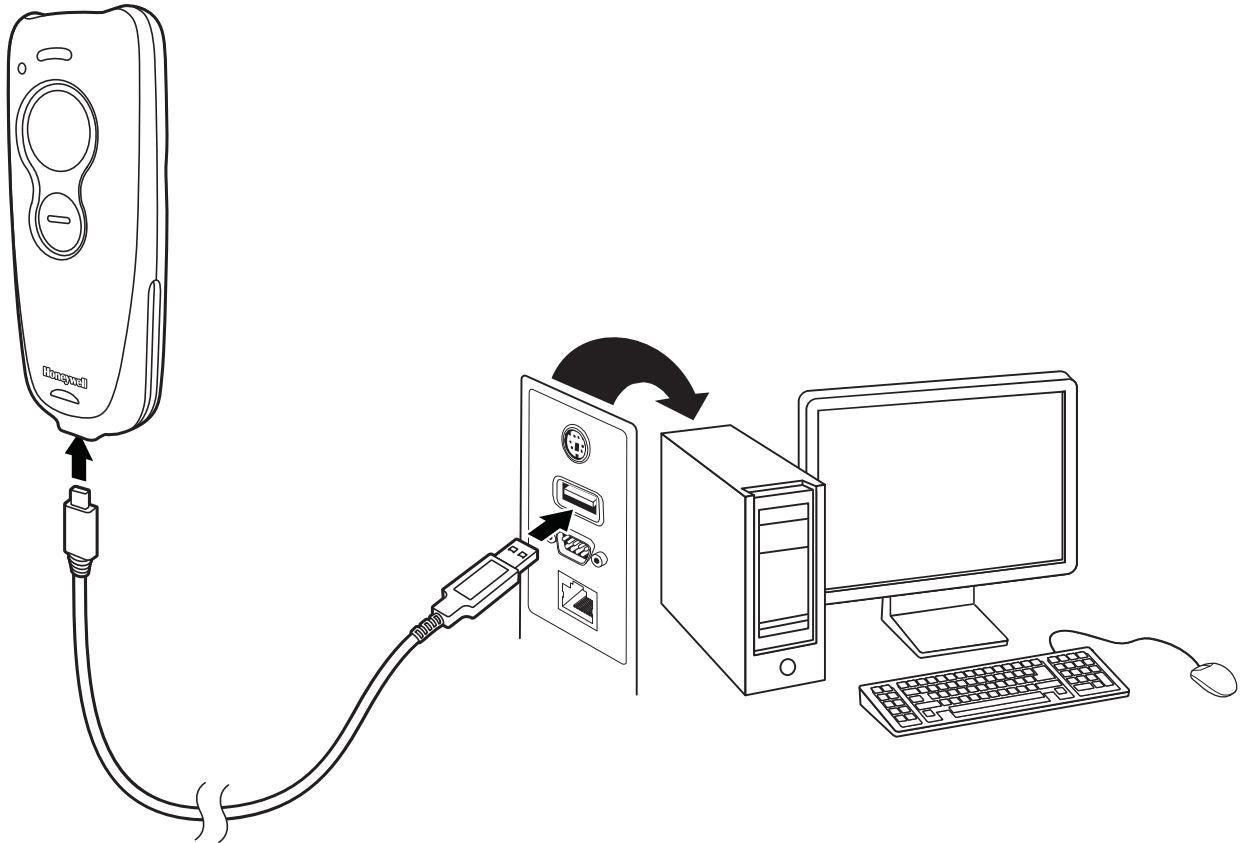

Note: *If you are charging the scanner using the USB cable, the current available for charging is reduced and charge times are increased. Charging via the power supply is faster.*

Battery Charge Indicator

When the battery is charging, the small LED at the top left of the scanner flashes orange. When the battery is fully charged, this LED is solid green.

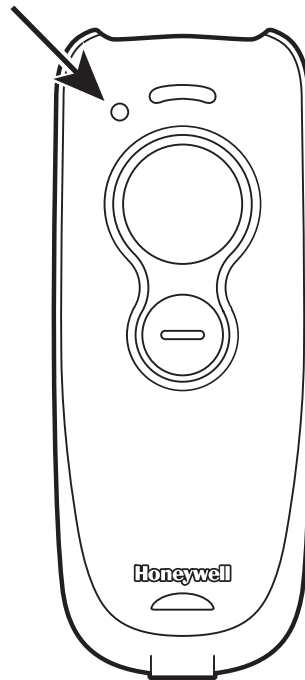

Reading Techniques

The scanner projects an aiming beam that should be centered over the bar code, but it can be positioned in any direction for a good read.

Hold the scanner over the bar code, press the button, and center the aiming beam on the bar code.

The aiming beam is smaller when the scanner is closer to the code and larger when it is farther from the code. Hold the scanner close to smaller bar codes, and farther away from large bar codes to get a proper read.



If the bar code is highly reflective (e.g., laminated), you may need to tilt the scanner at an angle so the bar code can be scanned.

Note: The scanner clicks while attempting to connect to the host. If three beeps sound after the clicks, the link has not been established. If the scanner beeps once, the link has been established.

Standard Product Defaults

Scan the following bar code to reset the scanner to all standard product default settings.



Standard Product Defaults

Note: PDF and 2D bar codes can only be read by Voyager model 1602g2D and cannot be read by model 1602g1D.

Pairing the Scanner with Bluetooth Devices

The scanner can be used either with a Honeywell Access Point (AP01-XXXBT) or with other Bluetooth devices. Those devices include personal computers, laptops, tablets, and Apple[®] devices.

 
1. Scan the **Bluetooth HID Keyboard Connect** bar code below.



Bluetooth HID Keyboard Connect

2. Set your personal computer, laptop, tablet, or Apple device so it searches for other Bluetooth devices. (Refer to your device's User's Guide for pairing instructions.)

3. Once your personal computer, laptop, tablet, or Apple device has located the scanner, select the Voyager 1602g scanner name from the list displayed. Some personal computers, laptops, or tablets will automatically pair with the scanner. If your device automatically pairs with the scanner, it displays a successful pairing message and you do not need to continue to the next step.
4. If your personal computer, laptop, or tablet does not automatically pair with the scanner, a PIN is displayed. This PIN must be scanned within 60 seconds. You must quickly scan Bluetooth PIN Code below, then scan the numeric bar code(s) for the PIN code from the [Programming Chart](#), then scan the **Save** bar code.



Bluetooth PIN Code

Your personal computer, laptop, tablet, or Apple device should now be paired with the scanner and be able to accept incoming data from the Voyager 1602g. If you are using an Apple app to communicate with the scanner using serial port protocol (SPP), refer to the Voyager 1602g User's Guide on our website, www.honeywellaidc.com.

Disconnect from Host and Connect to an Access Point

If your scanner has been connected directly to an iPad, smart phone, or laptop, you must disconnect it in order to communicate with an Access Point. Scan the **Bluetooth HID Keyboard Disconnect** bar code to unlink the scanner from the currently linked host. Scan the linking bar code on the Access Point to relink the scanner.



 
Bluetooth HID Keyboard Disconnect

Keyboard Country

Your keyboard layout default is a US keyboard. To change this layout, scan the appropriate keyboard country code.



Belgium



Denmark



Finland



France



Germany/Austria



Great Britain



Italy



Norway



Spain



Switzerland



USA
(Default)

By default, national character replacements are used for the following characters: # \$ @ [\] ^ ' { | } ~ Refer to the ISO 646 Character Replacements chart in your User's Guide to view the character replacements for each country.

Note: For a complete list of country codes, see the User's Guide for your product at our website, www.honeywellaidc.com.

Suffix

If you want a carriage return after the bar code, scan the **Add CR Suffix bar code**. To add a tab after the bar code, scan the **Add Tab Suffix bar code**. Otherwise, scan the **Remove Suffix bar code** to remove the suffixes.



Add CR Suffix



Add Tab Suffix



Remove Suffix

For additional prefix and suffix settings, see the User's Guide for your product at our website, www.honeywellaidc.com.

Add Code ID Prefix to all Symbologies

Scan the following bar code if you wish to add a Code ID prefix to all symbologies at once.



Add Code ID Prefix To All Symbologies
(Temporary)

Note: For a complete list of Code IDs, see the User's Guide for your product at our website, www.honeywellaidc.com.

Poor Quality 1D Bar Codes

This setting improves the scanner's ability to read damaged or badly printed linear bar codes. When **Poor Quality 1D Reading On** is scanned, poor quality linear bar code reading is improved, but the scanner's snappiness is decreased, making it less aggressive when reading good quality bar codes. This setting does not affect 2D bar code reading.



Poor Quality 1D Reading On



Poor Quality 1D Reading Off
(Default)

Beeper Volume - Good Read

The beeper volume codes modify the volume of the beep the scanner emits on a good read.



Low



Medium



High
(Default)



Off



BSR idware GmbH

Jakob-Haringer-Str.3

A-5020 Salzburg

<https://www.bsr.at>

sales@bsr.at

Data Format Editor Instructions

The following are abbreviated instructions for entering a data format. For complete instructions refer to your User's Guide, available at our website, www.honeywellaidc.com.

1. Scan the **Enter Data Format** symbol.
2. Primary/Alternate Format: scan **0** for Primary Format
3. Terminal Type: scan **099** for any terminal type
4. Code I.D.: scan **99** for any bar code type
5. Length: scan **9999** for any length bar code.
6. Editor commands: use the Programming Chart that follows.
7. Scan **Save** to save your entries.



Enter Data Format



Clear All Data Formats



Save

Programming Chart



0



1



2



3



4



5



6



7



8



9



A



B



C



D



E



F



Save

EZConfig-Scanning

To access additional features for the scanner use EZConfig-Scanning, an online configuration software tool, available from our website at www.honeywellaidc.com.

Technical Assistance

Contact information for technical support, product service, and repair can be found at www.honeywellaidc.com.

Limited Warranty

For warranty information, go to www.honeywellaidc.com and select Resources>Warranty.

Patents

For patent information, refer to www.hsmpats.com.

User Documentation

For localized versions of this document, and to download the User's Guide, go to www.honeywellaidc.com.

Disclaimer

Honeywell International Inc. ("HII") reserves the right to make changes in specifications and other information contained in this document without prior notice, and the reader should in all cases consult HII to determine whether any such changes have been made. The information in this publication does not represent a commitment on the part of HII.

HII shall not be liable for technical or editorial errors or omissions contained herein; nor for incidental or consequential damages resulting from the furnishing, performance, or use of this material. HII disclaims all responsibility for the selection and use of software and/or hardware to achieve intended results.

This document contains proprietary information that is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated into another language without the prior written consent of HII.

Copyright © 2015-2017 Honeywell International Inc. All rights reserved.

Web Address: www.honeywellaidc.com

Apple is a trademark of Apple Inc., registered in the U.S. and other countries.



BSR idware GmbH

Jakob-Haringer-Str.3

A-5020 Salzburg

<https://www.bsr.at>

sales@bsr.at