




Husqvarna®

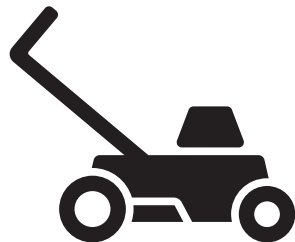


S 138i, S 138C




EN	Operator's manual	2-26
BG	Ръководство за експлоатация	27-54
CS	Návod k použití	55-80
DA	Bruksanvisning	81-106
DE	Bedienungsanweisung	107-133
EL	Οδηγίες χρήσης	134-162
ES	Manual de usuario	163-190
ET	Kasutusjuhend	191-215
FI	Käyttöohje	216-240
FR	Manuel d'utilisation	241-268
HR	Priručnik za korištenje	269-294
HU	Használati utasítás	295-321
IT	Manuale dell'operatore	322-348
LT	Operatoriaus vadovas	349-374
LV	Lietošanas pamācība	375-401
NL	Gebruiksaanwijzing	402-428
NO	Bruksanvisning	429-453
PL	Instrukcja obsługi	454-481
PT	Manual do utilizador	482-508
RO	Instrucțiuni de utilizare	509-534
RU	Руководство по эксплуатации	535-564
SK	Návod na obsluhu	565-590
SL	Navodila za uporabo	591-615
SR	Priručnik za rukovaoca	616-641
SV	Bruksanvisning	642-666
TR	Kullanım kılavuzu	667-691
UK	Посібник користувача	692-720

Product overview of model S 138i

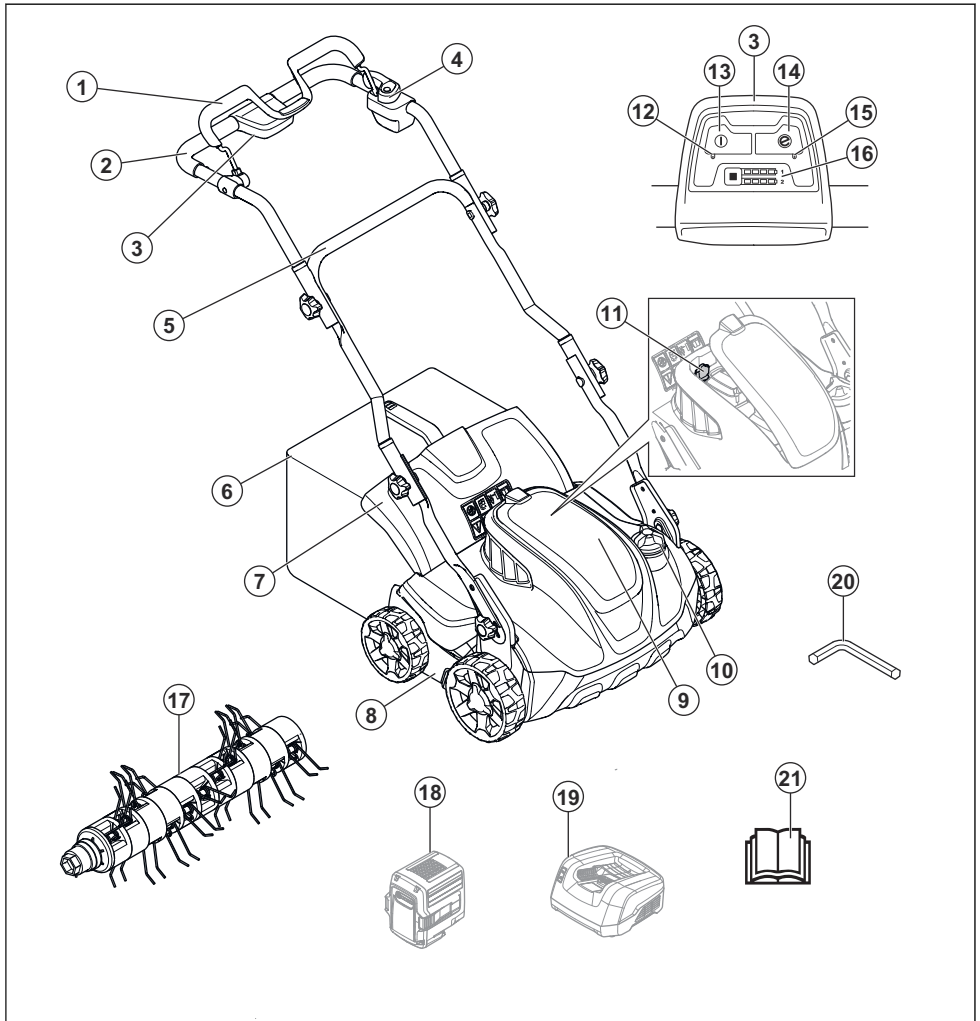

- | | |
|--|---|
| 1. Motor brake handle | 12. ON/OFF indicator LED |
| 2. Upper handle | 13. ON/OFF button |
| 3. Control panel | 14. SavE button |
| 4. Start inhibitor | 15. SavE indicator LED |
| 5. Lower handle | 16. Battery charge indicator and battery button |
| 6. Grass catcher | 17. Spring tines |
| 7. Rear cover | 18. Battery (Accessory) |
| 8. Dethatcher cover | 19. Battery charger (Accessory) |
| 9. Battery lid | 20. Hex key |
| 10. Adjustment knob for the work depth | 21. Operator's manual |
| 11. Safety key | |

Product overview of model S 138C

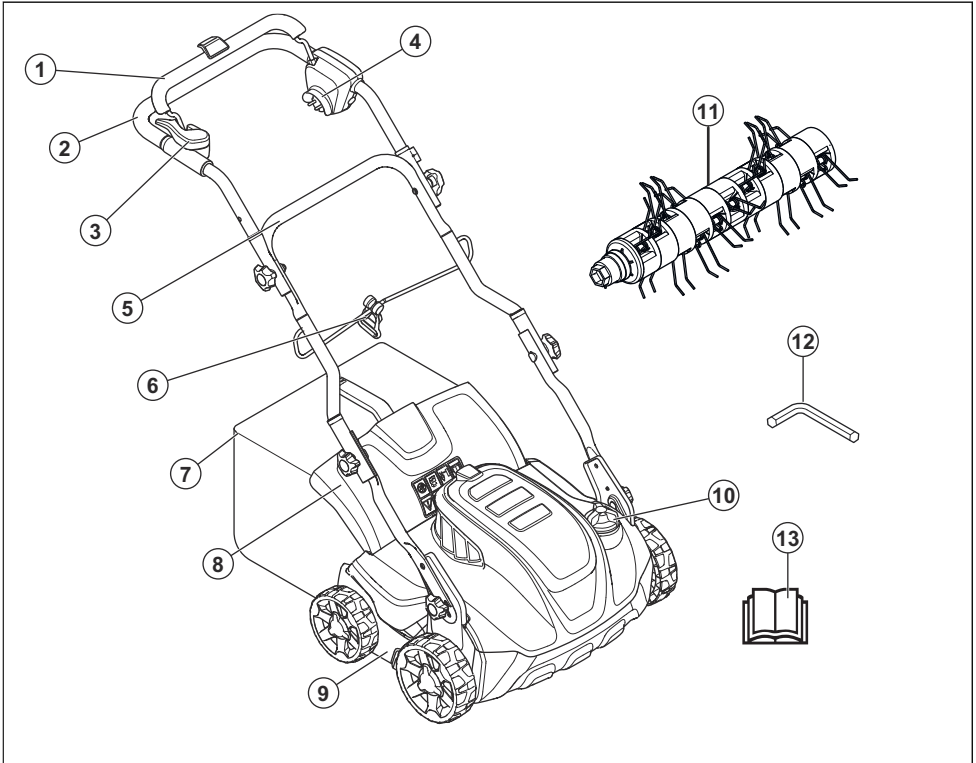

1. Motor brake handle
2. Upper handle
3. Start inhibitor
4. Power socket
5. Lower handle
6. Cable clamp
7. Grass catcher
8. Rear cover
9. Dethatcher cover
10. Adjustment knob for the work depth
11. Spring tines
12. Hex key
13. Operator's manual

Symbols on the product