



32" Curved QHD 240hz Gaming Monitor

KAMN32Q24SA

Safety & Warnings	3
Components	4
Overview	5
Assembly	7
Connectivity	9
Operation	12
Cleaning & Care	17
Specifications	18
Notes	19

Safety & Warnings

- Read all safety notes and instructions before first use even if you are familiar with this product. Retain this user guide for future reference.
- Use the product only as described in this user guide.
- Unplug the monitor before cleaning it.
- Use a clean, slightly dampened cloth to wipe the main monitor body.
- To clean the screen, turn it off unplug it and wait for it to cool completely, then wipe it with a dry micro-fibre cloth.
- Do not use cleaning alcohol, ammonia-based liquids or other harsh cleaners.
- This monitor is designed with ventilation holes on the back of the casing. Do not cover or block them.
- Do not insert any object or spray any liquid into the vents.
- Avoid placing the monitor near heaters, stoves, fireplaces or other sources of heat, as well as in rooms lacking adequate ventilation.
- Do not position the monitor in unsafe locations. If the monitor falls, it may be damaged and may injure nearby people.
- Unplug the monitor if it is not going to be used for an extended period.
- Do not place heavy objects on the monitor, its power cord or any connected cable.
- Do not open the rear panel of the monitor, as it contains a high-voltage current even when not plugged in.

 


The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.


Components




Monitor

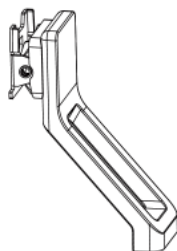


Stand Arm

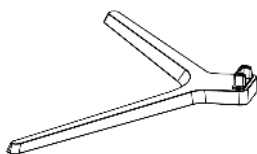 


Stand Base

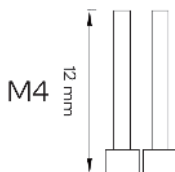 


M4x12mm
Stand Screw (x2)

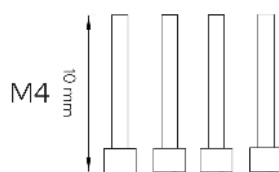

M4x10mm
VESA Screws (x4)

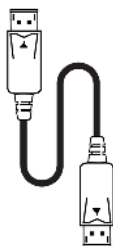

DP Cable

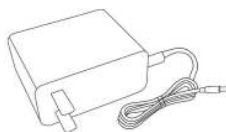


Power Adaptor




User Guide

Overview

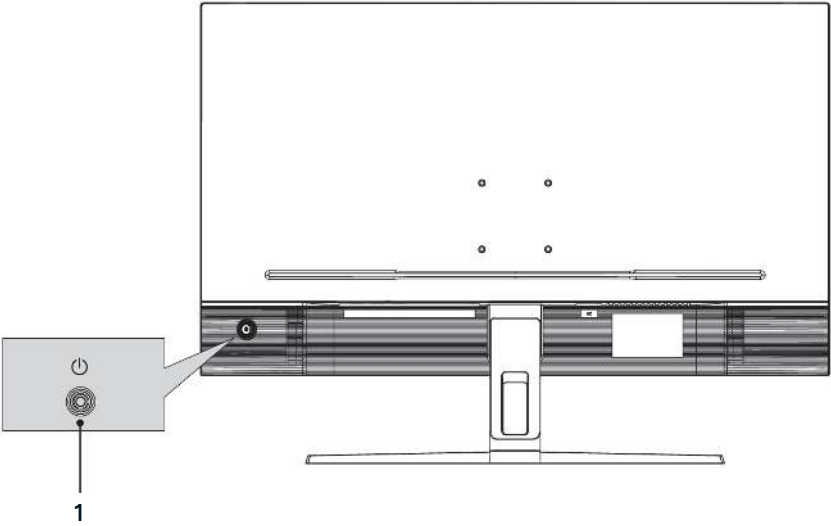

1	Power Button	Button • Press and hold the for 3-5 seconds to turn the monitor on/off. • When the monitor is turned on, press to open the main menu. • Press to enter submenu. • Press to confirm menu adjustment and return to previous menu. Directional Stick Use to navigate the menus.
---	--------------	--

Monitor Ports


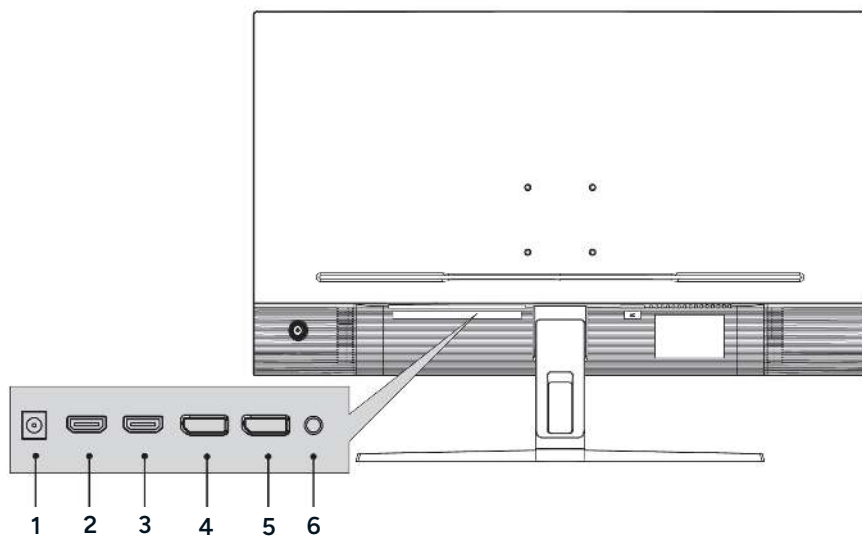


- 1 Power Input Port (DC 12V)
- 2 HDMI Port
- 3 HDMI Port
- 4 DP Port
- 5 DP Port
- 6 3.5mm Audio Output Port



Assembly

WARNING: The panel of the monitor is fragile. Keep the foam underneath the monitor screen while assembling the stand.

1. Carefully remove the monitor, stand connector and stand base from the box.
2. Attach the stand base to the stand connector using the x2 M4x12mm Stand Screws.

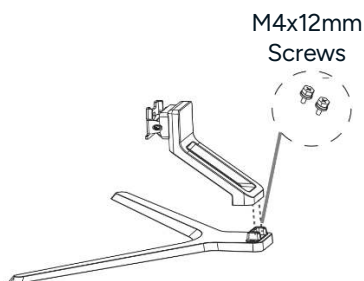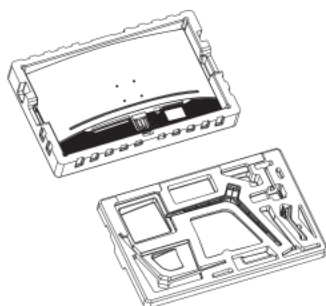

3. Insert the connection block into the rear of the monitor and push down until it is securely in place.
4. Lift the monitor up straight and remove the lower foam. Stand the monitor up on the installed base.

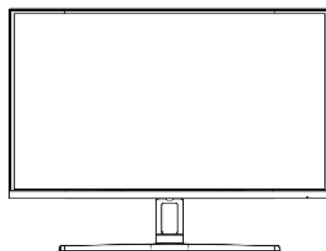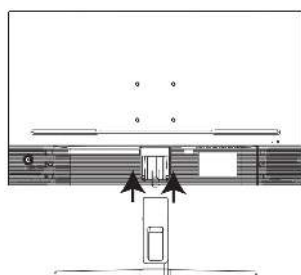


VESA Mount




VESA mounting pattern 75x75mm, screw size M4.

Note: VESA mount and Mounting accessories are not included.

1. Open the box, remove the monitor with the protection foam attached and gently place it on a desktop or table. Remove the components and the foam covering the rear of the monitor.
2. Press the 'Release' button to remove the stand plate. If the monitor is already attached to the stand, remove the stand.

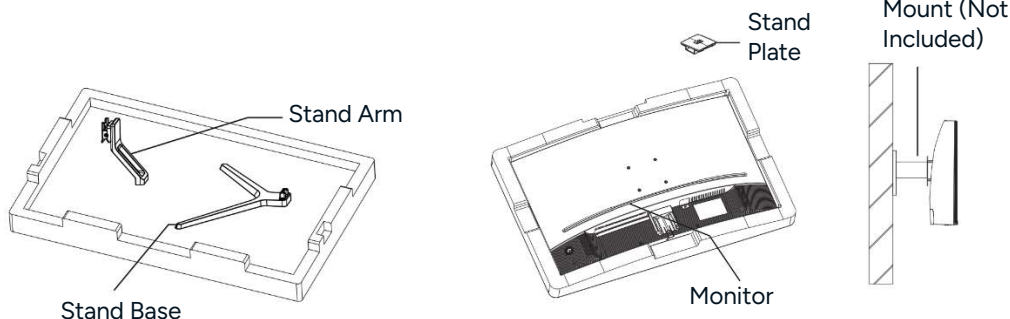

3. Assemble the mount according to the instructions provided with the mount.

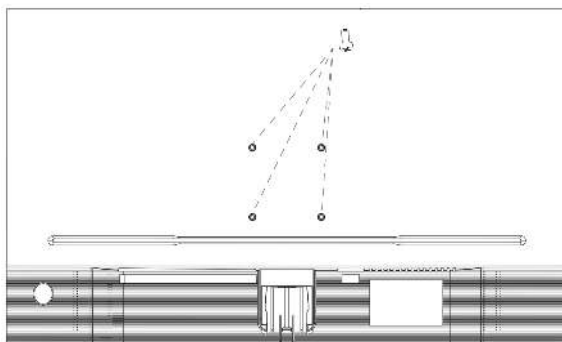

Connectivity


Step 1: Connect the Monitor to the Computer

Note:

Ensure the monitor is powered off before connecting any cables.


Option 1: HDMI Connection

1. Connect one end of an HDMI cable to the HDMI port on your computer.
2. Connect the other end to one of the HDMI ports on the monitor.

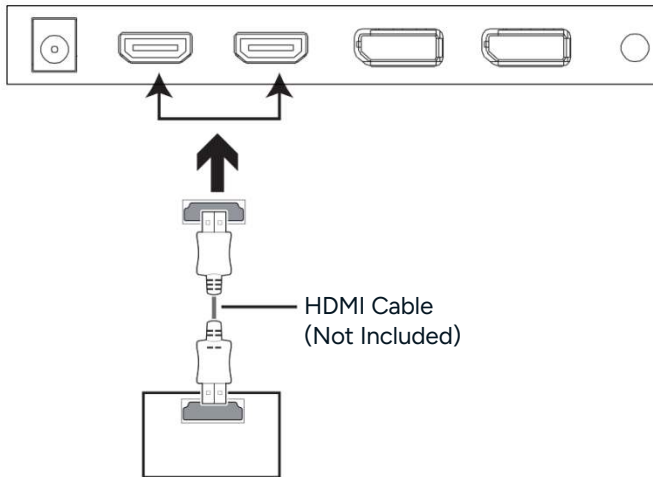


Option 2: DisplayPort Connection

1. Connect one end of the provided DP cable to the DP port on your computer.
2. Connect the other end to one of the DP ports on the monitor.

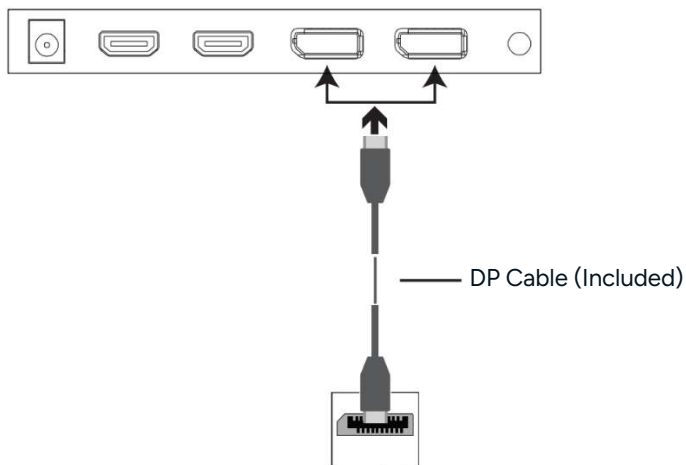

Step 2: Connect the Monitor to Power


Connect the provided power adaptor to the monitor power input port, then connect the other end to an electrical outlet.

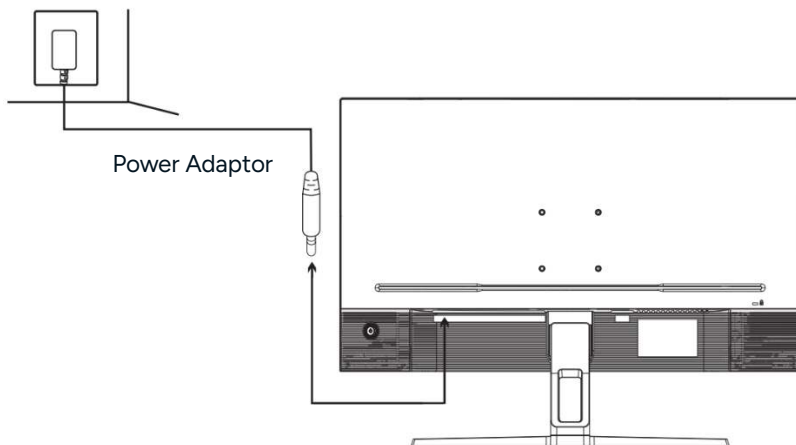

Step 3: Connect an External Audio Device (optional)

Earphones (Audio Out)

- Connect earphones, headphones, or external speakers (not provided) to the 3.5mm audio port on the monitor.
- If no sound is heard, ensure the monitor is selected as the default playback device in your computer's audio settings.

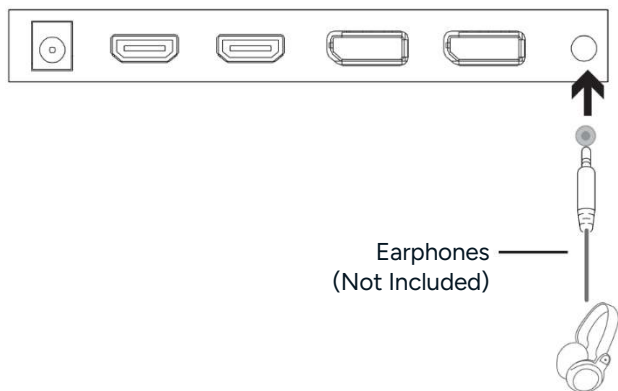

Operation

Powering On/Off

Press and hold the joystick for 3-5 seconds to turn the monitor on or off.

FreeSync

- To use this feature, ensure your hardware has FreeSync capability and the graphics drivers are fully up to date.
- After connecting, you may receive a prompt to enable the feature on your computer. If you do not receive the prompt, you may need to enable the function in your graphics card menu.
- See your graphics card manufacturer's documentation for instructions on how to turn on and/or enable FreeSync.

On Screen Display (OSD)

- The On-Screen Display (OSD) Menu may be used to adjust your monitor's settings and appears on the screen after turning on the monitor and pressing the 'Power' button.
- When using the monitor for the first time, it will configure optimal settings automatically.

Note:

The OSD is updated on an ongoing basis. Descriptions of some functions may vary slightly. Refer to actual operation for the final effect.

Using the OSD Menu

- 1. Press the joystick to open the On-Screen Display (OSD) menu.
- 2. Move the joystick up, down, left, or right to navigate through the menu options.
- 3. Press the joystick to select or adjust a highlighted setting.
- 4. After adjusting, press the joystick again to save changes and return to the previous menu.




Note:

The joystick directions are described as if you are facing the screen.

Menu	Sub-Menu	Options	Description
	Brightness	~0-100	Adjust display brightness
	Contrast	~0-100	Adjust display contrast
	ECO	Standard/E-Book/Movie/Picture	Preset colour modes
	Aspect Ratio	Auto/ Wide Screen/4:3/1:1	Select the desired aspect ration
	Sharpness	~0-10	Select the desired sharpness
	Professional Mode	Standard/sRGB/A dobe RGB/DCI-P3	Select the desired professional mode

● ● ●	Colour Temperature	Normal/ Warm/ Cool/ USER	Select colour temperature mode or allow manual colour configuration (USER)
	Red	~0-100	Adjust red value (USER mode only)
	Green	~0-100	Adjust green value (USER mode only)
	Blue	~0-100	Adjust blue value (USER mode only)
	6-axis Hue	Red/Green/Blue/ Yellow/ Magenta/ Cyan/ Hue Reset	Select the desired hue
	6-axis Saturate	Red/Green/Blue/ Yellow/ Magenta/ Cyan/ Saturate Reset	Select the desired saturation
	Low Blue Light	Off/Low/ Medium/ High/ Maximum High	Low Blue light reduction adjustment
	RGB Range	Auto/ RGB (0-255)/ RGB (16-235)	Select the desired RGB range
	Colour Format	Auto/R/G/B/ Y/U/V	When using a docking station to convert the signal, if the colour picture is abnormal due to the wrong signal, this function can be adjusted to correct the colour. If the signal is correct and the colour is normal, this function is turned off by default.

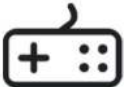	Game Mode	Standard/ G1/ G2/ G3/ FPS/ RTS	Select the desired game mode
	Game Cross	Off/ Cross1/ Cross2/ Cross3/ Cross4	Select the desired cross hair
	Response Time	Off/ Normal/ Best/ High/ Extreme	Select the desired response time
	Dynamic Response Time	Off/On	This option will allow you to open or close Dynamic Response Time
	FreeSync	Off/On	Enable or disable AMD FreeSync
	Refresh Rate	Off/On	Enable or disable monitor Refresh rate
	Owl Sight	Off/ Centre/ Full	The owl function enhances details in the black field through local dimming without losing colour
	HDR	Off/On/ Auto	Enable or disable HDR
	MPRT	Off/ Weak/ Strong	When the refresh rate reaches 75Hz can MPRT be turned on
	DCR	Off/On	Turns dynamic contrast ratio on/off
	DDC/CI	Off/On	Enable or disable monitor DDC/CI
	Language	English, 简体中文, 한국어, PVCC К И Й, Español, 日本語, Français	Selects OSD language
	Input Source	Auto Source/ HDMI1/ HDMI2/ DP1/ DP2	Select input source or allow manual selection
	OSD H-Position	0-100	Adjust OSD horizontal position
	OSD V-Position	0-100	Adjust OSD vertical position
	Reset	/	Restore factory defaults

Picture Modes

1. Press the 'Power' button to the left to switch picture modes (Standard, E-Book, Movie, Picture).
2. Standard mode is suitable for most activities.



Cleaning & Care

- Unplug the monitor before cleaning it.
- Use a clean, slightly dampened cloth to wipe the main monitor body.
- To clean the screen, turn it off unplug it and wait for it to cool completely, then wipe it with a dry micro-fibre cloth.
- Do not use cleaning alcohol, ammonia-based liquids or other harsh cleaners.

Specifications

Screen Size	32"
Aspect Ratio	16:9
Brightness	300cd/m ² (typical)
Panel	VA
Resolution	2560x1440
Refresh Rate	240Hz
Response Time	1ms
Viewing Angle	≥178°(H)/178°(V)
Contrast Ratio	4000:1
VESA Mounting	75 x 75mm
Colours	16.7M
Signal Input	HDMIx2, DPx2
Power	DC 24V == 2.7A
Audio	
Speakers	No
Audio Out	Yes
Accessories	
Power Adapter	Yes
DP Cable	Yes
Additional Functions	
Low Blue Light	Yes
Flicker Free	Yes
Physical Dimensions	
Dimensions (With Stand)	712.14 x 520.14 x 224.97mm
Dimensions (Without Stand)	712.14 x 421.58 x 101.31mm
Net Weight	6.07kg
Gross Weight	8.28kg

Notes

[illegible]

Need more information?

We hope that this user guide has given you the assistance needed for a simple set-up.

For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **help.Kogan.com**.

