



# RC Cyklone Aqua Tread

English

Age 5+

#82142

## WARNING:

**CHOKING HAZARD - Small parts.**  
Not for children under 3 years.

### Maisto Radio Control Vehicles

Please keep this owner's instruction manual for future reference. It contains important information.

We reserve the right to improve/revise the product specifications without notice.

Class 1 LED Product

### Contents:

 
 
 
RC Vehicle x 1 RC Transmitter x 1 Owner's Instruction Manual x 1

### Battery Requirement:

Vehicle: 4 x 1.5V "AAA" LR03/R03 batteries.  
Transmitter: 2 x 1.5V "AAA" LR03/R03 batteries.

### Battery Installation for the Transmitter: (Refer to Diagram 1)

1. Use screwdriver to loosen the screw on the battery cover and to open the battery cover. (Screwdriver is not included)
2. Install 2 new 1.5V "AAA" LR03/R03 batteries with correct polarity (+/-) as shown inside the battery compartment.
3. Install the battery cover and then tighten the screw on the battery cover.

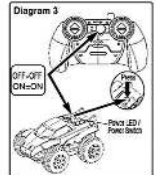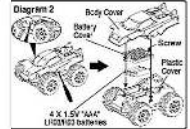
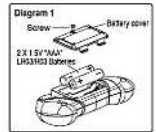


### Battery Installation for the Vehicle: (Refer to Diagram 2 & 3)

1. Switch OFF the power of the vehicle and to open the body cover. (Screwdriver is not included)
2. Use screwdriver to loosen the screw on the battery cover and to open the battery cover. (Screwdriver is not included)
3. Install 4 new 1.5V "AAA" LR03/R03 batteries with correct polarity (+/-) as shown inside the battery compartment.
4. Install the battery cover and then tighten the screw on the battery cover.
5. Install the body cover back to the vehicle.

### How to play: (Refer to Diagram 2, 3, 4 & 5)

  1. Switch ON the vehicle (the Power LED will light up) and controller to match the frequency.
2. If the frequency of the vehicle and controller does not match, switch off both the vehicle and controller, then turn them on again.
3. Push the button on the controller up or down to move the vehicle.
4. The vehicle is able to drive on land and water. When drive on the water, need periodically open the Plastic Cover to remove any trapped water inside the vehicle.

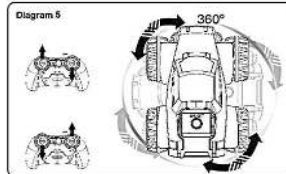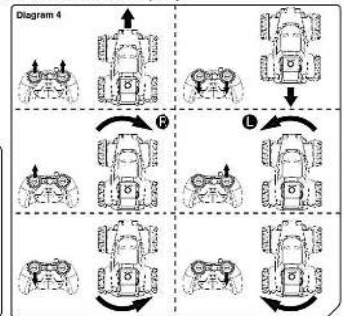

www.maisto.com



English

5. The "Power LED" on the vehicle will not flash nor stay on if the battery has run out power.
6. Switch off the controller and vehicle when not in play.

### Performance Tips:

1. Do not drive the vehicle on grass, sand.
2. Do not drive the vehicle in windy or rainy weather.
3. Do not drive the vehicle into any hard object.
4. Keep fingers, hair and loose clothing away from the vehicle.
5. The operating range can be affected by a variety of factors:
  - a) Weak transmitter or vehicle batteries.
  - b) Interference from other items that emit radio frequency signals such as another R/C item on the same frequency, CB radios, cordless phones, high voltage transformers, etc.
6. Outdoor usage is recommended in order to get optimal control range.
7. Do not operate the vehicle in salt water. It is designed for use in fresh water only.
8. Be sure to bring the vehicle back shore (out of water) before the battery runs out.

### Battery use:

1. Alkaline batteries are recommended.
2. Only batteries of the same or equivalent type as recommended are to be used.
3. Do not mix alkaline, standard or rechargeable batteries.
4. Do not mix old and new batteries or different types of batteries.
5. Non-rechargeable batteries are not to be charged.
6. Rechargeable batteries are only to be charged under adult supervision.
7. Rechargeable batteries are to be removed from the product before they are charged.
8. Be sure to insert batteries with correct polarities and always follow the battery manufacturer's instructions.
9. Remove all batteries from the product when not in use for long periods of time.
10. Exhausted batteries are to be removed from the product.
11. The supply terminals are not to be short-circuited.
12. Dispose of batteries properly. Do not dispose of batteries in fire – it may cause them to explode or leak causing injury or damage.
13. Battery change must only be made by adult.

### Cautions:

1. Do not attempt to disassemble the products.
2. Do not operate the vehicle with same frequency with other players in same location. This will interfere and cause the vehicle to lose control.
3. Make sure the batteries are installed with correct polarity (+/-) as shown inside the battery compartment.
4. Remove the package, take out all accessories and assemble the product before giving it to children to play.
5. When finished playing, remove the unit from the water. Rinse the unit with clean water and wipe with a dry cloth. Suspend the unit in an upright position to dry.

### Disposal of batteries

Batteries should not be disposed of in the household waste. As the consumer you are legally obliged to return batteries containing harmful substances and all other used batteries. You can hand in your old batteries at public collection points in your area or wherever batteries are sold.

You will find these chemical abbreviations along with a crossed-out refuse bin on batteries containing harmful substances:



Pb = Battery contains lead  
Cd = Battery contains cadmium  
Hg = Battery contains mercury

### FCC Label Compliance Statement:

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:  
1. This device may not cause harmful interference, and  
2. This device must accept any interference received, including interference that may cause undesired operation.  
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If



English

this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning : Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### RSS-210 Compliance Statement:

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference;
2. This device must accept any interference, including interference that may cause undesired operation of the device.

### Troubleshooting:

Problem	Cause	Correction
No Function	Low battery level Battery polarities are reversed The wheels are obstructed by foreign objects	Replace with new batteries Insert the batteries with correct polarities as shown on the battery compartment Remove foreign objects on the vehicle / wheels
Drive Slow / Poor Turning Signal	Low battery level The wheels are obstructed by foreign objects	Replace with new batteries Remove foreign objects on the vehicle / wheels
Poor distance control	Low battery level Strong interference of surroundings	Replace with new batteries Move to a better location for playing

Maisto International, Inc., Fontana, CA 92336, U.S.A.



www.maisto.com

MADE IN CHINA

材質: 書紙  
Color: 1C (Black)