









 


 




 








 










Original		Rechange		Original		Rechange	
	POWER		Power		8		8
	MUTE		Mute / Dimmer		9		9
	P. MODE		Picture / Format		-/--		Shift + Guide / EPG / -/--
	S. MODE		Sound / Title		0		0
	TV / RADIO		TV/Radio /		BACK		Back / Return
	NICAM		Shift + Audio / Lang I/II		REC. MENU		D.Menu / Top
	DISPLAY		Display / Media		PLAY / PAUSE		Play / Slow
	ZOOM / PC.A		Shift + Zoom /		SKIP PREV		I << / Preset-
	SLEEP		Sleep / Timer		SKIP NEXT		>> I / Preset+
	EDIT		Shift + Text /		REC		Rec / Rec Mode
	1		1		STOP		Stop / Hold
	2		2		REW		<< / Tune-
	3		3		FWD		>> / Tune+
	4		4		CH+		CH+ / Page+
	5		5		SOURCE		AV / Input / RDS
	6		6		VOL+		Vol+
	7		7		CH-		CH- / Page-





Original		Rechange		Original		Rechange	
	VOL-		Vol-		UPDATE / A-B		Shift + Yellow / YouTube /
	MENU		Menu / Home		SUBPAGE /		Audio / Lang I/II
	EXIT		Exit / Cancel / Clear		HOLD / FRE. / SUB. T.		Shift + Stop /
	UP		Up		RED / INFO		Shift + Info / Angle
	LEFT		Left		RED / INFO		Red / Netflix / Search
	OK		OK		Green / Angle		Info / Angle
	RIGHT		Right		Green / Angle		Green / APP / Repeat
	DOWN		Down		YELLOW / SLOW		Yellow / YouTube / Repeat
	FAV		Fav / Marker / PC		BLUE / EJECT		Blue / Prime Video / Random
	EPG		Guide / EPG / -/--		EJECT		Eject / Surround
	USB		Shift + 8				
	SETUP / ON/OFF		Setup / OPT /				
	MIX / MENU		Smart / List				
	INDEX / PCB		Text / Goto				
	ZOOM / SIZE		Zoom / Size				
	REVEAL / SUBT. / REP.		Shift + Green / APP /				
	SUB. T.		Subtitle / EQ				

