

Ruko[®]

3+
for age

Disclaimer & Safety Guidelines

v2.0 2021.08



Carle

1 Safety at a Glance

1.1 Glossary

- The following terms are used throughout the product literature to indicate various levels of potential harm when operating this product:



1.2 DISCLAIMER AND WARNING

- Please read this Disclaimer & Warning and Safety Guidelines carefully before using our product.
- This product is not recommended for people under the age of 3.
- By using this product, you hereby agree to this disclaimer and signify that you have read it fully. You agree that you are responsible for your own conduct and damaged caused while using this product, and its consequences.
- You agree to use this product only for purpose that are proper and in accordance with local regulations, terms and all applicable polices and guidelines Ruko may make available.
- When using this product, please be sure to strictly abide by the specification requirements and safety guidelines sated in this document.
- Any personal injury property damage, legal disputes and all other adverse events caused by the violation of the safety instructions or due to any other factor, WILL NOT be Ruko's responsibility.

1.3 ATTENTION

- Suitable for users aged 3 and above.
- Keep the product away from fire and heat. In addition, please keep it dry and clean.
- Please take good care of the product. Don' t apply too much force while holding it.
- Please use the robot on a flat surface.
- Please keep a safe distance from the robot while it is operating.
- While the robot is operating, please don't hold its joints to avoid pinching your fingers and damaging the robot.
- Please use the provided charger to recharge the robot.
- Please don't disassemble the robot's joints on your own. If you need to do so, please contact our company first.
- If you need to disassemble or repair the robot , please visit the nearest after-sales service sites or contact our service team.

 
- If the robot behaves abnormally, please cut off the power to avoid finger-pinching and robot damage.
- While operating the robot, please don't put it at an elevated position or a place close to edges to avoid the risks of falling down and damage.
- The company cannot be held liable for any damage resulting from inappropriate use.
- In order to guarantee long service life, we recommend not using the robot for longer than one hour during a single use.




- Please cut the power off, stop using the robot, and contact our after-sales service team under the following circumstances :
 - The robot is emitting smoke or scorched smell.
 - Water or other foreign matters get inside the robot.
 - The robot is damaged. With updated versions, the built-in apps of the robot and the pictures of the apps might vary. This manual contains important information. Please keep it for future reference.

2 Battery Guidelines

- It is prohibited to use computer USB, simple USB, and inferior charging cables for charging.

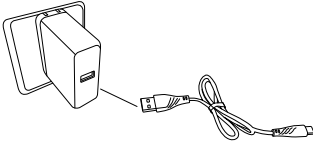


USB Adapter
(5V/2A)

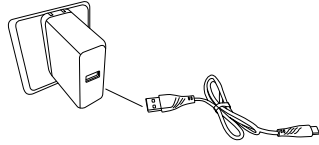 


USB Adapter
(>5V/2A)

 -
- It is forbidden to overcharge the battery, please remove charging cable in time after fully charged to avoid damage due to overcharge.

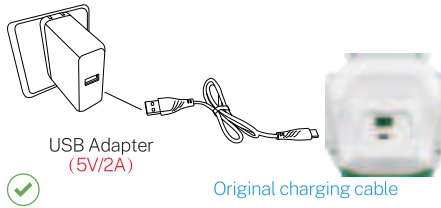


USB Adapter
(5V/2A)

 Original charging cable

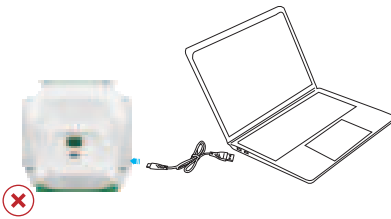

✗

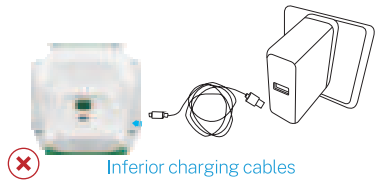 

✗

Inferior charging cables

3 Daily Maintenance

 
- Do not allow Robot and Transmitter to touch with any kind of liquid, or put it under sun exposure, severely squeezed, and dropped from high altitude.



❌ Liquid




❌ Sun Exposure



❌ Severely Squeezed

 - Do not put the battery in the Transmitter when not in use. Because battery will discharge, power will slowly decrease.




- Detach the USB charger when the battery is fully charged.
- Fully charge the battery at least once every month to maintain battery health.
- DO NOT disassemble or pierce a battery in any way or it may leak, catch fire, or explode.
- DO NOT touch the electrolytes in damaged batteries, it may injure your skin or eyes.
- Discharge the Robot Batteries to 50% or lower during transport.
- Fully charge the battery before using it for the first time.

4 Environment Guidelines

- Please play with the robot on a flat and smooth ground, do not play with robots on high places, uneven, sand, grass, beds, sofas etc.



 - Violent strike or trampling is strictly prohibited. Repeated strike or trampling may cause damage to the robot and oil paint may fall off.

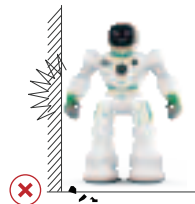


5 Preparation Before Play


- Please make sure that the power of the robot is turned on before playing.
- Turn on the robot, then turn on the remote controller, please pair it with robot.
- Connect robot Bluetooth with your phone, make sure that the App in the phone is connected to the Bluetooth named "JT_xxxx". (Reference to the Bluetooth Guidelines)
- Remember to start motors before playing. (Detail steps, please refer to the Quick Start Guide)

6 Bluetooth Guidelines

 - Open the Bluetooth settings and connect your phone to the advice, "JT_Speaker". The robot will then function as a Bluetooth speaker.

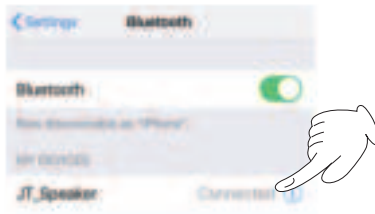

 -
- Open Carle APP, connection with robot Bluetooth "JT_xxxx", please wait for about 2-10 seconds, then can control the Carle robot through App.

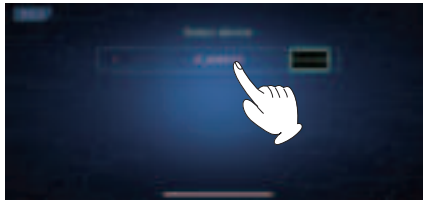

-
- If you still without connect to Bluetooth, please check whether the Bluetooth of your phone.



7 Problems You May Encounter

7.1 Transmitter cannot control the robot

- Check if the remote control has power.
- Can not be used under strong light.
- Need to aim at the robot head to control.
- Only be controlled at a distance of 3-5 meters without any obstructions.

 
7.2 Voice can not be recognized

- Voice commands that did not follow the instructions.
- Voice pronunciation is not standard or speaking speed is too fast.
- The robot is running (need to stop to recognize voice commands).
- Noisy environment.




7.3 Can not connect to APP

- Bluetooth is not turned on, APP is Bluetooth connection, *not WiFi.
- Whether it is connected to the wrong Bluetooth, one is a Bluetooth Playback (named “JT_Speaker”) and the other is a Bluetooth APP (named “JT_xxxx”) control.
- Need to wake up and connect app again.

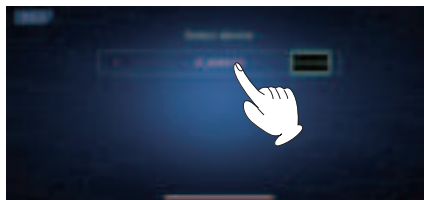

Ruko[®]

www.rukotoy.com

If you have any questions about this product, please contact Ruko by sending a message to Rukobrandstore@gmail.com  +1 (626) 215 4337 (Available from 6 pm to 3 am PST)