

Active Stylus Pen

S Pen




Instructions for Use

No connection required
use directly



It can be used for writing, drawing,
and taking notes.

Pen tip replacement

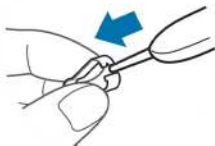

Use tweezers to hold the pen tip
and remove it



Insert the new nib into the Pen

Eraser button



Specification

- Model:S Pen
- Dimension:145x8mm
- Battery:No charging required
- Fine Point Tips Size:0.5mm



Applicable model

Samsung Galaxy Tab S6
Samsung Galaxy Tab S6 Lite
Samsung Galaxy Tab S7
Samsung Galaxy Tab S7+
Samsung Galaxy Tab S7
Samsung Galaxy Tab S8
Samsung Galaxy Tab S8+
Samsung Galaxy Tab S8 Ultra
Samsung Galaxy Tab A8
Samsung Galaxy Tab A9