

Quick guide for the SCANGRIP APP

Table of contents

1. Settings	2
2. Scanning and connecting.....	3
3. Group function	4
3.1. Units screen.....	4
3.2. Groups screen	5
3.3. Group control screen - Work lights	6
3.4. Group control screen - UV lamps	7
4. NOVA 10K	8
5. NOVA SPS series	9
6. MULTIMATCH Series.....	10
7. AREA 10 SPS.....	11
8. NOVA CAS / CONNECT series	12
9. AREA 10 CAS / CONNECT	13
10. MULTIMATCH CONNECT	14
11. SITE LIGHT Series	15
12. UV-EXTREME Series	16
12.1. Safety screen	17

1. Settings

Settings

Enable or disable notification of low battery or adjust the time in which the app scans for new lamps.

Consent

Review and change your consent to gathering of analytical and crash data.

Web Site


Press to access our [Web site](#).

Privacy policy

Press to read the privacy policy.

Help

Press to access the [Scangrip App Quick Guide](#).

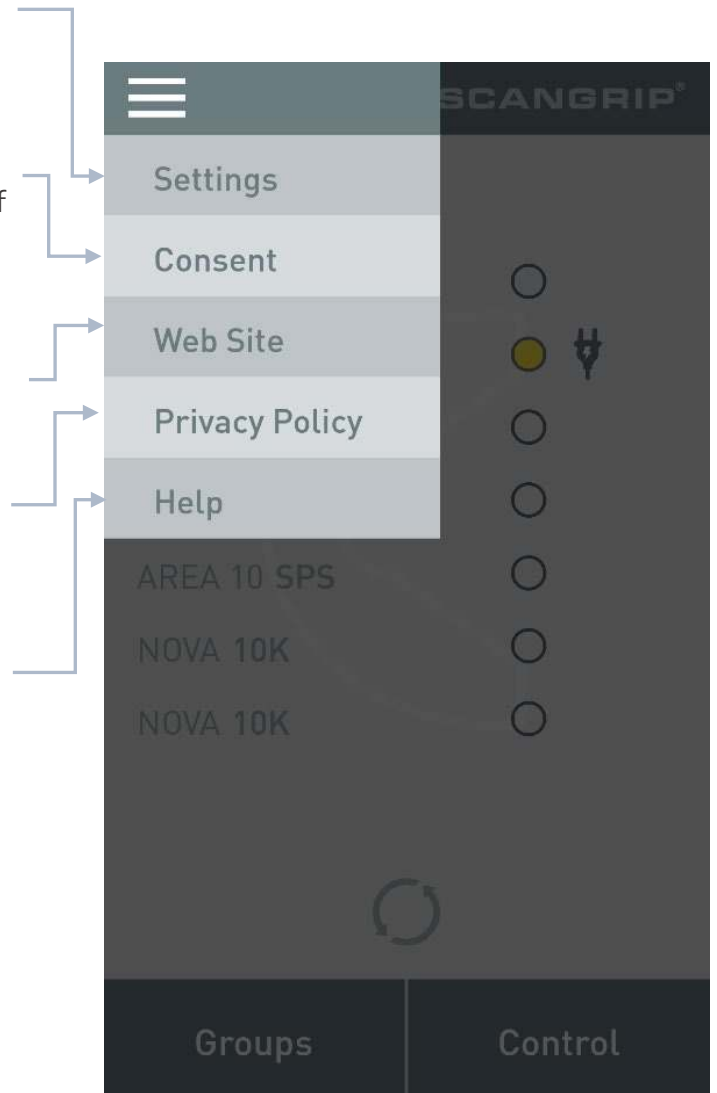

2. Scanning and connecting

Lamp status

Is shown when an active connection is made. Displays power status and if the lamp has PIN lock enabled.

Select up to 4 lamps

Select a lamp by pressing their name or the yellow selection dot.

Control > Lamp


Press "Control" and select a lamp to control one of the connected lights.

Refresh/Scan

Press the update icon or swipe down to update the list of lamps.

Groups

Press "Groups" to access Groups screen. Can also be accessed by swiping to the left.

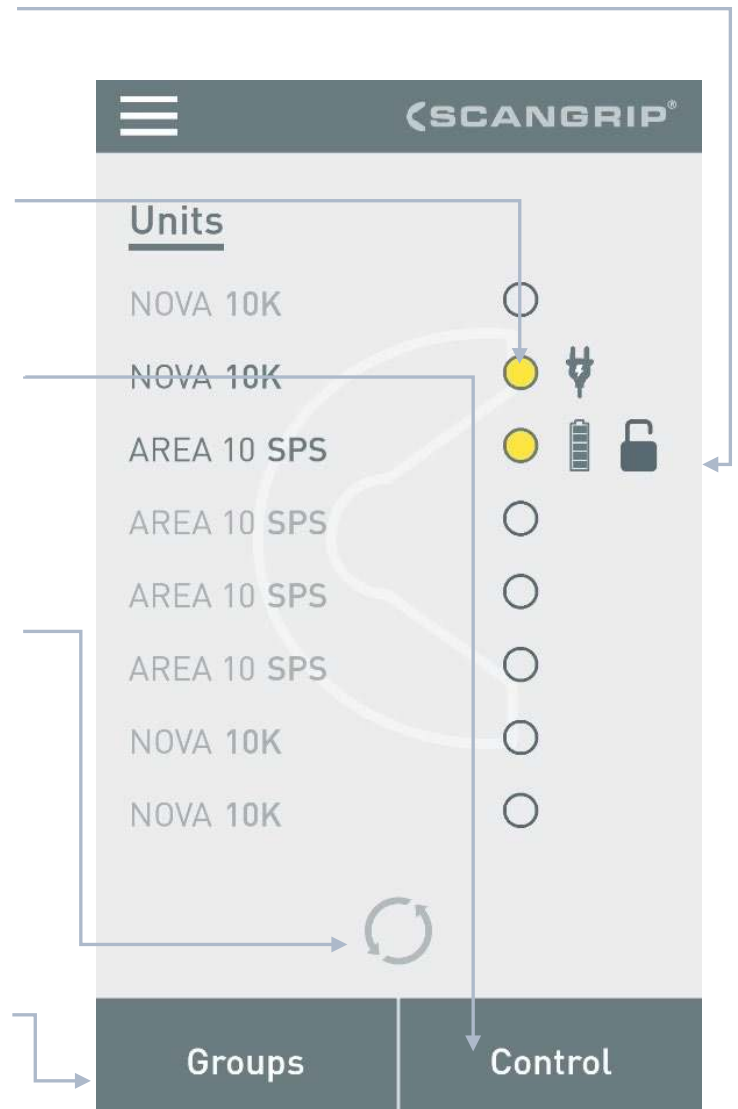

NOTE:

If the lamp or no lamps can be found on Android, check that location data (GPS) is enabled and the app has permission to access location.

3. Group function

3.1. Units screen

Select up to 4 lamps


Select a lamp by pressing name or the yellow selection dot.
NOVA 10K, NOVA SPS and NOVA CAS lamps can be grouped. So can AREA 10 SPS and AREA 10 CAS.
Other models can only be grouped with lamps from the same series.

Control -> Create group

Press "Control" and select "Create group" to create a group with the connected lights.

Groups

Press "Groups" to access Groups screen. Can also be accessed by swiping to the left.

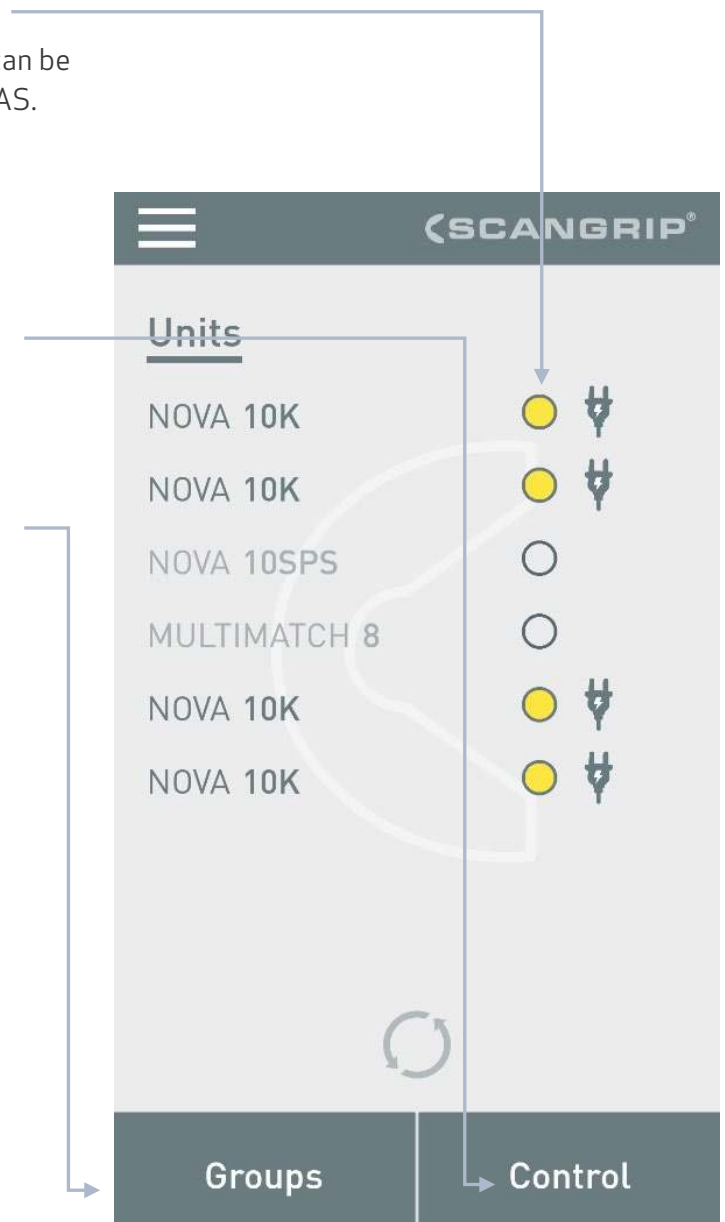

3.2.Groups screen

Control


Press to control or delete the selected group.

Group selection

Select a group by pressing name or the yellow selection dot.

Units screen

Press to access Units screen.

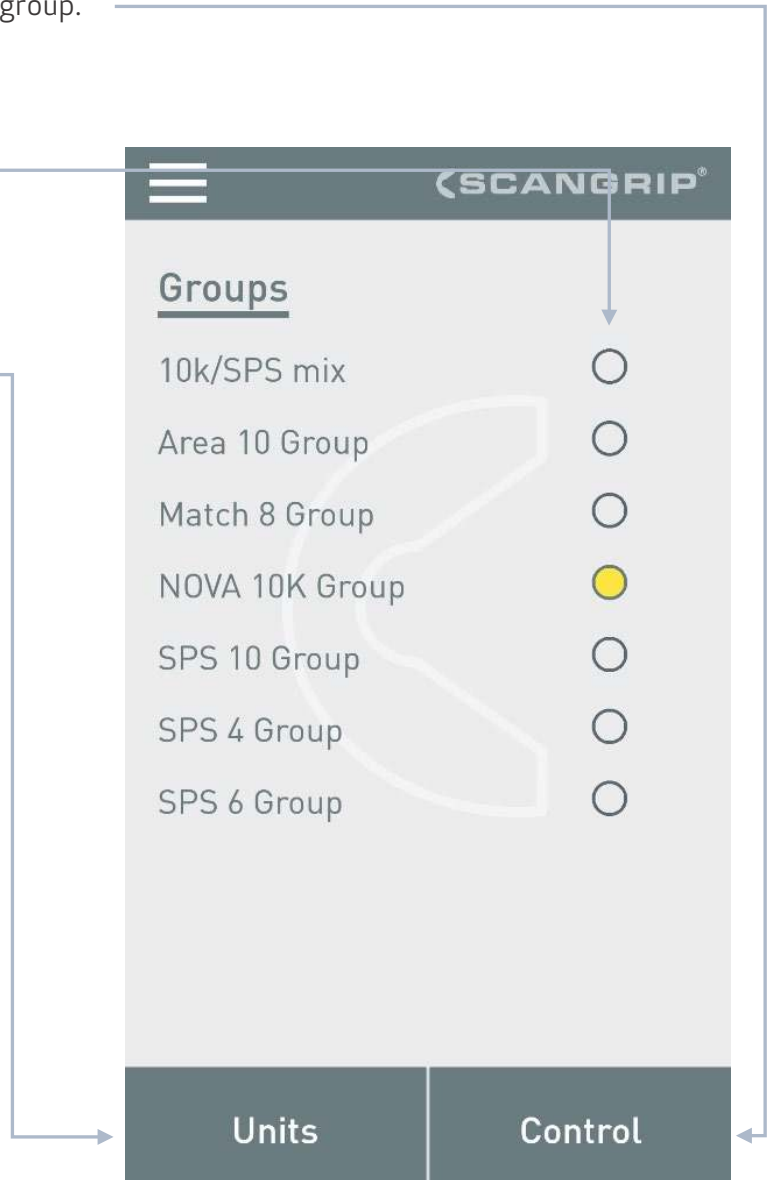

3.3.Group control screen - Work lights

On/Off synchronization

The first press of the button turns on the lamps and synchronizes the group to the chosen setting.

Light icon

Will be off until first press on On/Off, no matter if a lamp in the group is on.

Sliders


Values will not be sent to lamps until the group is turned on.

Rename

Press to change the group name in the app.

Groups

Press to access Groups screen.

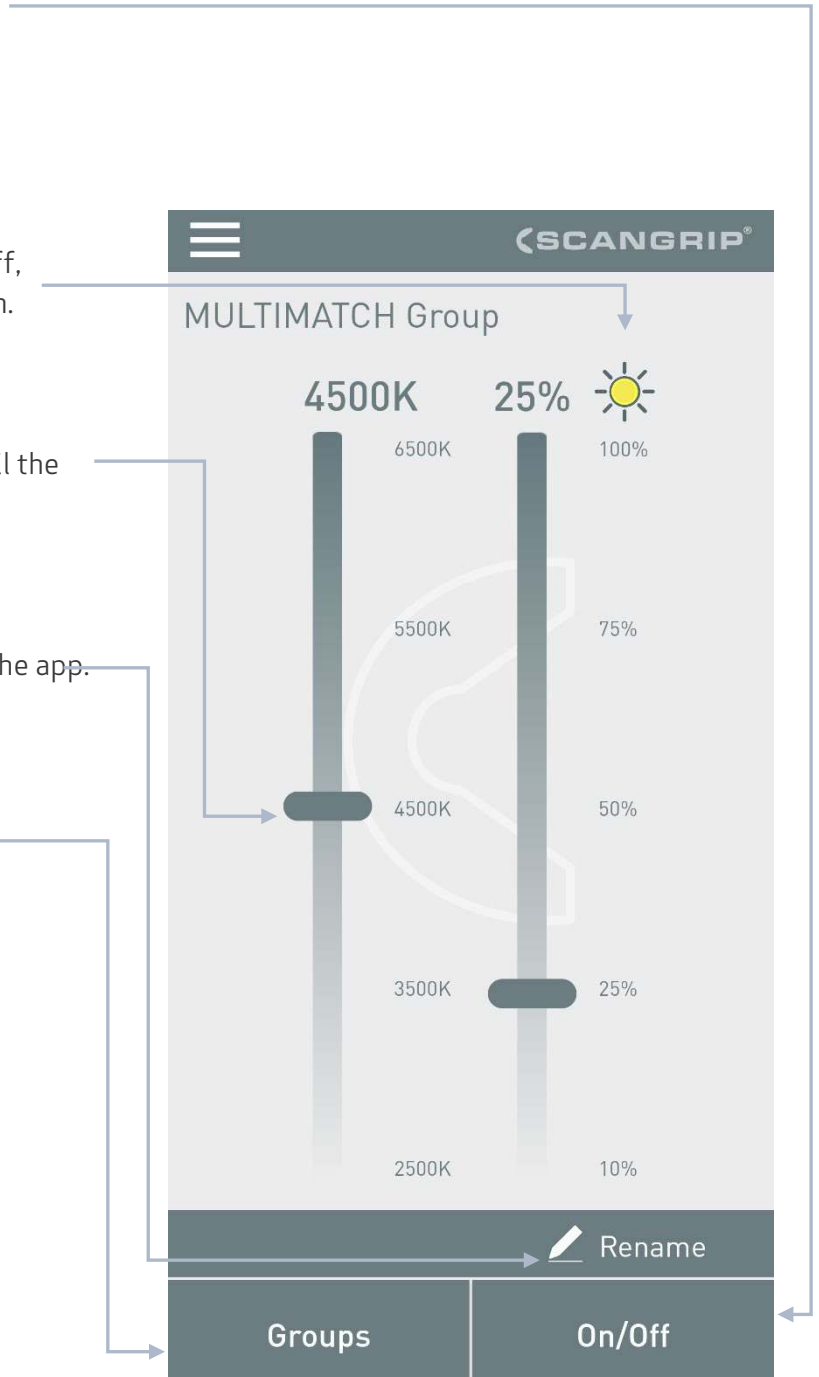

3.4.Group control screen - UV lamps

On/Off synchronization

Pressing turns off all lamps if any is on.
Otherwise, pressing will enter the warning screen for the user to confirm before turning on all connected lamps with the set curing time.

Light icon

Will be on whenever a lamp in the group is on.

Remaining curing time

Display set curing time when off and counts down during curing.

Curing time slider


Adjust slider or press value to the right to change the curing time for all lamps in the group.
Slider moves down with remaining time.
Changing while curing restarts the countdown from that value.

Rename

Press to change the group name in the app.

Groups

Press to access Groups screen.

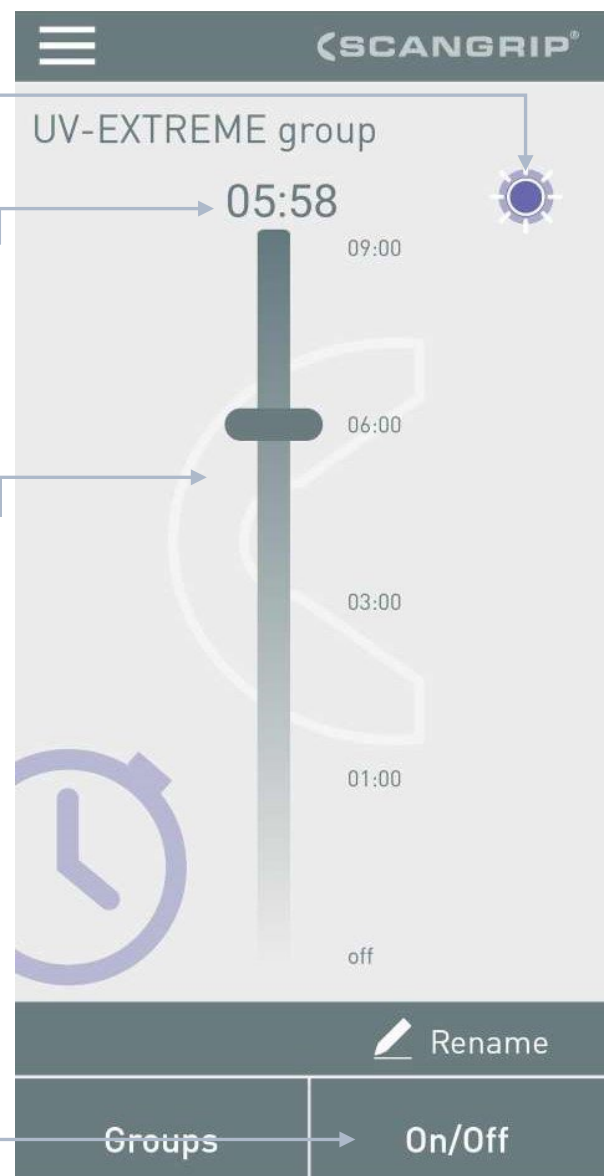

4. NOVA 10K

Light icon

Shows if the lamp is on and changes with the brightness.

Current brightness

Changes to display the current brightness as shown on the slider.

Brightness slider


Adjust slider or press value to the right to change the brightness.

Rename

Press to change the name of the lamp in the app.

Units

Press 'Units' button to return to the Units screen.

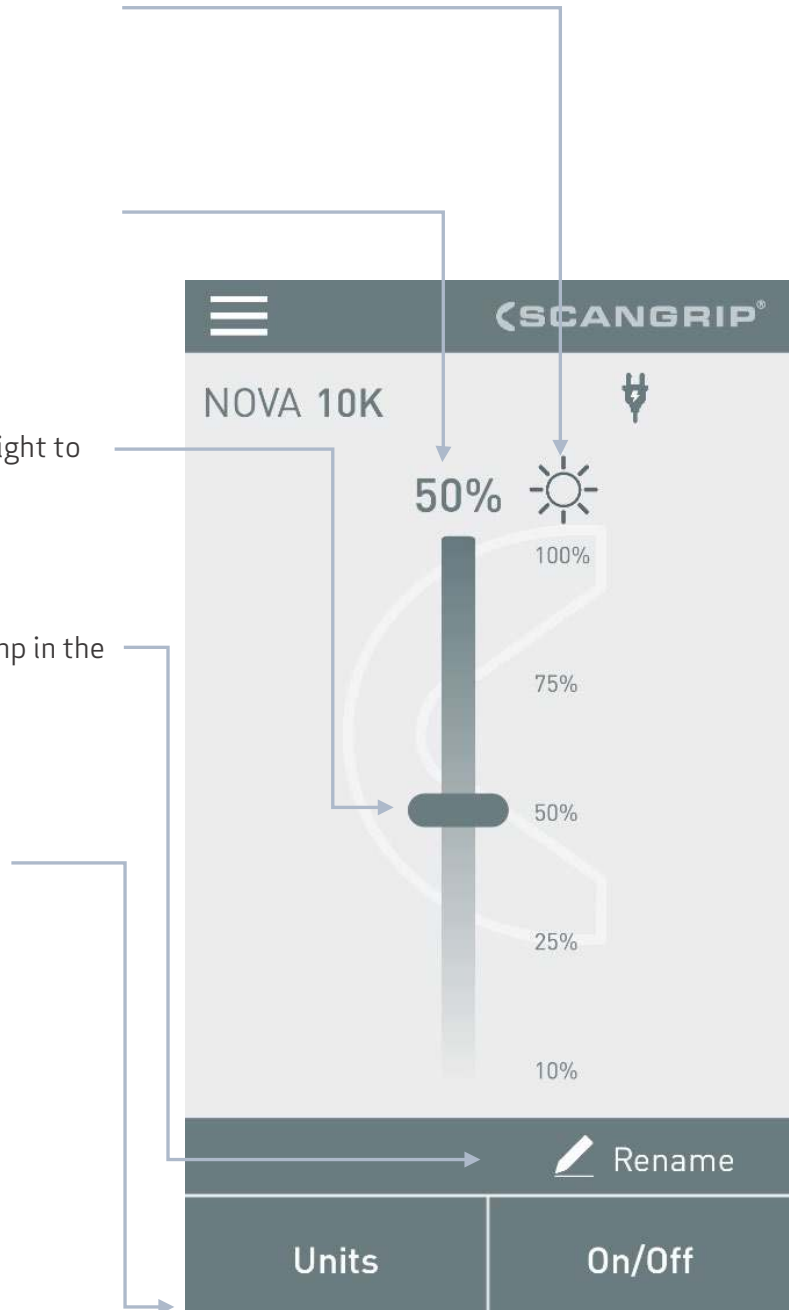

5. NOVA SPS series

Power status

Shows operation time left and battery level as well as when in back-up mode and connected to mains power. Time left is updated every time a command is sent.

Light icon

Shows if the lamp is on and changes with the brightness.

Current brightness

Changes to display the current brightness as shown on the slider.

Brightness slider

Adjust slider or press value to the right to change the brightness.

Rename


Press to change the name of the lamp in the app.

PIN lock

Shows PIN status. Press to lock or clear PIN code on lamp.

Units

Press 'Units' button to return to the Units screen.

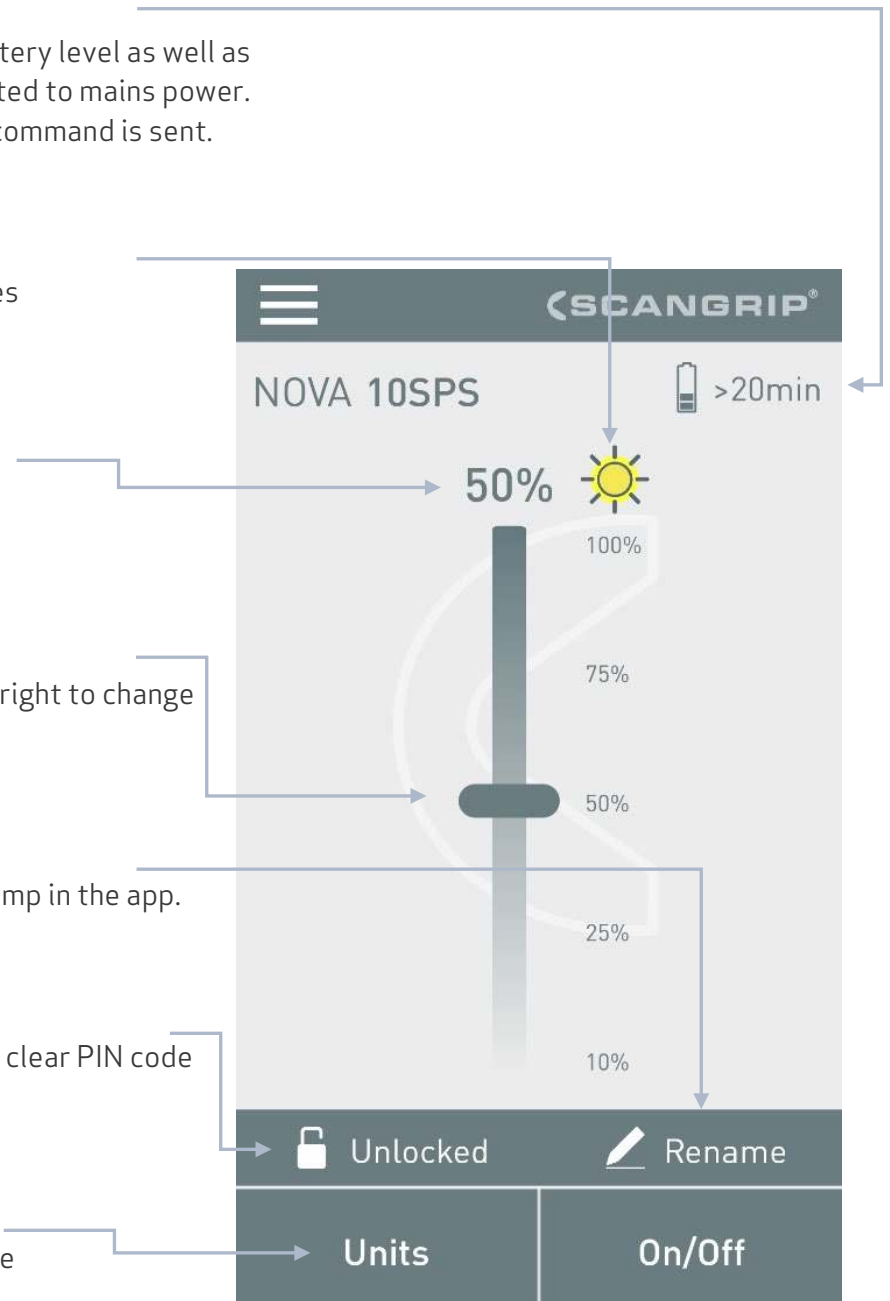

6. MULTIMATCH Series

Power status

Shows operation time left and battery level depending on whether it is connected to power supply or is in back-up mode. Time left is updated every time a command is sent.

Light icon

Shows if the lamp is on and changes with the brightness.

Current brightness

Changes to display the current brightness as shown on the slider.

Current CCT

Changes to display the current color temperature (CCT) as shown on the slider.

Brightness slider

Adjust slider or press value to the right to change the brightness.

CCT slider

Adjust slider or press value to the right to change the color temperature.

Rename


Press to change the name of the lamp in the app.

PIN lock

Shows PIN status. Press to lock or clear PIN code on lamp.

Units

Press 'Units' button to return to the Units screen.

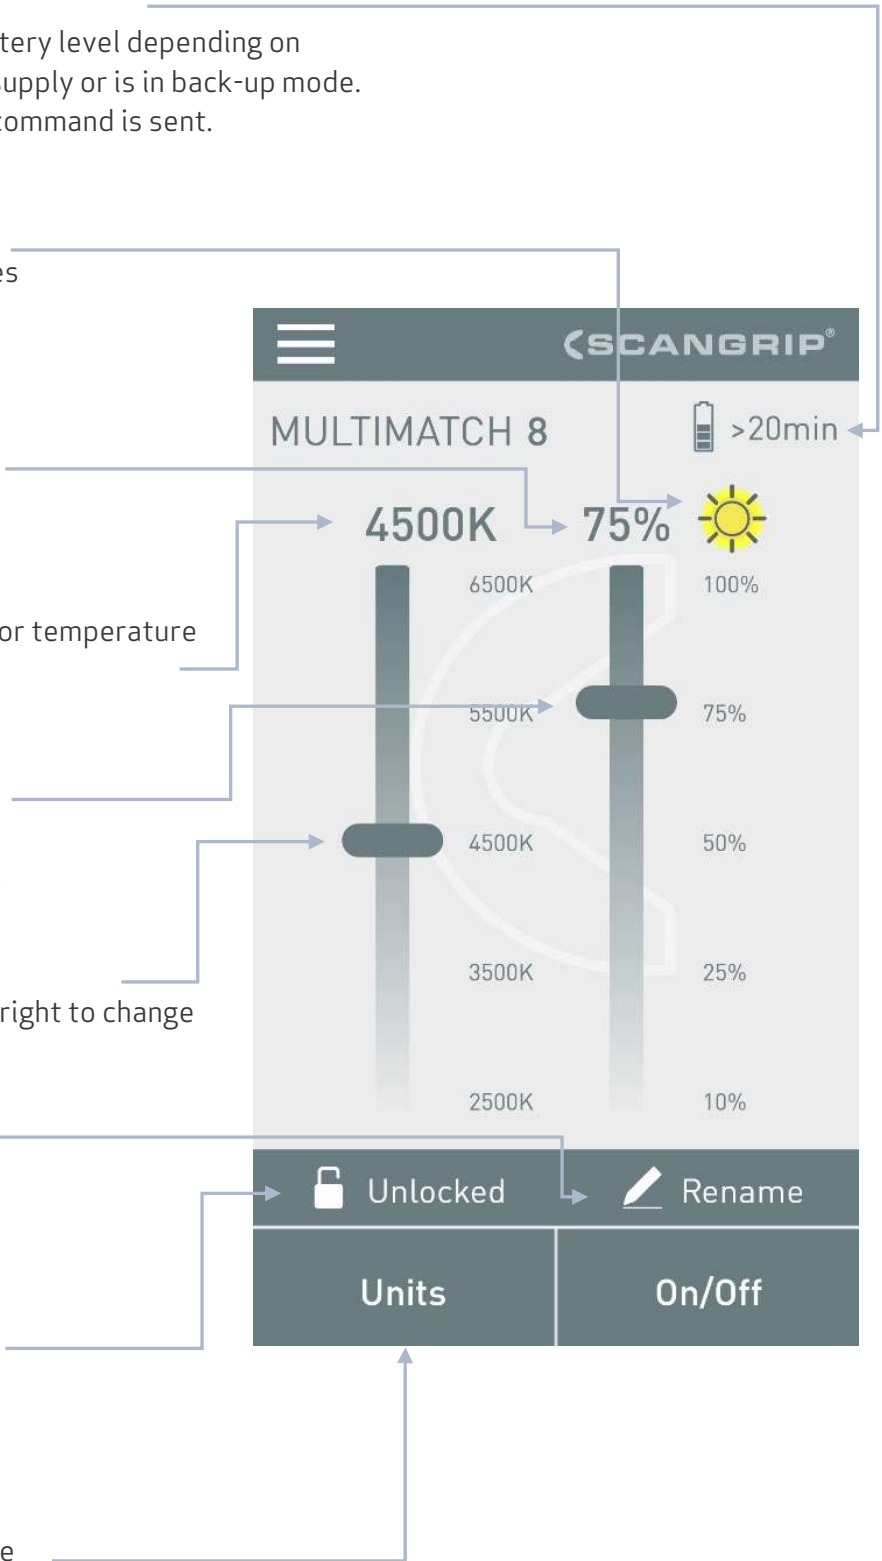

7. AREA 10 SPS

Power status

Shows operation time left and battery level as well as when in back-up mode and connected to mains power. Time left is updated every time a command is sent.

Light icon

Shows if the lamp is on and changes with the brightness.

Current brightness

Changes to display the current brightness as shown on the slider.

Brightness slider

Adjust slider or press value to the right to change the brightness.

180°/360° buttons

Press to change between complete and directional lighting.

Rename


Press to change the name of the lamp in the app.

PIN lock

Shows PIN status. Press to lock or clear PIN code on lamp.

Units

Press 'Units' button to return to the Units screen.

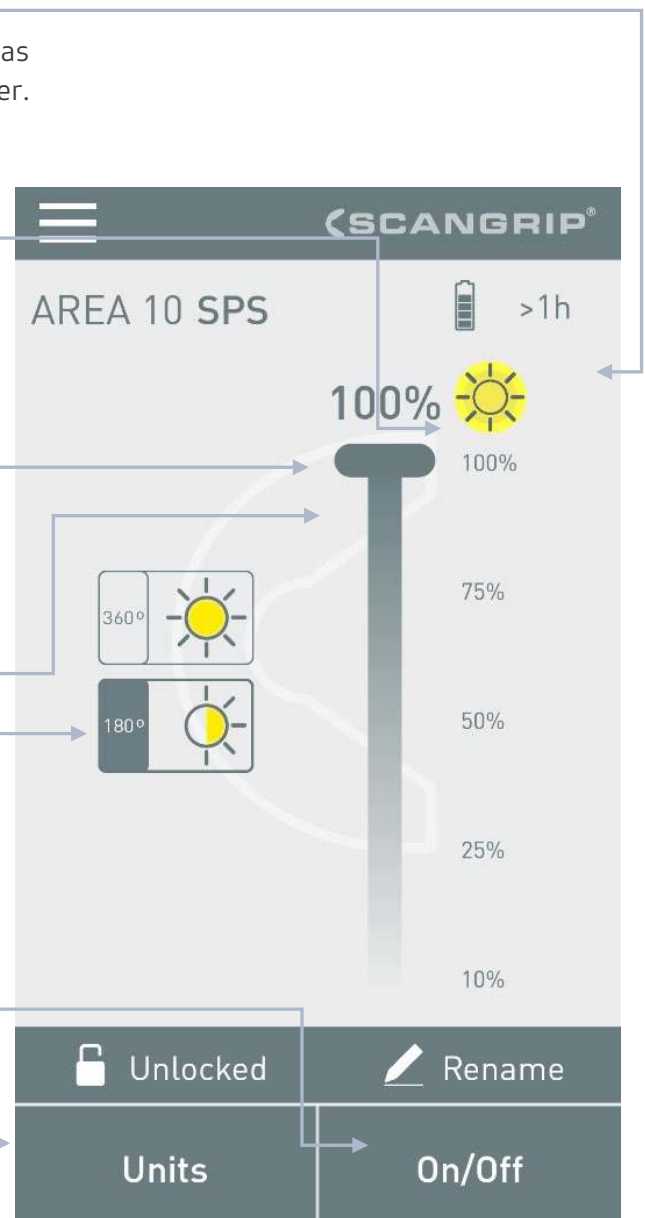

8. NOVA CAS / CONNECT series

Power status

Shows remaining battery in % and battery level depending on whether it is connected to power supply or is in back-up mode. Battery level is updated every time a command is sent.

Light icon

Shows if the lamp is on and changes with the brightness.

Current brightness

Changes to display the current brightness as shown on the slider.

Brightness slider

Adjust slider or press value to the right to change the brightness.

Rename


Press to change the name of the lamp in the app.

PIN lock

Shows PIN status. Press to lock or clear PIN code on lamp.

Units

Press 'Units' button to return to the Units screen.

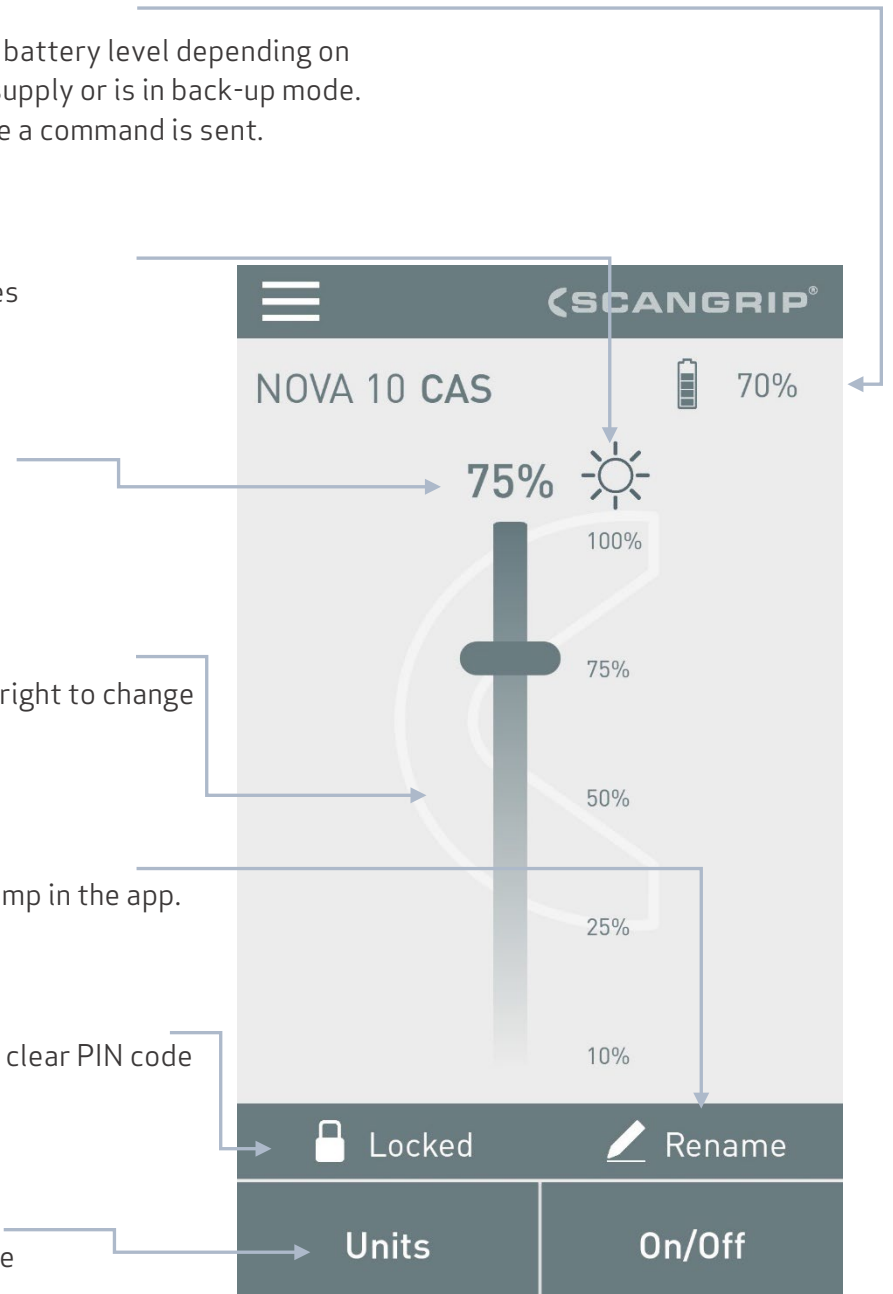

9. AREA 10 CAS / CONNECT

Power status

Shows remaining battery in % and battery level depending on whether it is connected to power supply or is in back-up mode. Battery level is updated every time a command is sent.

Light icon

Shows if the lamp is on and changes with the brightness.

Current brightness

Changes to display the current brightness as shown on the slider.

Brightness slider

Adjust slider or press value to the right to change the brightness.

180°/360° buttons

Press to change between complete and directional lighting.

Rename


Press to change the name of the lamp in the app.

PIN lock

Shows PIN status. Press to lock or clear PIN code on lamp.

Units

Press 'Units' button to return to the Units screen.

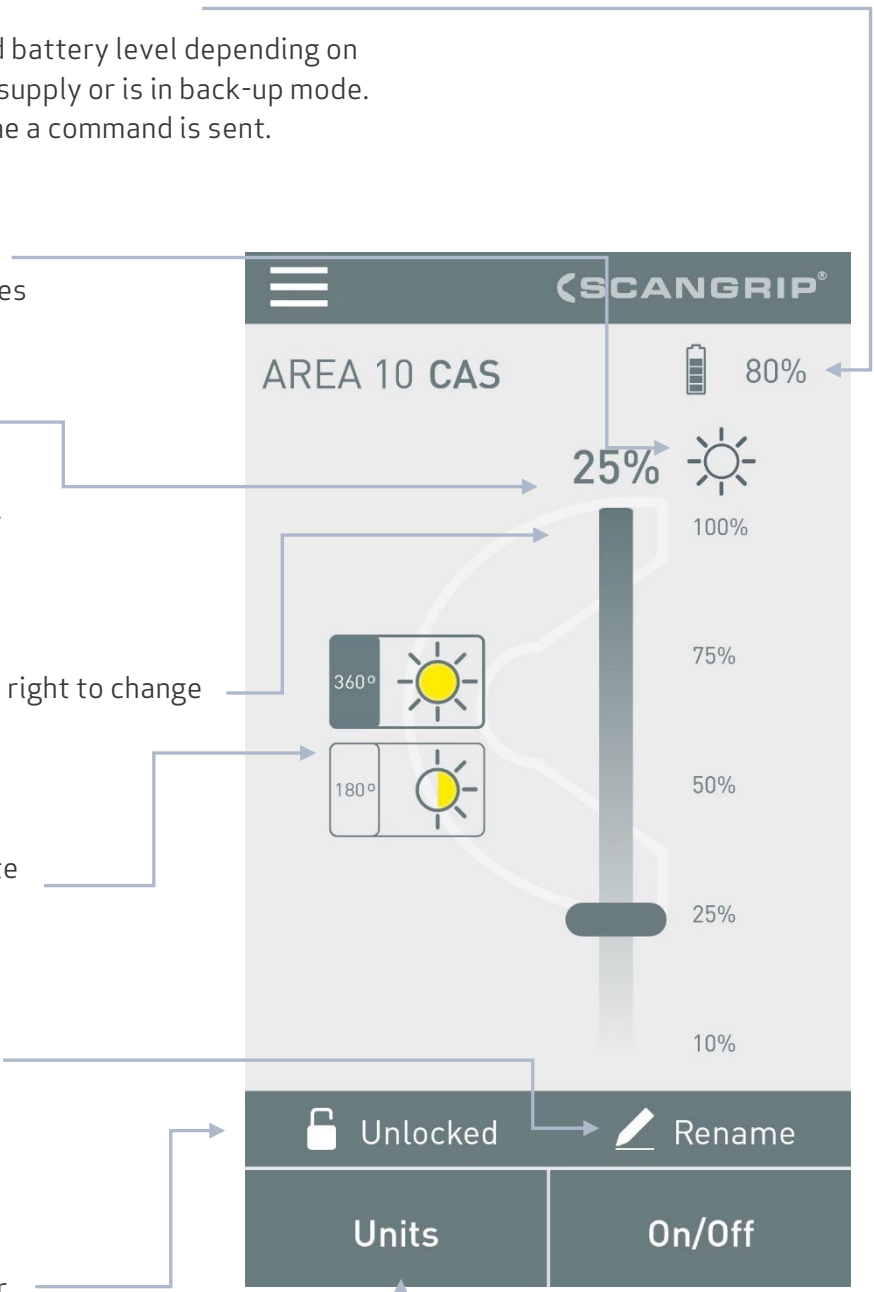

10. MULTIMATCH CONNECT

Power status

Shows remaining battery in % and battery level depending on whether it is connected to power supply or is in back-up mode. Battery level is updated every time a command is sent.

Light icon

Shows if the lamp is on and changes with the brightness.

Current brightness

Changes to display the current brightness as shown on the slider.

Current CCT

Changes to display the current color temperature (CCT) as shown on the slider.

Brightness slider

Adjust slider or press value to the right to change the brightness.

CCT slider

Adjust slider or press value to the right to change the color temperature.

Rename


Press to change the name of the lamp in the app.

PIN lock

Shows PIN status. Press to lock or clear PIN code on lamp.

Units

Press 'Units' button to return to the Units screen.

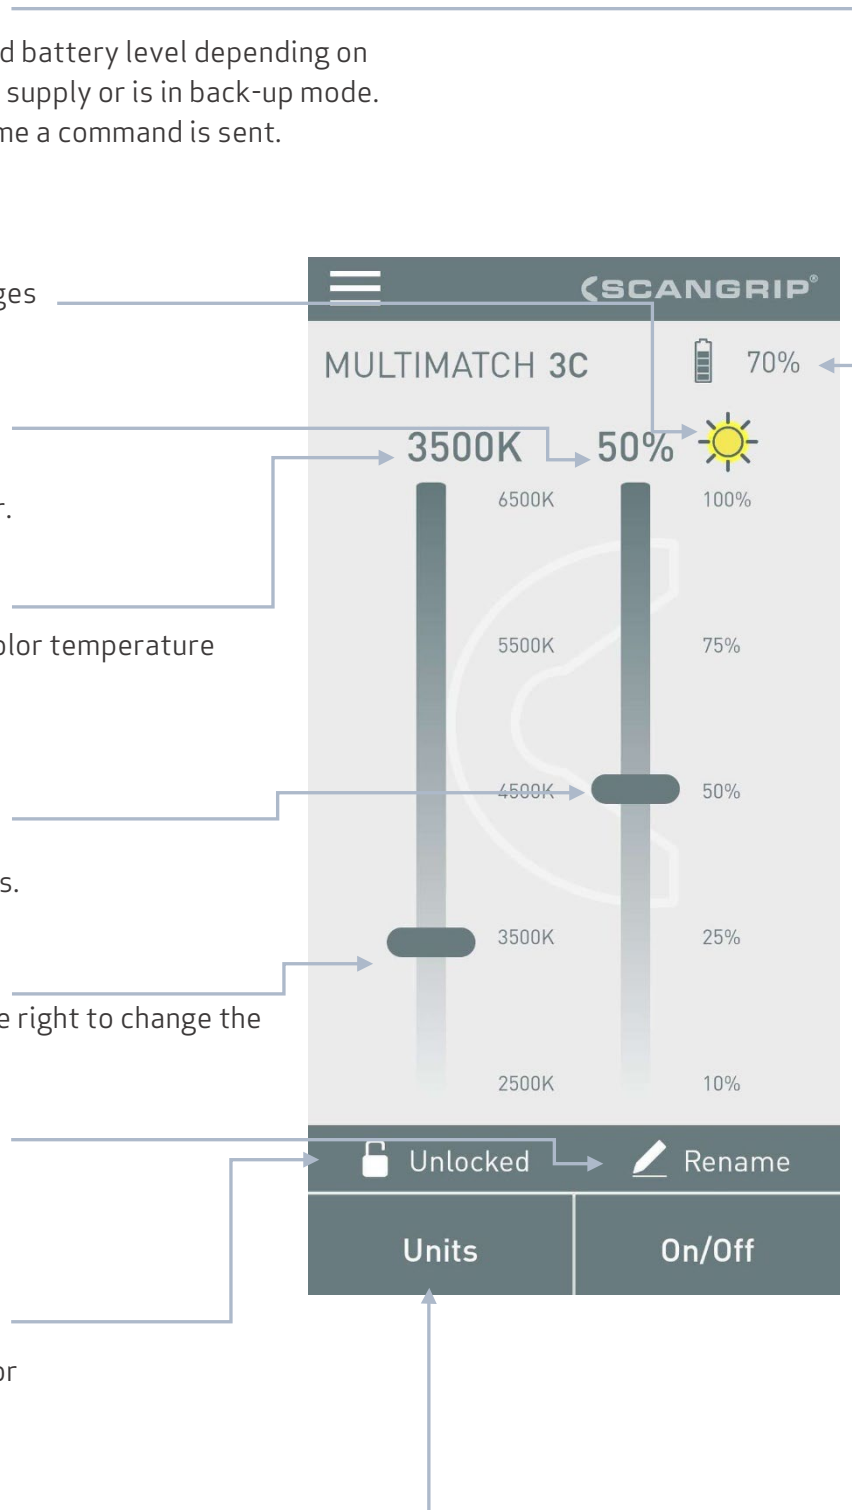

11. SITE LIGHT Series

Power status

Only mains powered. A loading spinner appear until the command has been received.

Light icon

Shows if the lamp is on and changes with the brightness.

Current brightness

Changes to display the current brightness as shown on the slider.

Brightness slider

Adjust slider or press value to the right to change the brightness.

Rename


Press to change the name of the lamp in the app.

PIN lock

Shows PIN status. Press to lock or clear PIN code on lamp.

Units

Press "Units" button to return to the Units screen.

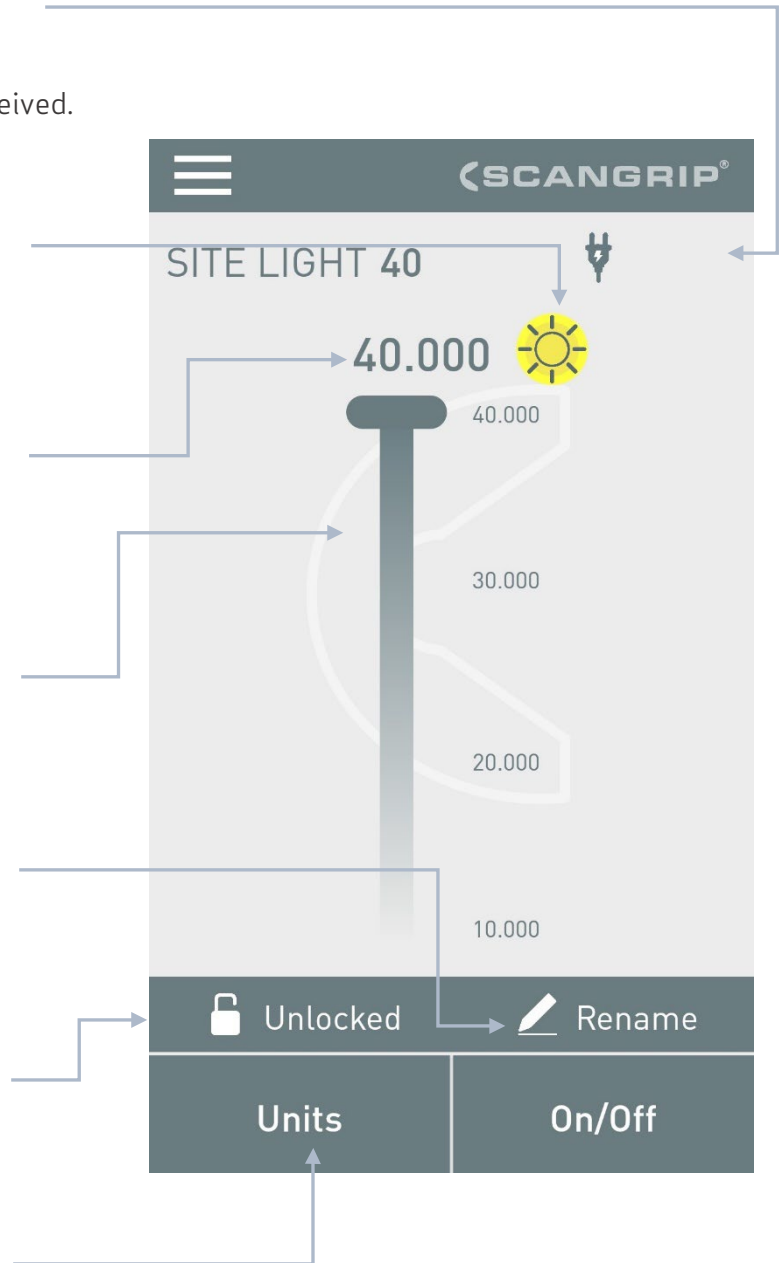

12. UV-EXTREME Series

Power status

Only mains powered. A loading spinner appear until the command has been received.

Light icon

Shows if the lamp is on.

Remaining curing time

Display set curing time when off and counts down during curing.

Curing time slider

Adjust slider or press value to the right to change the curing time. Slider moves down with remaining time. Changing while curing restarts the countdown from that value.

Rename


Press to change the name of the lamp in the app.

PIN lock

Shows PIN status. Press to lock or clear PIN code on lamp.

Units

Press "Units" button to return to the Units screen.

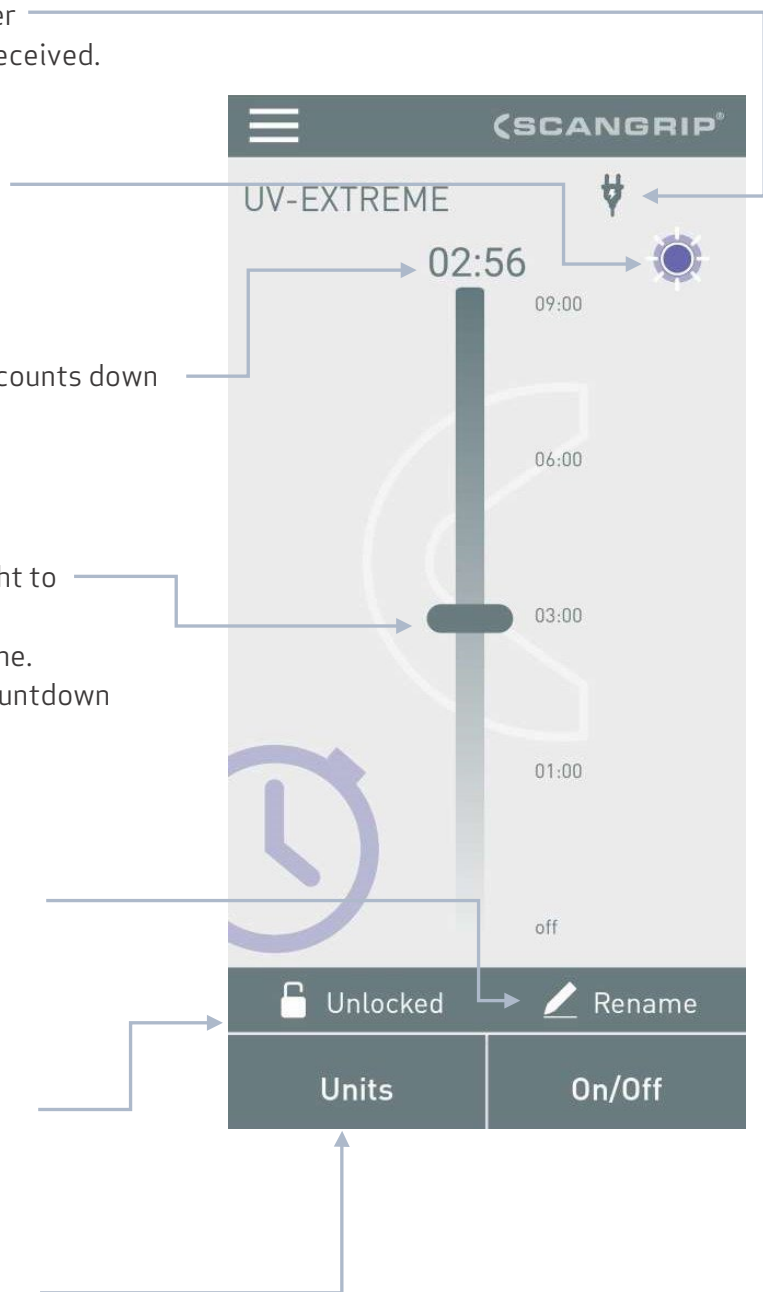

12.1. Safety screen

Remaining curing time

Display set curing time when off and counts down during curing.

Safety slider

Drag slider all the way to the right to turn on the lamp. If released the slider will return to the left stating point.

Cancel

Press to return to the Control screen.

