



**1**

Unpack box and make sure you have all items shown here.  
(Screwdriver not shown.)



Ridge ResKey  
Unit




AAA Battery  
(2x)



Receiver  
(Security Brands 14-REC20  
or 14-REC300 not included)


**3**

Remove screws from back of unit housing and carefully remove back cover to get access to battery holders.

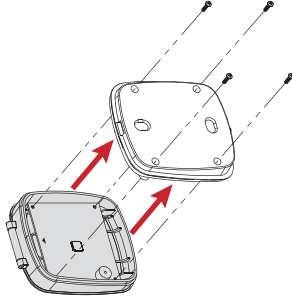

**4**

Hold circuit board in place and insert batteries into battery holders, making sure to place in correct orientation.

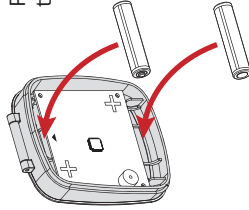

Place unit on a sturdy surface to make this step easier.



**WARNING**

**AUTOMATIC GATES AND DOORS CAN CAUSE SERIOUS INJURY OR DEATH!**

**ALWAYS CHECK THAT THE GATE/DOOR PATH IS CLEAR BEFORE OPERATING!**

**REVERSING OR OTHER SAFETY DEVICES SHOULD ALWAYS BE USED!**

**6**

Install mounting plate where desired (hardware not included).  
(Can be done after programming.)


**! IMPORTANT!**

This unit is IP44-rated and has some protection from the elements, but it should be mounted in a covered location. Make sure to mount the unit away from metal objects and anything that will interfere with or block RF transmission.



**2**


Remove single screw from bottom of unit and remove unit from mounting plate, pulling away from bottom end.

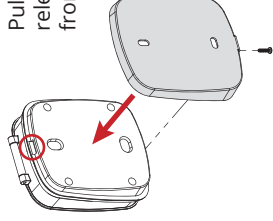

Pull away and down on unit to release mounting plate hook from unit groove (circled).

**5**

Replace back cover of unit and secure with screws.

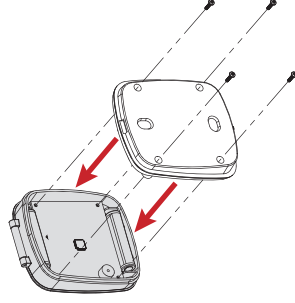

**7**

Attach unit and secure with screw.  
(Can be done after programming.)

Slip mounting plate hook (circled) into unit groove before pressing unit into place.

