


## WATCH DISPLAY

## SETTINGS

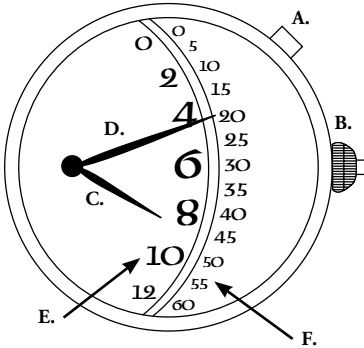

- A - Backward Button
- B - Forward Button
- C - Hour Hand
- D - Minute Hand
- E - Hour Marker
- F - Minute Marker

This watch features hour and minute hands.

**NOTE: Part B is not a normal crown. It is a push button.**

### TO SET THE TIME

1. Press and hold A or B button for 2 seconds to activate the time-setting mode.
2. Use A or B button to adjust the desired time.

**NOTE: The A button moves the hands backwards and the B button moves the hands forwards.**

# Stauer<sup>®</sup>

Afford the Extraordinary.

1920's Retrograde Watch  
INSTRUCTION MANUAL

Visit us at [www.stauer.com](http://www.stauer.com)  
to learn more about the fantastic  
benefits of owning a Stauer Watch!

[www.stauer.com](http://www.stauer.com)

