


# TAMRON


**SP150-600mm F/5-6.3 Di VC USD**  
(for Nikon, Canon)

**SP150-600mm F/5-6.3 Di USD**  
(for Sony \*Models without the VC)

Model: A011

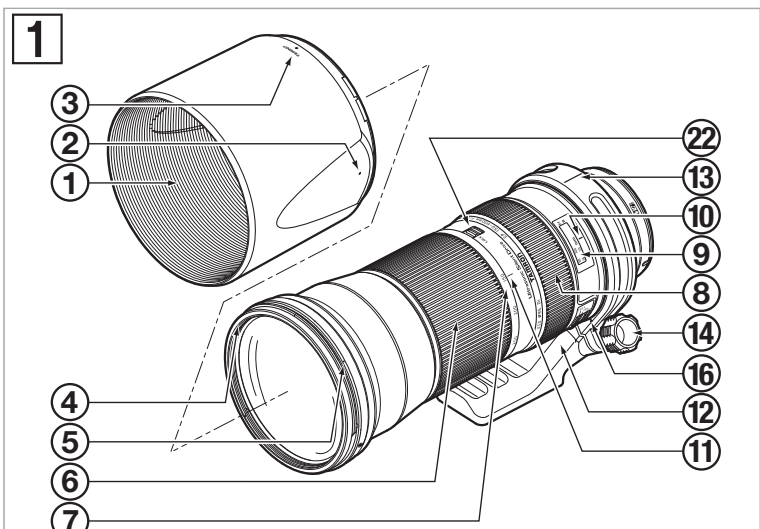


### Nikon

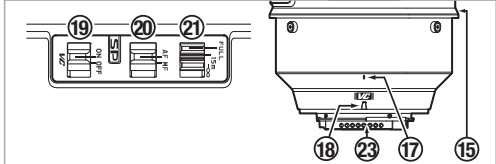


\* A011: This model is Built-in Motor
















### Canon

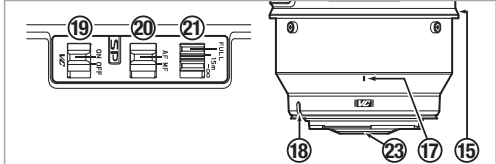

### Sony

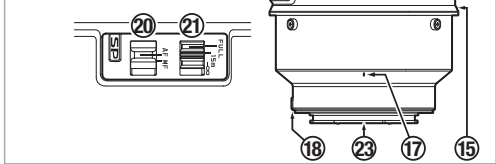

\* Common with the Konica Minolta α mount.

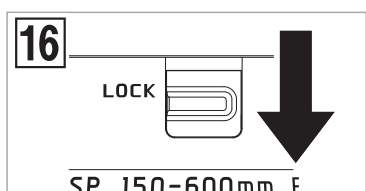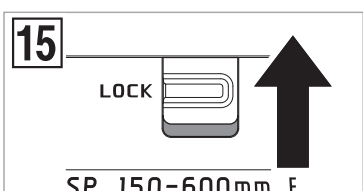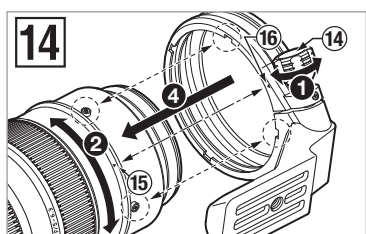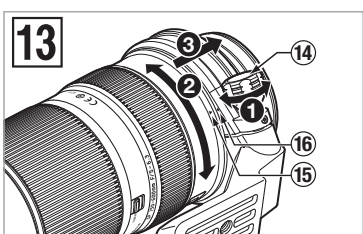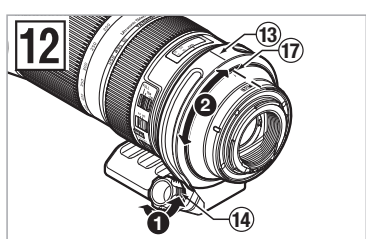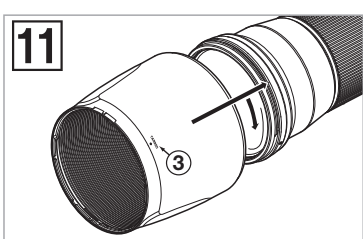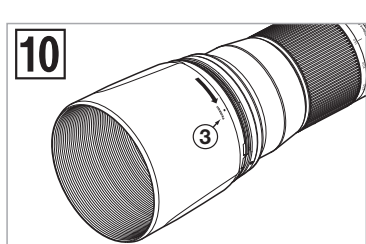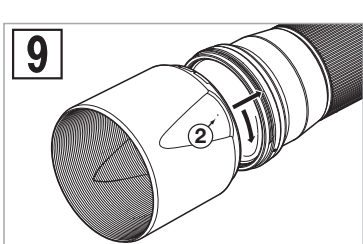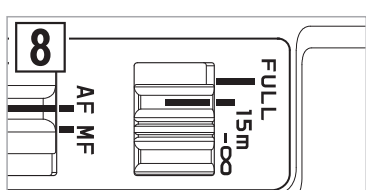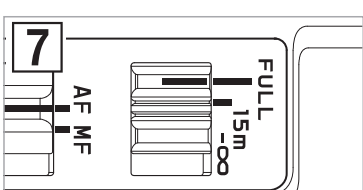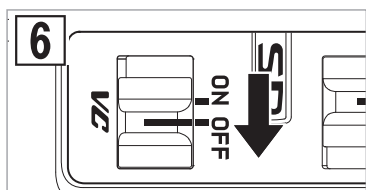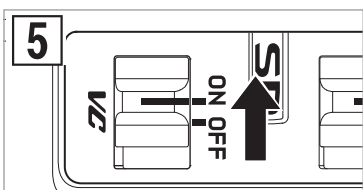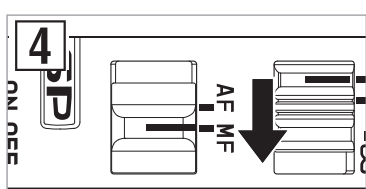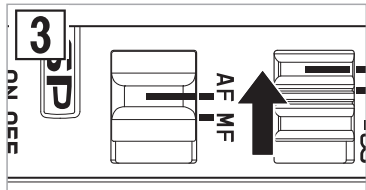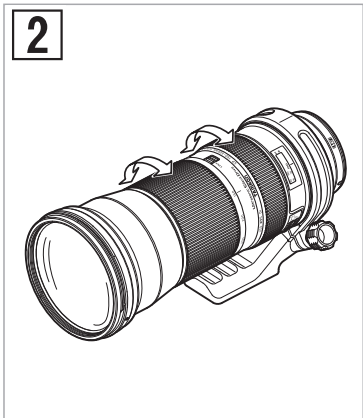

**CE** \* The CE Marking is a directive conformity mark of the European Community (EC).  
 \* Das CE-Zeichen entspricht der EC Norm.  
 \* La marquage CE est un marquage de conformité à la directive CEE (CE).  
 \* La marca CE es marca de conformidad según directiva de la Comunidad Europea (CE).  
 \* Il marchio CE attesta la conformità alla direttiva della Comunità Europea (CEE).  
 \* CE 标志表示符合欧洲共同体(EC)指标

The EEC Conformity Report applies to the Council Directive 98/336/EEC, 92/31/EEC, 93/68/EEC and is issued by Tamron Co., Ltd., manufacturer of this product.

# ENGLISH

Thank you for purchasing the Tamron lens as the latest addition to your photographic equipment. Before using your new lens, please read the contents of this Owner's Manual thoroughly to familiarize yourself with your lens and the proper techniques for creating the highest quality images possible. With proper handling and care, your Tamron lens will give you many years of photographing beautiful and exciting pictures.

- Explains precautions that help to prevent problems.

- Explains things you should know in addition to basic operations.

## NOMENCLATURE (Refer to Fig. 1, if not specified)

- |                                      |  |
|--------------------------------------|--|
| ① Lens hood                          | ② Hood attaching alignment mark            |
| ③ Hood attaching indicator           | ④ Filter ring                              |
| ⑤ Hood attaching bayonet ring        | ⑥ Zooming ring                             |
| ⑦ Focal length scale                 | ⑧ Focusing ring                            |
| ⑨ Distance scale                     | ⑩ Distance index                           |
| ⑪ Zoom index mark                    | ⑫ Tripod mount                             |
| ⑬ Tripod mount index                 | ⑭ Locking screw                            |
| ⑮ Tripod mount release mark (lens)   | ⑯ Tripod mount release mark (tripod mount) |
| ⑰ Horizontal index                   | ⑱ Lens attachment mark                     |
| ⑲ VC (Vibration Compensation) switch | ⑳ AF/MF switch (Figs. 3 & 4)               |
| ㉑ Focus limiter                      | ㉒ Zoom lock switch                         |
| ㉓ Lens mount/Lens mount contacts     |  |

## SPECIFICATIONS

	A011
Focal Length	150-600 mm
Maximum Aperture	F/5-6.3
Angle of View	16°25' - 4°8'
Lens Construction	13/20
Minimum Focusing Distance	2.7 m (106.3")
Maximum Magnification Ratio	1:5 (at 600 mm)
Filter Size $\phi$	95 mm
Length/Overall Length	257.8 mm (10.15")/266 mm (10.47")*
Diameter $\phi$	105.6 mm (4.1")
Weight (with tripod mount)	1951 g (68.82 oz)*
Lens Hood	HA011

- \* values are specifications of Nikon products.

Length: Distance from the lens front extremity to the mount surface.

Overall length: Distance from the lens front extremity to the rear projection extremity.

Features and appearance of lenses listed in this owner's manual are subject to change without notice.

## ATTACHING AND REMOVING THE LENS

### How to mount the lens

Remove the rear cap of the lens. Align the Lens attachment mark ⑱ on the lens barrel with its counterpart on the camera mount and insert the lens.

Rotate the lens clockwise until it click-locks. For Nikon models, align the lens attachment mark with the dot on the camera and rotate the lens counter-clockwise until it click-locks.

### How to detach the lens

Pressing the lens release button on the camera down, turn the lens counter-clockwise (in case of Nikon lens, clockwise), and lift the lens off the camera's lens mount.

- For further details, please read the instruction manual of your camera.

## FOCUSING (Autofocus) and using the full-time manual function

In case of a Nikon or Canon camera, switch the AF/MF switch ㉒ on the lens to AF (Fig. 3). In case of a Nikon camera with the focus mode selector dial, set the focus mode to S or C, and then set the AF/MF switch ㉒ on the lens to AF. Press the shutter button halfway down while viewing through the camera's viewfinder, the lens focuses automatically. An in-focus mark will light when lens focuses on the main subject sharply. Press the shutter button further to photograph.

In case of a Sony camera, switch the AF/MF switch ㉒ on the lens to AF (Fig. 3), and set the focus mode on the camera to Auto focus (AF). Press the shutter button halfway down while viewing through the camera's viewfinder, the lens focuses automatically. An in-focus mark will light when lens focuses on the main subject sharply. Press the shutter button further to photograph.

### Using the full-time manual function

A011 is equipped with the full-time manual function.

The full-time manual function is a function that the focus can be fine-tuned by the manual focus without switching the AF/MF changing switch when taking a picture of auto focus.

- How to use the full-time manual function

First, set the focus mode to "AF".

You can adjust focus manually while turning the focus ring in the shutter button is pressed lightly.

- The distance scale ⑨ is marked for guidance purposes. The actual focal point may slightly differ from the distance marked on the focal length index.

- For further details, please read the instruction manual of your camera.

## FOCUSING (Manual Focus) (Ref. Figs. 1, 2 & 4)

In case of a Nikon or Canon camera, switch the AF/MF switch ㉒ on the lens to MF (Fig. 4). In case of a Nikon camera with the focus mode selector dial, set the focus mode to M, and then set the AF/MF switch ㉒ on the lens to MF. Focus manually rotating the focusing ring ⑧ while viewing through the camera's viewfinder (Fig. 2). The main subject in the viewfinder will be sharp when the lens is focused correctly.

In case of a Sony camera, switch the AF/MF switch ㉒ on the lens to MF (Fig. 4), and set the focus mode on the camera to Manual focus (MF). Focus manually rotating the focusing ring ⑧ while viewing through the camera's viewfinder (Fig. 2). The main subject in the viewfinder will be sharp when the lens is focused correctly.

- Even in the MF mode, when turning focusing ring ⑧ while pressing the shutter button halfway, the focus aid function lamp lights up when the picture is in focus.
- At infinity, make sure the image in the viewfinder appears sharp. The infinity position is made with certain allowances to insure proper focus under a variety of conditions.
- For further details, please read the instruction manual of your camera.

## VC MECHANISM (Ref. Figs. 1, 5 & 6) (Mounted for Nikon and Canon models)

VC (Vibration Compensation) is a mechanism which reduces the image blur caused by hand-held shooting.

### How to use VC mechanism

- Set the VC switch ⑲ on.

\*When VC is not used, set the switch off.

- Press the shutter button halfway to verify the effect of the VC.

When the shutter button is pressed down halfway, it takes about 1 second for the VC to provide a stable image.

### The VC can be effective for hand-held shots under the following conditions.

- Dimly lit locations
- Scenes where flash photography is forbidden
- Situations where your footing is uncertain
- Taking panning shots of a moving subject

### The VC may not be able to give full effect in the following cases:

- When a photograph is taken from a fast moving vehicle
- Shooting during the excessive movement of the camera
- Turn the VC switch OFF when taking pictures with the bulb setting or during long exposures. If the VC switch is ON, the VC mechanism may introduce errors.

- With the VC mechanism, there are occasions that the image in the viewfinder blurs right after the shutter button is pressed down halfway, but this is not a malfunction.
- When the VC is ON, the number of images recordable is reduced due to the power used from the camera.
- When the VC is ON, immediately after the shutter button is pushed halfway down and approximately 2 seconds after a finger releases the shutter button, the camera will "click". This sound is the VC's locking mechanism activating, not a malfunction.
- Turn the VC switch OFF when using tripod.
- After releasing the shutter button, the VC will continue to operate for about 2 seconds until the locking mechanism activates.

- When the lens is removed from the camera while VC is activating, the lens may make clicking sound when the lens is subjected to a jolt. This is not a malfunction.
- The VC activates while the "release" button is pushed halfway down. (It is activated 2 seconds after the shutter button is released)
- VC can be used in AF or MF mode.

## ZOOMING (Ref. Figs. 1 & 2)

Rotate zooming ring ⑥ of the lens while viewing through the camera's viewfinder and compose your image at the chosen focal length.

## LENS HOOD (Ref. Figs. 1, 9 to 11)

A bayonet-type lens hood (referred to as "hood" below) is provided as standard equipment. We recommend shooting with the hood attached whenever possible as the lens hood eliminates stray light, which is harmful to the picture. However, please be aware of the precautions stated in the next section when your camera is equipped with a built-in flash.

### Attaching the Lens Hood (Ref. Figs. 9 & 10)

Align Hood attaching alignment mark ② on the hood with the corresponding index mark ⑤ or the top of the index line of the distance scale on the lens. Press the hood lightly onto the hood attaching bayonet ring (Fig. 9) and then rotate it clockwise to secure (Fig. 9). The lens hood will be secure when the mark "TAMRON  $\circ$ " is at the top (Fig. 10). When attaching the lens hood, hold the focus and zoom control rings so that they are not rotated unintentionally.

- Pay particular attention to align the hood attaching indexes when using zoom lenses including wide-angle (e.i. 35mm or wider) settings.

Improper attachment of a hood on a wide-angle zoom lens may cause large shadowed areas in your pictures.

### Stowing lens hood on the lens (Ref. Fig. 11)

- Reverse the lens hood. Point the lens toward the opening, then align the hood attaching index ⑤ on the lens with the (TAMRON  $\circ$ ) alignment on the hood attaching indicator ③.
- Turn the hood clockwise until the alignment mark (•) is at the top to set it. (Fig. 11)

## USING THE FOCUS LIMITER (Ref. Figs. 7 & 8)

When autofocus is set, the focusing operation can be accelerated by setting the focus limiter switch.

### For the maximum close-up to infinity range (Ref. Fig. 7)

Set the focus limiter switch to "FULL".

### For normal photos outside the close-up range (15 m to infinity) (Ref. Fig. 8)

Set the focus limiter switch to "15m- $\infty$ ".

## TRIPOD MOUNT (Ref. Figs. 1, 12 to 14)

A011 comes with a tripod mount. When using a tripod, mount the lens to it using the tripod mount.

### Changing the directional position of the camera

- Rotate the tripod mount fixing screw ⑭ counterclockwise to loosen it. (Figure 12, Operation 1)
- Rotate the tripod mount until it reaches the desired position. (Figure 12, Operation 2)
- Rotate the tripod mount fixing screw ⑭ clockwise to secure the tripod mount. (Figure 12, Operation 1)

### Removing the tripod mount

- Rotate the tripod mount fixing screw ⑭ counterclockwise to loosen it. (Figure 13, Operation 1)
- Rotate the tripod mount and align the tripod mount release marks of the lens and tripod mount (⑮ and ⑯). (Figure 13, Operation 2)
- Remove the tripod mount from the lens. (Figure 13, Operation 3)

### Attaching the tripod mount

- Align the tripod mount release marks of the lens and tripod mount (⑮ and ⑯) and attach the tripod mount. (Figure 14, Operation 1)
- Rotate the tripod mount until it reaches the desired position. (Figure 14, Operation 2)
- Rotate the tripod mount fixing screw ⑭ clockwise to secure the tripod mount. (Figure 14, Operation 1)

- When attaching or fixing screw ⑭ cannot be pushed up unless the lens ① is set to the 150mm position. Do not force the lock switch ㉒ up or try to rotate the lens barrel ⑥ while locked.
- Be cautious when carrying the lens while lens is attached to the tripod mount.

- The tripod mount release mark (lens) ⑮ also functions as a vertical index.

## ZOOM LOCK SWITCH (Ref. Figs. 1, 15 & 16)

Zoom lock switch mechanism prevents lens barrels from extending toward long focal length by their own weight while hanging from shoulders. Activate the switch at 150mm setting to stop the lens barrels from rotating and extending.

### How to activate the zoom lock switch mechanism

- Locking: Set the lens ① to the 150mm position of the focal length scale ⑦. Push the switch ㉒ up (Figure 15), until the index lines align with each other. The lens barrel is now locked in position and does not rotate or extend by its own weight.
- Releasing: Pull the switch ㉒ forward (to your camera) (Figure 16). The lens barrel ⑥ is now free to rotate and extend for zooming.

- The zoom lock switch ㉒ cannot be pushed up unless the lens ① is set to the 150mm position. Do not force the lock switch ㉒ up or try to rotate the lens barrel ⑥ while locked.
- Be cautious when carrying the lens while lens is attached to the tripod mount.
- The lens may change its focal length by its own weight during a long exposure if the lens is used at a high upward or downward angle with a focal length other than 150mm.
- The lens can be used at 150mm setting for picture-taking even when locked by the switch.

## PRECAUTIONS IN SHOOTING

- The optical design for Di takes into consideration the various features of digital single reflex cameras. However, due to the configuration of the digital single reflex cameras, even when the autofocus accuracy is within specifications, the focal point may be a little forward or behind the optimum point when shooting with autofocus under some conditions.
- The Tamron lenses described here employ an internal focusing (IF) system. Because of the characteristics of this optical design, the angles of view at different other than infinity are wider than that of the lenses applying an ordinary focusing system.
- When the built-in flash on the camera is used, adverse photographic phenomena such as corner illumination such as corner illumination or vignetting at the bottom part of the image may be observed, especially in wide angle ranges. This is due to the inherent limitation of the coverage of the built-in flash, and/or the relative position of the flash to the edge of the lens barrel which causes shadows on the image. It is strongly recommended to use a suitable separate flash unit provided by the camera manufacturer for all flash photography.
- For further details, please read the "built-in flash" article on the instruction manual of your camera.
- Certain camera models may indicate the maximum and minimum aperture values of the lens in approximate numbers. This is inherent to the design of the camera and not an indication of an error.
- Please be aware that there is no infrared index line on any models listed in this owner's manual, and therefore, practically, no black-and-white infrared film can be used with these lenses.

## TO ENSURE LONG-TERM SATISFACTION

- Avoid touching the glass element surface. Use a photographic lens cloth or blower to remove dust from the lens element surface. When not using the lens, always place a lens cap on it for protection.
- Use a lens cleaning tissue or lint cloth with a drop of cleaning solution to remove fingerprints or dirt on the glass lens surface with a rotary motion from the center to the edge.
- Use a silicon cloth to clean your lens barrel only.
- Mildew is an enemy of your lens. Clean the lens after shooting near water or in any humid place. Store your lens in a clean, cool and dry place. When storing the lens in an airtight container, consult it with commercially available drying agent such as silica gel, and change the agent occasionally. If you find mildew on your lens, store it authorized repair shop or nearby photographic store.
- Do not touch the lens-camera interface contacts since dust, dirt and/or stains may cause a contact failure between the lens and camera.
- When using your equipment [camera(s) and lens(es)] in an environment where the temperature changes from one extreme to the other, make sure to put your equipment temporarily in a case or a plastic bag for a length of time in order for the equipment to go through a gradual temperature shift. This will reduce potential equipment trouble.