

Quick start guide

This document contains important information on the safe use of the product. Read and follow the safety instructions and all other instructions. Keep the document for future reference. If you pass the product on to others, please include this document.

Contents are subject to change. Please refer to the latest version of the documentation, which is available for download at www.thomann.de.

Safety instructions

Intended use

This device is used for the wireless turning of digital media pages on mobile devices. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damage resulting from improper use.

This device may be used only by persons with sufficient physical, sensory, and intellectual abilities and the necessary knowledge and experience. Other persons may use this device only if they are supervised or instructed by a person who is responsible for their safety.



Risk of injury and choking hazard for children!

Children can suffocate on packaging material and small parts. Children can injure themselves when handling the device.

Never allow children to play with the packaging material and the device. Always store packaging material out of the reach of babies and small children. Always dispose of packaging material properly when it is not in use. Never allow children to use the device without supervision. Keep small parts away from children and make sure that the device does not shed any small parts (such as knobs) that children could play with.



Risk of injury due to incorrect handling of lithium batteries!

In the event of a short circuit, overheating or mechanical damage, lithium batteries can cause severe injuries. Handle lithium batteries in a correct and professional manner. Store lithium batteries in a cool and dry place in their original packaging. Keep lithium batteries away from sources of heat. Never open lithium batteries. Only charge rechargeable lithium batteries with a suitable charger. Remove the lithium batteries before disposing of the device. Cover the poles of used lithium batteries with adhesive tape to prevent short circuits. Electrolyte can escape from damaged lithium batteries. Put the damaged lithium battery in air-tight packaging. Collect the electrolyte with absorbent paper. Wear rubber gloves while doing so.



Possible damage to lithium-ion batteries through incorrect storage!

Deep discharge can permanently damage lithium-ion batteries or cause them to lose some of their capacity. Before longer breaks, charge the lithium-ion batteries and then switch off the device. Store the device at room temperature or cooler in the driest possible environment. Recharge lithium-ion batteries approximately every three months if they are stored for a longer period of time. Fully charge the lithium-ion batteries at room temperature, and only shortly before use.

! Damage to the device due to use of unsuitable external power supplies!

If the device is operated with an unsuitable external power supply, the device can be damaged by overvoltage or incorrect polarity. In extreme cases, using an unsuitable power supply can also cause a risk of injury and fire. Only use the external power supply designated for the device or an equivalent external power supply with identical parameters. If in doubt, compare the voltage specifications on the external power supply and the polarity (+/-) with the specifications in this manual and printed on the device. Voltage and polarity must always match.

! Damage to the device if operated in unsuitable ambient conditions!

The device can be damaged if it is operated in unsuitable ambient conditions. Only operate the device indoors within the ambient conditions specified in the "Technical specifications". Avoid operating it in environments subject to direct sunlight, heavy pollution and strong vibrations. Avoid operating it in environments with strong temperature fluctuations. If temperature fluctuations cannot be avoided (for example after transport in low outside temperatures), do not switch on the device immediately. Never subject the device to liquids or moisture. Never move the device to another location while it is in operation. In environments with increased dirt levels (for example due to dust, smoke, nicotine or mist): Have the device cleaned by qualified specialists at regular intervals to prevent damage due to overheating and other malfunctions.

General handling

To prevent damage, never exert force while operating the device. Never immerse the device in water. Only wipe the device down with a clean and dry cloth. Do not use liquid cleaners such as benzene, thinners or flammable cleaning agents

Keep foreign substances away from the device!


Keep the device away from containers with liquid. If any liquid penetrates the device, this could destroy the device or cause a fire. Ensure that no metallic parts enter the device.

Features

- Bluetooth controller with two foot switches
- Wireless paging through digital content (e.g. sheet music, e-books, presentation programmes)
- For Mac, PC, iPad or Android tablet with Bluetooth Smart Ready support
- Range: max. 10 meters

- Built-in rechargeable lithium battery
- Automatic shut-off saves energy and ensures long standby times
- Large built-in lithium battery with a high capacity, long service life and long battery life

Connections and controls

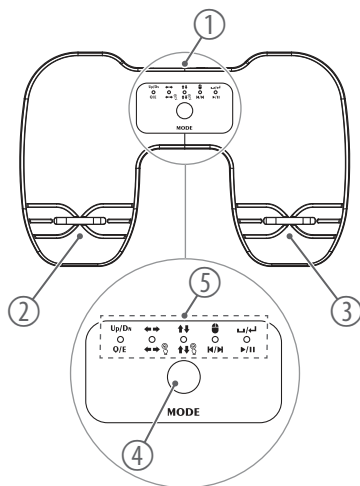

1	USB port for charging the device and status display		
2	Left pedal		
3	Right pedal		
4	[Mode] Button for selecting the modes		
5	Status LEDs		
		Tap	
	Mode	Left pedal	Right pedal
	Up/Dn	Page up	Page down
	O/E	Keyboard Q	Keyboard E
	←→	Left	Right
	←→	Swipe left	Swipe right
	↑↓	Up	Down
	↑↓	Swipe up	Swipe down
	⏏	Left-click mouse	Right-click mouse
	⏮/⏭	Previous track	Next track
	⏪/⏩	Space bar	Enter
	⏸/⏹	Pause	Play
			Hold down
			Continuous triggering
			Continuous triggering
			Continuous triggering
			–
			Swipe
			Swipe
			–
			–
			–

Pageturn Pedal

Operation

Switching on the device

1. Hold down *[Mode]* for 3 seconds to turn on the device.
 - ⇒ The status indicator, the status LED of the most recently set mode and the LEDs of the pedals light up.

Connect the device to a Bluetooth-enabled device

1. Locate the Bluetooth connection on the device you want to control and start the connection. The Bluetooth ID is "Thomann Pageturn".
 - ⇒ When the device connects to the Bluetooth-enabled device, the status LED of the most recently set mode flashes.
 - ⇒ If the connection is successfully established, the status LED of the most recently set mode lights up.

Controlling the device

1. Press *[Mode]* to switch between modes.
2. Press *[Mode]* twice in a row to switch to the previous mode.
 - ⇒ The status LED of the set mode lights up.
 - ⇒ You can control the functions via the pedals (see "Connections and controls").

Switching off the device

1. Hold down *[Mode]* for 3 seconds to turn off the device.

Standby mode

If the device is not used for 20 minutes, the device will enter standby mode.

1. Press the left and right pedals at the same time to disable standby mode.

Charging the device

1. Connect the device to the mains using a plug-in power supply (not included).

Technical specifications

Input connections	Power supply	USB-C socket
Operating voltage/current	5 V $\overline{=}$ / min. 50 mA, via USB port	
International Protection Rating	IP20	
Battery	Battery type	Lithium-ion
	Voltage	5 V
	Capacity	280 mAh
	Operating time	35 h
	Charging time in the device	1 h

Dimensions (W × H × D)	190 mm × 35 mm × 120 mm	
Weight	0.25 kg	
Ambient conditions	Temperature range	0 °C...40 °C
	Relative humidity	20%...80% (non-condensing)



Disposal of the packing material

Environmentally friendly materials have been chosen for the packaging. These materials can be sent for normal recycling. Ensure that plastic bags, packaging, etc. are disposed of in the proper manner. Do not dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the instructions and markings on the packaging.



Disposal of batteries and rechargeable batteries

Do not dispose of lithium batteries and rechargeable batteries with normal household waste, but in accordance with the local regulations for the disposal of hazardous waste. Use the available collection sites or contact your local waste disposal facility.

Only dispose of lithium batteries and rechargeable batteries when they are empty. Remove lithium batteries and rechargeable batteries from the device before disposal if this is possible without destroying it. Protect used lithium batteries and rechargeable batteries against short circuit, for example by taping the poles. Dispose of solid state lithium batteries and rechargeable batteries together with the device. Check for an appropriate collection facility.



Disposal of your old device

This product is subject to the European Waste Electrical and Electronic Equipment Directive (WEEE) as amended.

Do not dispose of your old device with your normal household waste; instead, deliver it for controlled disposal by an approved waste disposal firm or through your local waste facility. If in doubt, consult your local waste management facility. You can also return the device to a retailer if they offer to take the device back for free or if they are legally obliged to do so. When disposing of the device, comply with the rules and regulations that apply in your country. You can also return your old device to Thomann GmbH at no charge. Check the current conditions at www.thomann.de.

Proper disposal protects the environment as well as the health of your fellow human beings. This is because the proper handling of old devices negates the potential negative effects of hazardous substances, and because it conserves resources by recycling them.

Also note that waste avoidance is a valuable contribution to environmental protection. Repairing a device or passing it on to another user is an ecologically valuable alternative to disposal. For example, use the Thomann GmbH classified ads. If your old device contains personal data, delete those data before disposing of it.



Observe the disposal note regarding documentation in France.