


BACK-UP LIGHT

FROM POWER SOURCE SYSTEM (SEE PAGE 52)

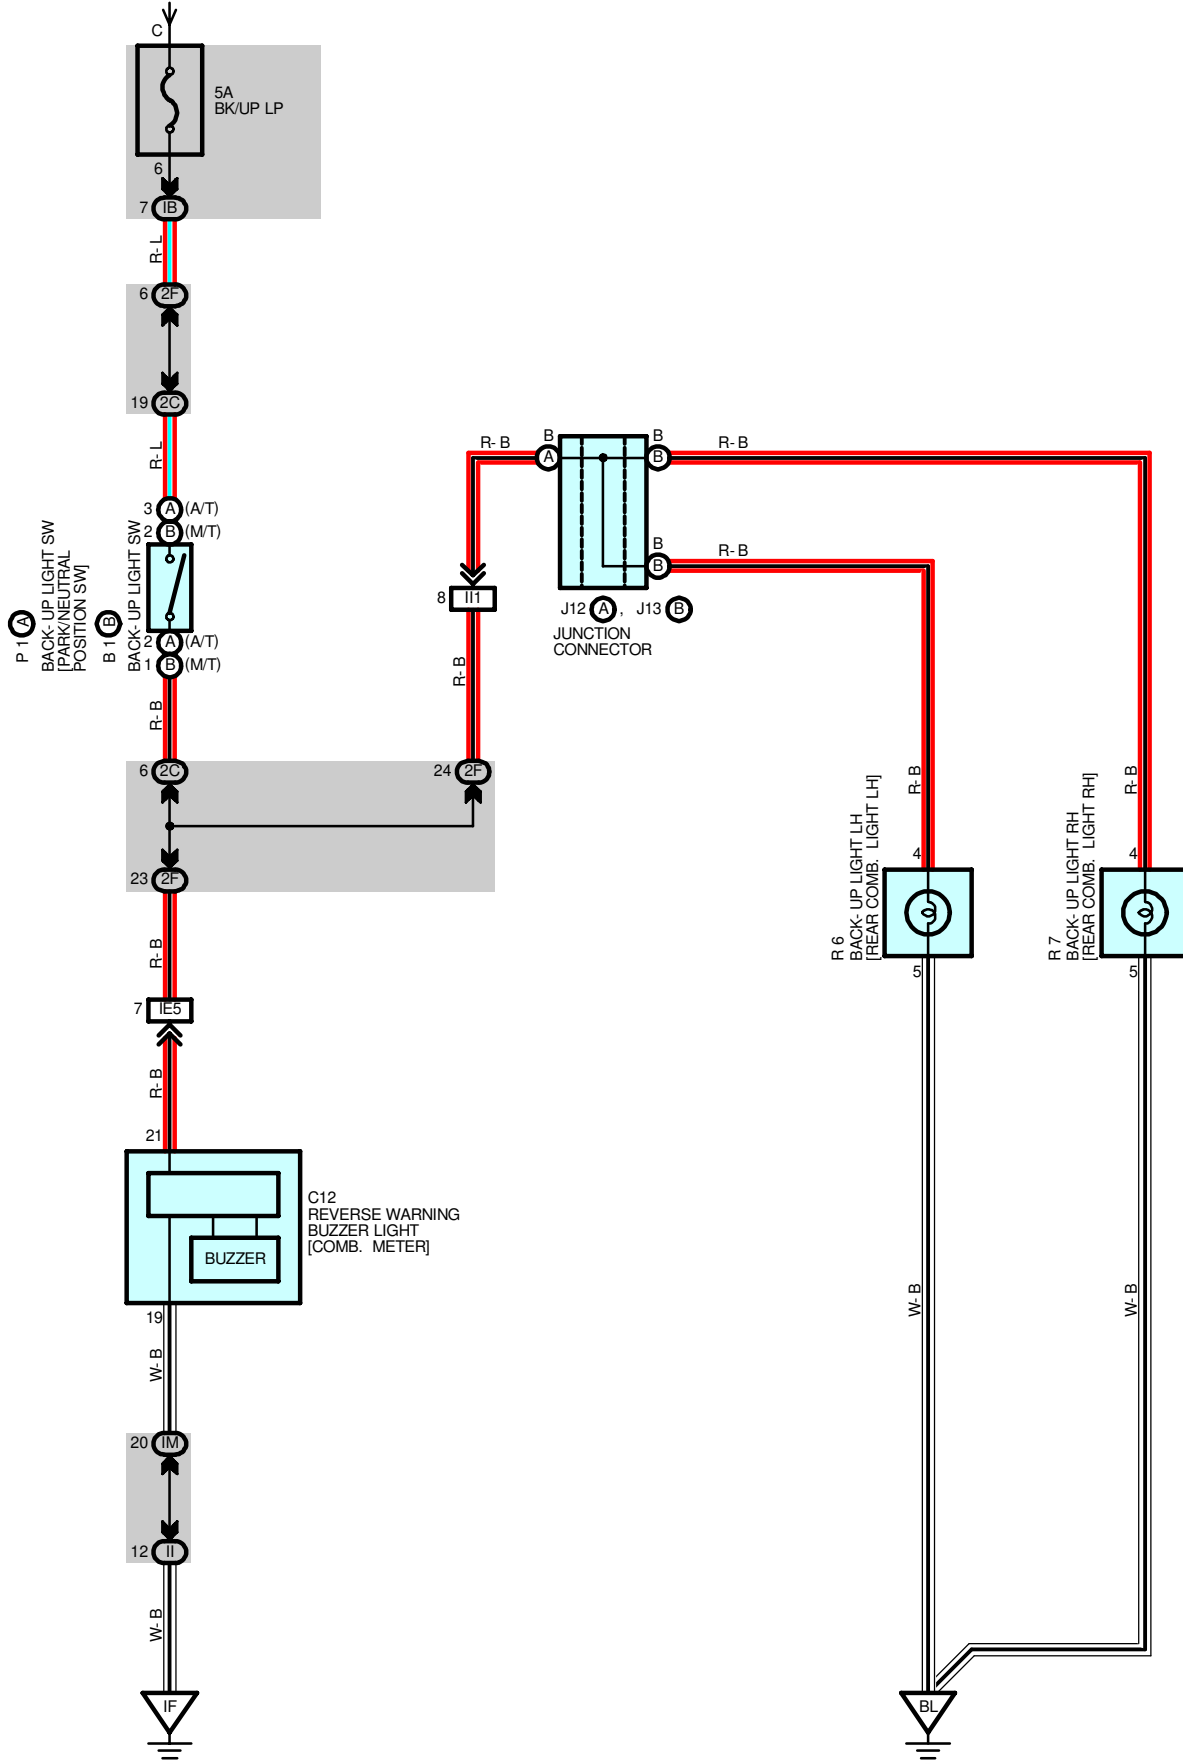

SERVICE HINTS**P1 BACK-UP LIGHT SW [PARK/NEUTRAL POSITION SW] (A/T)**3-2 : Closed with the shift lever at **R** position**B1 BACK-UP LIGHT SW (M/T)**2-1 : Closed with the shift lever in **R** position **: PARTS LOCATION**

Code		See Page	Code		See Page	Code		See Page
B1	B	32 (1ZZ-FE)	J12	A	38	P1	A	35 (2ZZ-GE)
		34 (2ZZ-GE)	J13	B	38	R6		39
C12		36	P1	A	33 (1ZZ-FE)	R7		39

 **: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR**

Code	See Page	Junction Block and Wire Harness (Connector Location)
IB	25	Engine Room Main Wire and Instrument Panel J/B (Instrument Panel Brace RH)
II	25	Instrument Panel Wire and Instrument Panel J/B (Instrument Panel Brace RH)
IM		
2C	23	Engine Wire and Engine Room J/B (Engine Compartment Left)
2F	23	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)

 **: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE5	44	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Brace LH)
II1	46	Engine Room Main Wire and Floor Wire (Instrument Panel Brace LH)

 **: GROUND POINTS**

Code	See Page	Ground Points Location
IF	44	Instrument Panel Brace RH
BL	48	Back Panel Center