

Introduction to TouchScreen Monitor



Touch Available Devices



Multi-Touch



Laptop



Mobile Phone



Tablet



PC



Others



Two-Point Touch



MacBook



Mac Mini



Mac Studio



Others

Note:

Phones and tablets need to have full-featured Type-C 3.1 port to enable touch.
Touch not supported on Linux systems.



Touch Unavailable Devices



iPhone



iPad



Xbox



PS4/PS5



Switch



Amazon Fire TV Stick



Steam Deck

Connection for Touch



Type-C Connection



Monitor



USB-C to USB-C Cable



Device

Note:


Ensure that your device's Type-c port is a full-featured Type-C 3.1 port.



HDMI Connection



Monitor

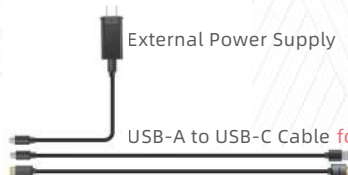

External Power Supply

USB-A to USB-C Cable for Touch

HDMI Cable



Device

Display Mode



Duplicate Mode

Touch Available



Extend Mode

Set the monitor as the main screen for touch



Portrait Mode

Touch Unavailable

UPERFECT Accessories

Cables & Adapters



3 in 1 HDMI Adapter



Lightning to HDMI Adapter



USB C Female to USB Male Adapter



Mini HDMI Male to Female Adapter

Stand



Adjustable Stand



Adjustable Stand



Adjustable Stand



VESA Mount Desk Stand

Bags



15.6" or 18.5" Bag



19" or 24.5" Bag

Note: If you need any accessories, please contact us.



24_H

support@upernect.com

or scan me

