 


UPERFECT X LapDock

USER'S MANUAL

CUSTOMER SUPPORT ✉
help@uperfectmonitor.com

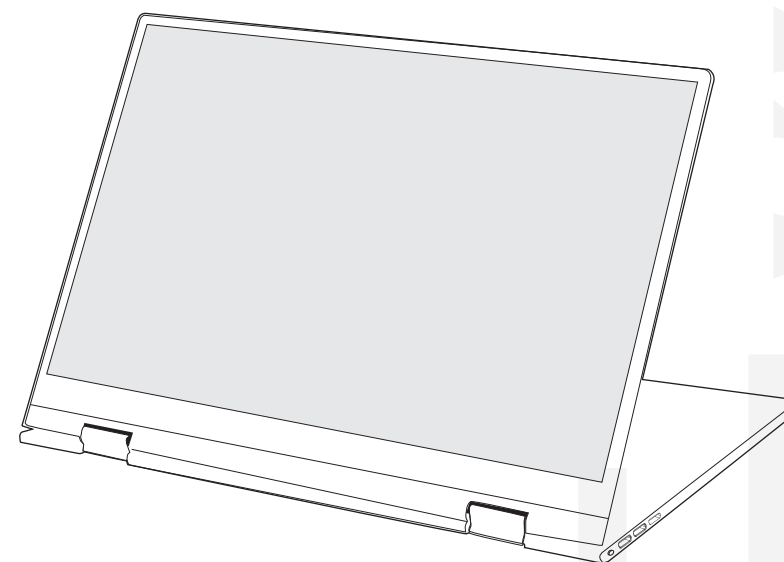

1. Safety Information-----	2
2. Cleaning & Maintenance-----	2
3. Product Introduction-----	3
3.1 Package List-----	3
3.2 Monitor Introduction-----	4
3.3 OSD (On-Screen Display) Menu-----	6
3.4 Monitor Standing Mode-----	7
4. Connection Mode-----	8
4.1 Connect to Phone-----	8
4.2 Connect to PC-----	10
4.3 Connect to Game Device-----	13
5. Specifications-----	14
6. FAQ-----	15
7. Warranty-----	16

1. Safety Information

- Please read this user manual carefully before using the monitor, to ensure proper operation.
- Do not disassemble or repair the monitor by yourself, contact our customer service team (support@eviciv.com) if the monitor is damaged.
- To prevent fire or shock hazard, never expose the monitor to rain or moisture.
- If possible, place monitor in a well-ventilated, dust-free and dry area without direct exposure to sunshine.
- Please put monitor and its accessories in the place that children cannot reach.
- Do not place heavy objects or spill liquid on monitor.
- Do not touch the power cord or signal cable when lightning strikes, otherwise it may cause electric shock.
- Unplug the monitor during a lightning storm or if it will not be used for a long period of time. This will protect the monitor from damage due to power surges.

2.Cleaning & Maintenance

- Before cleaning, turn off monitor and unplug the cable. Clean the monitor surface with a lint-free, non-abrasive cloth. Stubborn stains may be removed with a cloth dampened with mild cleaner.
- Avoid using a cleaner containing alcohol or acetone. Use a cleaner intended for use with the LCD. Never spray cleaner directly on the screen, as it may drip inside the monitor and cause an electric shock.

 
3.Product Introduction

Thanks for purchasing Eviciv Monitor.

Eviciv Monitor has Keyboard, TouchPad, Touchscreen, Dual Speaker and Built-in Battery, supporting 360°rotation. Connecting a mobile phone with DP function, Eviciv Monitor could be used as a Notebook. The CPU of mobile phone acts as the CPU of the Monitor, and the WiFi and Bluetooth of mobile phone act as the WiFi and Bluetooth of the Monitor. It provides the great portability and simplicity in your daily life, enhancing your viewing experience and style.

3.1 Package List

Please contact Eviciv Customer Service Team via support@eviciv.com, if there is any item missing or damaged.

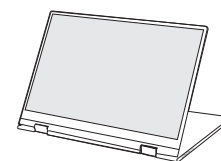


1*Monitor



1* mini HDMI to HDMI Cable



 2*Type-C to Type-C Cable



1*USB to Type-C Cable



 
1*User Manual



1*PD Adapter

3.Product Introduction

3.2 Monitor Introduction

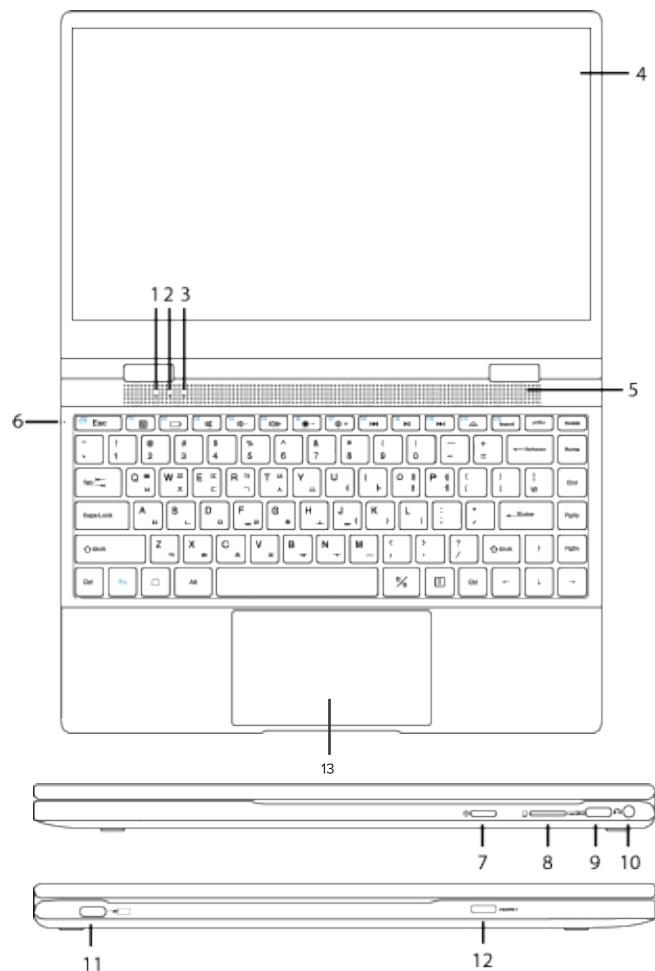

- | | |
|---------------------------------|----------------------------|
| 1. Power Indicator | 8. Micro SD Card Slot |
| 2. Uppercase Indicator | 9. Type-C Charging Port |
| 3. TouchPad Lock Indicator | 10. Headphone Port |
| 4. Touchscreen (10 Point Touch) | 11. Type-C (DP) Input Port |
| 5. Speaker | 12. Mini HDMI Input Port |
| 6. Charging Indicator | 13. TouchPad |
| 7. Power Button | |

3.Product Introduction

• Use the Keyboard

The keyboard includes keys that activate special functions. The function of each key is clearly marked with an icon.

	Esc	Escape
	F1	TouchPad Switch
	F2	Battery Capacity Indicate
	F3	Mute
	F4	Volume Decrease
	F5	Volume Increase
	F6	Brightness Decrease
	F7	Brightness Increase
	F8	Previous Page
	F9	Pause/Play
	F10	Next Page
	F11	Backlight Switch
	PrtScr	Screenshot (Available while connecting mobile phone)

3.Product Introduction

3.3 OSD (On-Screen Display) Menu

The boot screen is as below. “Swipe down here with two fingers to open OSD (On-Screen Display) Menu”



Then OSD (On-Screen Display) Menu is as below.



- ① Volume Adjustment
- ② Brightness Adjustment
- ③ Sharpness Adjustment
- ④ Screen Brightness Adjustment
- ⑤ Type-C Input
- ⑥ HDMI Input
- ⑦ Mute
- ⑧ Charging Other Devices
- ⑨ No Charging Other Devices
- ⑩ Horizontal Rotation Switch (180° Gravity Sensing)
- ⑪ Previous Page
- ⑫ Next Page
- ⑬ OSD Exit
- ⑭ HDR Switch
- ⑮ OSD Reset
- ⑯ Monitor Information
- ⑰ Color Temperature Adjustment

3. Projector Introduction

3.4 Monitor Standing Mode

Eviciv Monitor can be rotated to any angle up to 360°.



 
Notebook Mode



Stand Mode



Tablet Mode

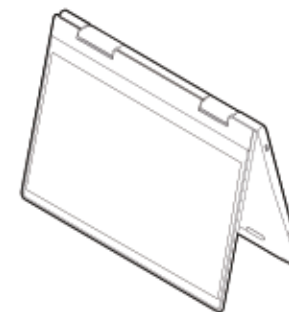

Tent Mode

Note:

- Do not rotate the monitor with too much force.

4. Connection Mode

 
4.1 Connect to Phone

4.1.1 Connect to phone with Type-C interface which supports USB3.1 interface

Phone Mode:

Phone and monitor display the same mobile phone content simultaneously.

Front

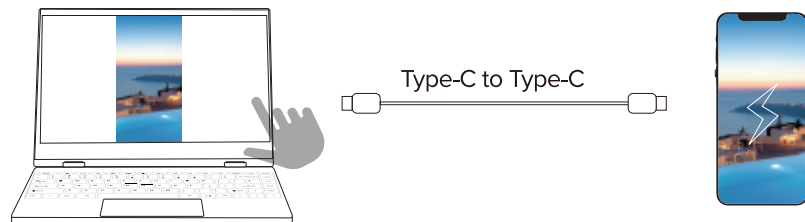


Desktop Mode:

Phone and monitor enter different using modes,

1, Phone and monitor do not affect each other. Work and play at the same time.

2, Phone make monitor become a computer, the mobile phone can be used as a touchpad to control the monitor.

 Front

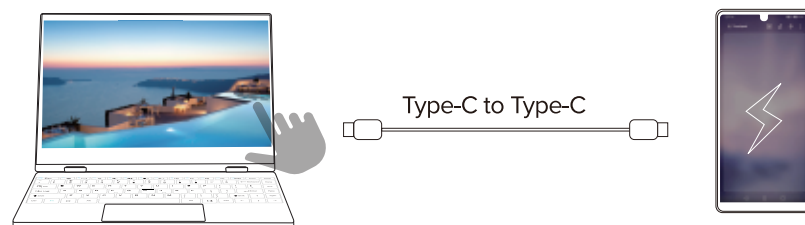


Mobile Phone which supports USB 3.1:

SAMSUNG	S8、S8+、S9、S9+、S10、S10+、S10e、S20、S20+、Note 8、Note 9、Note 10、Note 20
HUAWEI	Mate 10、Mate 10 Pro、Mate 20、Mate 20 Pro、Mate 20 X、Mate 20 RS、P20、P20 Pro、P30、P30 Pro、P40、P40 Pro、P40 Pro+、Honor 10、Honor 20、Honor 30、Nova7 Pro 5G
Continuous update...	


4. Connection Mode

4.1.2 Connect to other phones which don't support USB3.1

 Android Phone

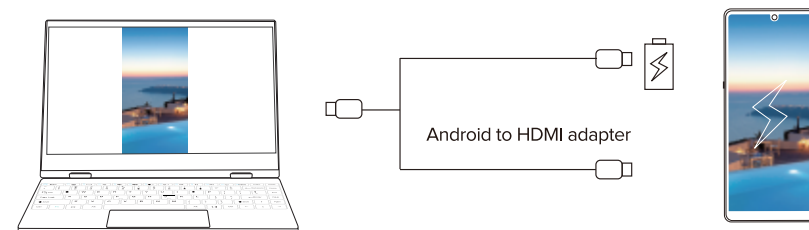

iPhone

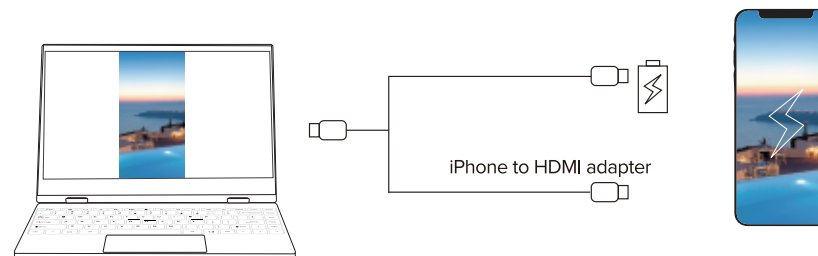 

Note:

- Connected to mobile phone with Type-C (DP) input port, the Keyboard/TouchPad/Touchscreen of monitor are available to use.
- Connected to iPhone with HDMI input port, the Keyboard/TouchPad/Touchscreen of monitor are NOT available to use.

 
4. Connection Mode

4.2 Connect to PC

4.2.1 Connect to computer with Type-C interface which supports Thunderbolt 3 interface


Duplicate Mode

Front

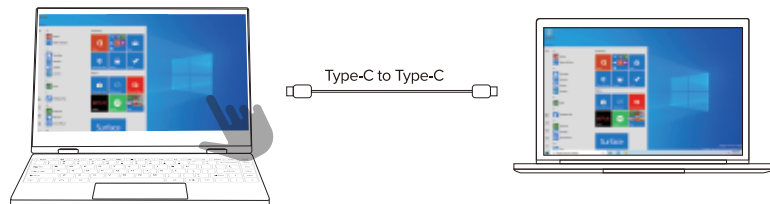

Extend Mode

 Front

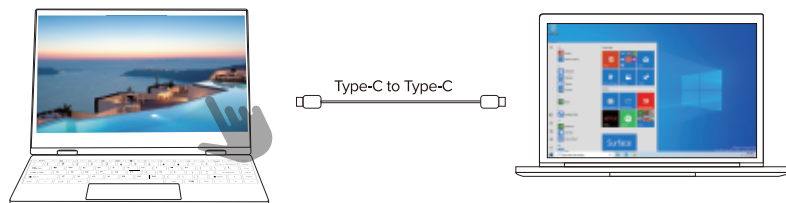

Show only on 2



Show only on 1




PC which supports Thunderbolts 3:

Apple	MacBook 12", MacBook 13" 2017, MacBook Pro 2016/2017/2018, New MacBook Air 2018, iPad Pro 2018
Google	ChromeBook Pixels, PixelBook Pen
Lenovo	YogaC930, Yoga 5 Pro, Yoga 6 Pro, ThinkPad X280, ThinkPad X1 Carbon 2017, Miix 720, Legion Y7000/Y7000P/Y7000K
Dell	XPS13, XPS15, G3/G5/G7, Inspiron 5000/7000
HP	Spectre 13, Pavilion X2, EliteBook Folio G1, EliteBook 1050 G1
Microsoft	Surface Book2
HUAWEI	MateBook D, MateBook X, MateBook X Pro, MateBook E, MateBook 13, MagicBook
Continuous update...	


4. Connection Mode

 4.2.2 Connect to other computers which don't support Thunderbolt3

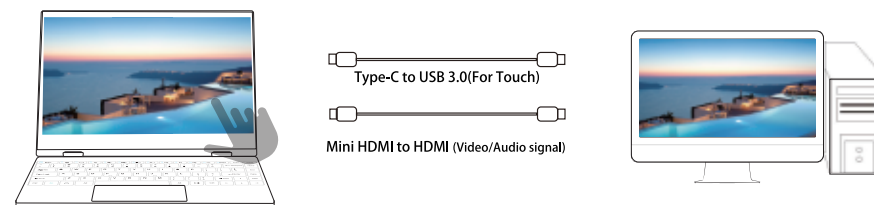


Note: (Under the premise of connecting to a computer)

 - In order to use keyboard and TouchPad of the monitor, please connect the monitor to the host of computer with a USB-Type C cable, even though the monitor is connected to computer with Mini HDMI cable as signal input.
- The Extend Mode will be set automatically. Mode setting procedure: Settings on PC→System→Display→Multiple display→Select mode→Setting completed

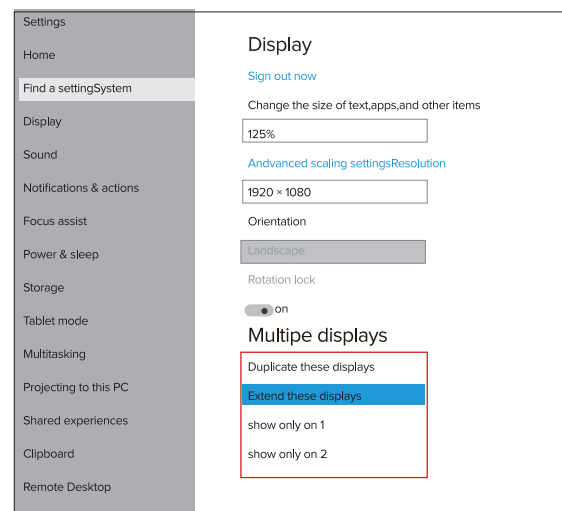


Or Press "Windows + P"


 
4. Connection Mode

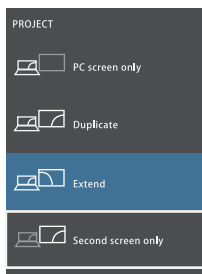

 - PC is the first display and the monitor is the second display. To use the touch function, the monitor needs to be the first display and connected to the host of computer with a USB-Type C cable. The procedure of changing the monitor to be the 1st display: Settings on PC→System→Display→Select 2→Make this the main display→Keep the changes→Setting completed

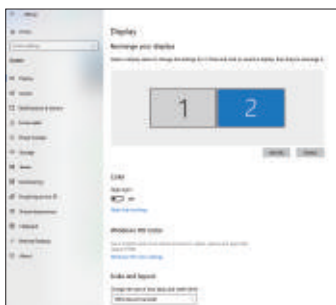

  - Procedure of monitor vertical display: Settings on PC→System→Display→Select 2→ Select the vertical direction of the screen→Keep the changes→Setting completed

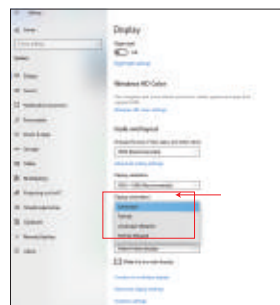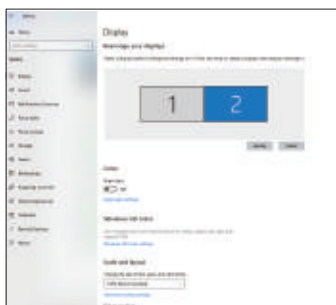

Keep these display settings?
Reverting to previous display settings in 15 seconds.


Keep changes Reset

4. Connection Mode

4.3 Connect to Game Device


PS4

 Front

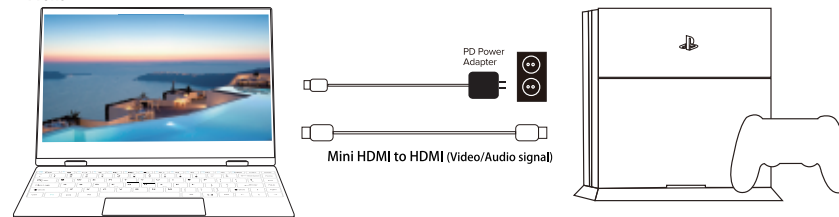



XBOX

 Front

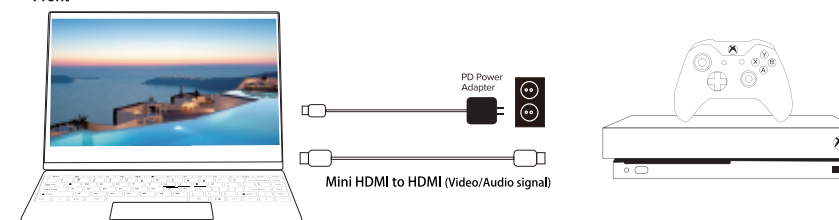

Nintendo

  Front

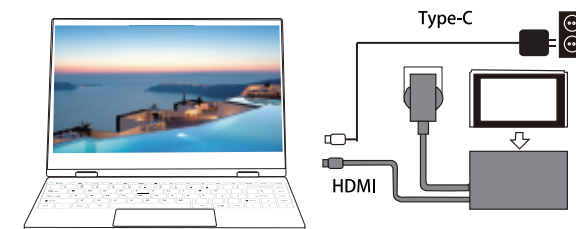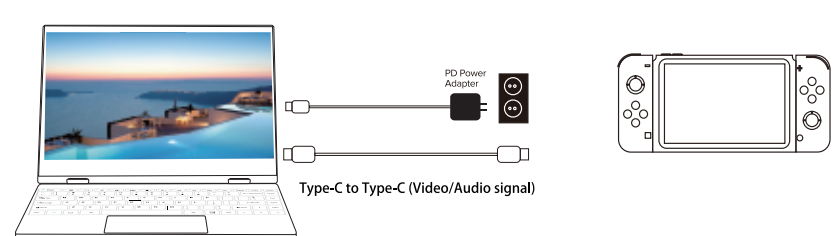

5.Specifications

Model	MDS-133G01
Size	13.3 inch
Weight	2.76lb
Aspect Ratio	16:9
Panel	IPS
Viewing Angle	178°
Resolution	1920*1080 Pixels
Contrast	800:1
Touch Screen	10 point touch
Brightness	250 cd/ m ²
Color Gamut	72% NTSC
Built-in Speaker	8Ω/1W
Ports	Micro SD Card Slot *1 Type-C Charging *1 Headphone *1 Type-C (DP) Input *1 mini HDMI Input *1
Refresh Rate	60 Hz
Battery	7.6V 5400mAh*2
Battery Consumption Time	4-5 hour after fully charged
Battery Charging Time	4-5 hour
OS support	EMIU iOS Android Window

6.FAQ

1. No display / no picture?

- Please confirm whether the battery capacity of monitor is 0% or not. Charging the monitor for 10 minutes, and try again.
- Please make sure the Type-C output of your device has DP function.
- Restart your device and monitor.

2. No sound?

- Confirm whether the monitor is muted or not.
- Confirm whether your device is muted or not.

3. The TouchPad doesn't work?

- Please confirm whether the TouchPad switch  is turned on.

4. 180° Gravity Sensing doesn't work?

- Please confirm whether the Horizontal Rotation Switch  of the OSD menu is turned on.

5. Monitor does not charge input device?

- Please make sure your input device supports 5V charging. Monitor only supports 5V output.
- Please confirm whether the charging switch  of OSD is turned on.

 
7. Warranty

Dear Customer,

Thank you for purchasing the **UPERFECT** monitor!

We offer 100% money back guarantee in 30 days and 90 days replacement, lifetime warranty for any issue, professional tech support to ensure no-worry service.

Any query or problem, please contact us via help@uperfectmonitor.com

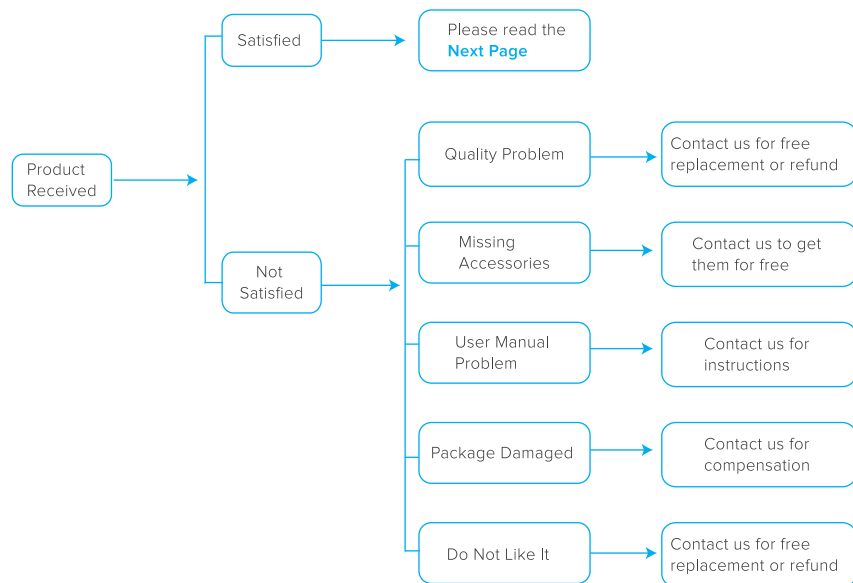

7. Warranty

For troubles that occur under normal circumstances, we promise 24-Month warranty.

There is no warranty in the following cases:

- Damage caused by user's disassembly and repair;
- Damage caused by use of accessories not manufactured or sold by Eviciv;
- Damage caused by not using the projector in accordance with user's manual;
- Unable to provide a valid order number;
- Damage caused by force majeure, such as earthquake, flood, and fire.

Customer's name:

Contact phone number:

Customer's address:

Order number:

Date of purchase:

Product model:

Seller's name: