

UPERFECT[®] Portable Monitor User Manual



In order to ensure your safe use of this product, please read this manual carefully before using this product and keep it properly.



Email: support@uperfect.com

Chapter 01 Preparations

Checking the Package Contents



Portable Monitor



Power Adapter



Smart Cover



Mini HDMI to Standard HDMI Cable



Type-C to Type-C Cable *2



User Guide

Note:

- If any of the above items is damaged or missing, please contact us immediately. (support@uperfect.com)
- The appearance of the components may differ from the images shown.

Installing the stand case

A



Step1: Place the holster as shown above, part "1" is magnetic.

B



Step2: Place the monitor as shown above, part "1" can be sticky.

C



Step3: Fold the Leather cases part "5" to part "4" as shown.

D



Step4: Stand up the monitor and adjust the angle

Chapter 02 Interface Function Introduction



A: Power Button

B: Menu/Confirm Button

C: "+" Button

D: "-" Button

E: Back Button

F: Mini HDMI Port

G&H: USB-C Port

**I: 75x75mm VESA,
Screw size: M4*4mm**

J: Speakers

Chapter 03 Specifications

Panel Type	OLED
Screen Size	16 inches
Resolution	2880*1800
Aspect Ratio	16:10
Brightness	500 cd/m²
Refresh Rate	120 Hz
Color Gamut	100% DCI-P3
Screen Type	Glossy
Material	Aluminum Alloy
Interfaces	Mini HDMI Port
	USB-C Port * 2
Built-in Speakers	8Ω 1W * 2
VESA Size	75*75mm
VESA Screw Size	M4*4mm

Chapter 04 Connecting

TYPE-C signal transfer

Note: For a more stable power supply, it is recommended to use our original power adapter to power.



HDMI signal transfer

Note: For a more stable power supply, it is recommended to use our original power adapter to power.



Chapter 05 Screen Adjustment

On-Screen Display Menu Introduction

BRIGHTNESS

	BRIGHTNESS		50
	CONTRAST		50
	ECO	◀ STANDARD ▶	
	DCR	◀ OFF ▶	
	SHARPNESS		2
			

IMAGE

	ASPECT	◀ AUTO ▶	
	BLACK LEVEL		50
	HUE		50
	SATURATION		50
			

COLOR TEMP

	COLOR TEMP.	◀ USER ▶	
	RED		50
	GREEN		50
	BLUE		50
	LOW BLUE LIGHT		0
			

OSD SETTING

	LANGUAGE		
	OSD H.POS.		50
	OSD V.POS.		50
	OSDTIMER		10
	TRANSPARENCY		0
			

RESET

	RESET		
	HDR MODE	◀ OFF ▶	
	LOW POWER	◀ OFF ▶	
			

MISC

	SIGNAL SOURCE	◀ HDMI ▶	
	MUTE	◀ OFF ▶	
	VOLUME		65
			

MAX:288X1800 120HZ


Chapter 06 Setting Up(Windows10)

Extend Mode / Duplicate Mode/ Display Mode

Way1: Set on the device's Display Settings

A: Right-click anywhere on your desktop and select Display settings to open the Display page.

 B: Scroll down to Multiple displays, then select an option from the drop-down list to determine how your desktop will display across your screens.

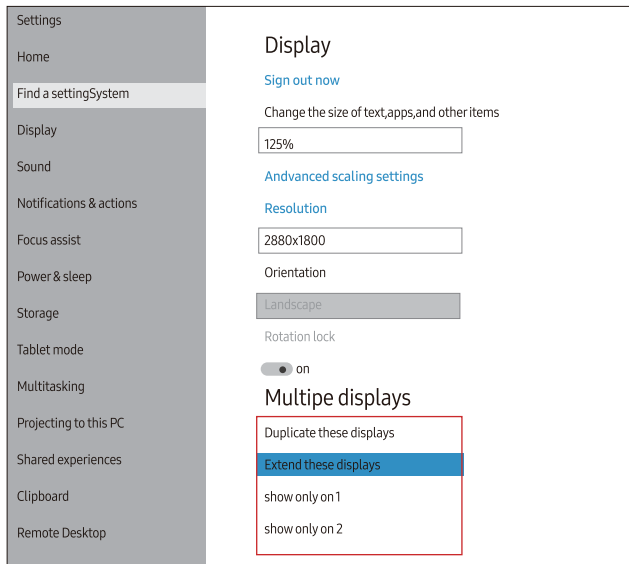


Way2: Set via Windows key + P keyboard shortcut

A: Enter the “Windows” key and “P” keyboard at the same time.


B: select an option from the drop-down list to determine how your desktop will display across your screens.

 PC screen only

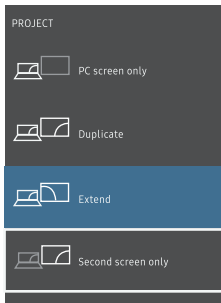

Rotate the Screen

 - 1: Right-click anywhere on your desktop and select Display settings to open the Display page.
- 2: Under the "Select and rearrange displays" section, select the monitor that you want to adjust.
- 3: Under the "Scale and layout" section, use the Orientation drop-down menu to select Landscape or Portrait screen.

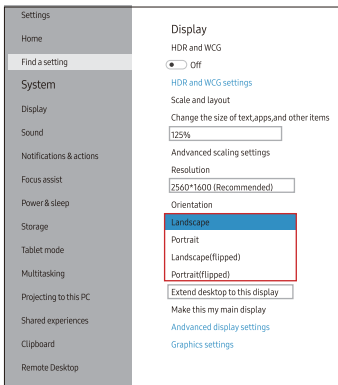

Chapter 07 Q&A

Important Tips:

If you find any issues with your monitor, please contact us at support@uperfect.com before returning it. We will help you solve your problems and try our best to make you satisfied. We take full responsibility for our products.

If there are any defects that cannot be solved, we will refund or send you a replacement.

Q: Why does my monitor not turn on?

1. Please check whether the Type-C port of your device is a full-featured Type-C port, which can support power and signal transmission. If not, please use HDMI to Mini HDMI cable to transmit video signal, and use USB-C to USB-C cable to connect external power supply.
2. This may be caused by insufficient power supply. The minimum power requirement for the monitor is PD 18W. Especially when you need to run the display at 2K 120hz, the power consumption will be relatively large, it is recommended to use an external power supply, otherwise the monitor may not work properly.
3. If the above steps still cannot solve your issue, please feel free to contact us.

Q: It says "no signal", what to do?

1. When connecting with a USB-C cable, make sure your device supports USB3.1/Thunderbolt 3. If not, please add a Mini HDMI to HDMI cable for signal transmission.
2. Please make sure to use the original cables.
3. Please try another device. If it still fails, please tell us for a replacement.

Q: Why does my monitor turn off when I turn up the brightness?

This is caused by insufficient power supply. Turning up the brightness will increase the power consumption, which can be solved by an external power supply.

Q: Abnormal conditions occurred - such as a splash screen, spots when using the monitor or constant restarts.

1. It is generally caused by an insufficient power supply. The monitor require high power support. Please use the original cable included to power the monitor.
2. If you use a mobile power bank to power the monitor, please confirm whether the power of the power bank reaches 30W or more. In addition, if you need a power bank, please contact us at support@uperfect.com
3. If none of the above solutions work, please try another device. If it still failed, please contact us for a replacement.

Chapter 07 Service Support

Dear Customer,

Thank you for purchasing the Portable USB Monitor!

We offer 100% money back guarantee in 30 days and 90 days replacement, 12 month warranty for any issue, professional tech support to ensure no-worry service.

Any query or problem, please contact us via

support@uperfect.com

