

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate www.vevor.com/support

Portable heated lunch box bag

MODEL:210-BK/210-BU/110-BU/110-BK/310-BK

We continue to be committed to provide you tools with competitive price.

"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

VEVOR[®]
TOUGH TOOLS, HALF PRICE

Portable heated lunch box bag

MODEL:210-BK/210-BU/110-BU/110-BK/310-BK



NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

Technical Support and E-Warranty Certificate
www.vevor.com/support

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

1.Important Safeguards



Basic safety precautions should always be followed when using the electrical appliance, including the following. Read the instructions.

1. This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning using the appliance safely and understand the hazards. Children shall not play with the appliance. Cleaning and children shall not make user maintenance unless they are older than 8 and supervised.
2. Keep the appliance and cord out of reach of children less than 8 years old.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
4. CAUTION: Hot surfaces. Do not touch hot surfaces. Use handles or knobs, Do not let the cord hang over the edge of a table or hot surface.
5. The appliances are not intended to be operated using an external timer or a separate remote-control system.
6. Clean surfaces in contact with food.
7. Before use, check that the voltage of the wall outlet corresponds to the one shown on the rating plate.
8. To protect against electric shock, do not immerse the cord, plugs, or housing in water or other liquid.
9. Unplug from the outlet when not in use, before putting on or taking off parts, and before cleaning.
10. Do not place on or near a hot gas, electric burner, or heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. Always attach the plug to the appliance first, then plug the cord into the wall outlet. Turn any control OFF to disconnect, then remove the plug from the wall outlet.

13. Do not use the equipment for unexpected purposes.

For family use only

a. Shorter power cords should be used to reduce the risk of being entangled or tripped by longer power cords.

b. A longer extension cable can be used. Use it carefully.

If a longer extension cable is used:

1) The marked electrical rating of the power cord group or extension cord should be at least as large as the electrical rating of the appliance;

2) The power cord shall be arranged so that it will not hang on the table or desktop to prevent children from unintentionally pulling or tripping.

If the appliance is grounded, the extension wire shall be grounded 3-core.

SAVE THESE INSTRUCTIONS

HOUSEHOLD USE ONLY

2. Fcc Information

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment!

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1) This product may cause harmful interference.

2) This product must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate the product.



Note: This product has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules, These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This product generates, uses and can radiate radio frequency energy, and

if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the distance between the product and receiver.
- Connect the product to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for assistance.

3.Product Features

	<p>Model:310-BK Watt:55W/80W/80W MAX:100W Working Voltage:DC12V/DC24V/AC110-120V Bag Dimensions: 10.23"Lx7.87"Wx5.51"H Heating Plate Dimensions:8.85" Lx6.49"Wx0.67"H Cord Length:51.18"/4.27ft Max Compatible Container:9.76"Lx7.01"Wx3.94"H Package:1*Lunch bag, 1*Heating plate, 2*Power cords,1*Shoulder strap, 1*Quick start guide</p>
	<p>Model:210-BK/210-BU Watt:55W Working Voltage:DC12V Bag Dimensions: 10.23"Lx7.87"Wx5.51"H Heating Plate Dimensions:8.85" Lx6.49"Wx0.67"H Cord Length:51.18"/4.27ft Max Compatible Container:9.76"Lx7.01"Wx3.94"H Package:1*Lunch bag,1*Heating plate w/power cord, 1*Shoulder strap, 1*Quick start guide</p>



Model:110-BU/110-BK
Watt:80W MAX:100W
Working Voltage:AC110-120V/60Hz
Bag Dimensions: 10.23"Lx7.87"Wx5.51"H
Heating Plate Dimensions:8.85"
Lx6.49"Wx0.67"H
Cord Length:51.18"/4.27ft
Max Compatible
Container:9.76"Lx7.01"Wx3.94"H
Package:1*Lunch bag,1*Heating plate
w/power cord, 1*Shoulder strap, 1*Quick
start guide

4.How To Use

Simple Three Steps

Eat healthier and tastier meals

1. Put food in VEVOR and zip it up
2. Plug it in and go about your day
- 3.Unzip and enjoy a hot delicious meal



VEVOR portable food warmer uses thermal technology to heat food perfectly, low-slow conduction heat to bring foods to the ideal temperature, and preserves the moisture and nutrition of your food without overcooking or drying out. Your food will be reheated or cooked moist, juicy, and better tasting than in a microwave.

5.Compatible Containers

You can use any flat bottom, re-heatable, sealed containers
Accommodates containers up to 9.76"Lx 7.01" Wx 3.94"H



Glass



Plastic



Stainless Steel



Foil



Ceramic



Cardboard

6. Operations

110-BU/110-BK
110V MINI OVEN

Plug it in the wall outlet to heat your food.
Unplug it before your are ready to eat.



210-BK/210-BU

Plug it in the vehicle plug properly after starting your car, the red indicator will turn on to indicate heating in process. Unplug it before your are ready to eat.



310-BK 3IN1MINIOVEN



110V Wall Plug Use



12V & 24V 2 in 1
Vehicle Plug Use

7. Cooking Tips

Leftovers: Leftovers are the most popular way to use the VEVOR personal portable oven. Most leftover meals will warm up enough to eat in about 30-60 minutes but will stay at the perfect eating temperature for hours.

Refrigerated Meals: Allow about 50 minutes -2 hours for the meal to heat fully.

Pasta: If it's not heavily sauced, add one or two tablespoons of water to ensure it is perfectly reheated.

Pizza: Wrap them in foil and place them directly on the heating plate.

Vegetables: Vegetables-based leftovers will maintain their moisture for hours.

Meat: All food heats to about 168 degrees, so your meat will become well done if you leave it for hours.



Soup: Soup will heat faster and evenly without drying out.

Note: The heating time depends on the container, food types, portion size, temperature, and the voltage you use. It will heat faster using 110 volts and 24 volts.

7.Care& Cleaning

- 1.Do not use a damaged power cord and plug. Be careful of the hot heating surface and keep it out of reach of children.
- 2.Do not plug the device in without a container. Unplug the device after use and allow it to cool to room temperature before cleaning.
- 3.Do not submerge the device in water. Use a soft, damp cloth or paper towel and a gentle cleanser to clean surfaces.



VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate

www.vevor.com/support

Made In China