



# 4C 120G双铜

正面

背面

210 mm

140 mm

true wireless  
earbuds

 
 
 
User's Manual: V40070W

**Specifications**


**Bluetooth Version:** V5.0+EDR(both sides)  
**Bluetooth Range:** 10m  
**Earbud Battery:** 30mAh rechargeable Li-ion battery  
**Case Battery:** 200 mAh  
**Play Time:** approximately 2 Hours\*  
**Talk Time:** approximately 2 Hours\*  
**Standby Time:** about 180 Hours

\*Applicable at 50% of maximum volume. Results will be lower when volume is higher.


**A Quick Look**

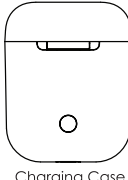
**Charging**

 

 1. Insert the USB-C end of the included charging cable into the charging port on the bottom of the charging case.

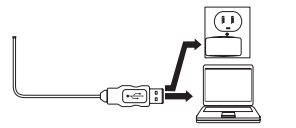


2. Insert the charging cable's USB plug into the USB port of a computer or suitable USB charging adapter.




3. When placed inside the charging case, the earbuds will charge.

Charging = red ●  
 Charged = off ○


**Bluetooth Pairing**

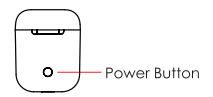 


Power Button

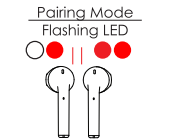 

Pairing Mode  
Flashing LED



 
Bluetooth ON  
TWS Earbuds

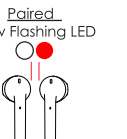


Paired  
Slow Flashing LED

1. Press the charging case's power button to turn on the earbuds, then take the earbuds out of the charging case.
2. It will take 2-5 seconds for your earbuds to pair together. When paired, one earbud's LED indicator will flash blue and the other will flash red and blue alternately.
3. Go into the Settings app and into the Bluetooth page. Make sure Bluetooth is turned On before connecting to 'TWS Earbuds'.
4. Both earbud's LED indicator will slowly flash blue when paired to your phone.


**Earbud Controls**



 
1. Tap the left earbud's Multi-function button twice to lower volume.

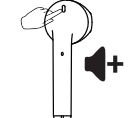

 2. Tap the right earbud's Multi-function button twice to raise volume.

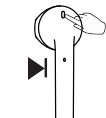

 3. Tap the left earbud's Multi-function button three times to go to the next song

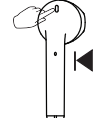

4. Tap the right earbud's Multi-function button three times to go to the Previous song

## Important Safety Precautions

When using your True Wireless Earbuds, basic safety precautions should always be followed including:

1. READ ALL INSTRUCTIONS BEFORE USING YOUR EARBUDS AND CHARGING CASE.
2. Do not use the product near water. Do not put on wet surfaces.
3. Only clean using a clean cloth.
4. Do not allow children to play with this product. This product contains small pieces that can be a choking hazard. Parental supervision is advised.
5. Do not expose this product to excessive heat or fire.
6. Do not expose this product to temperatures above 100°F. Keep out of direct sunlight.
7. Do not attempt to repair this product yourself. Contact a qualified service center if the product is in need of service.
8. Do not drop, crush, or expose this product to excessive physical force.
9. This product is not intended for commercial use.
10. Please recycle or dispose of the product properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of for further information.

## Vivitar One Year Warranty

This warranty covers the original consumer purchaser only and is not transferable.


This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

**What is Not Covered by Warranty**  
 Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.


To Obtain Warranty Service and Troubleshooting Information:  
 Call 1-800-592-9541 in the U.S. or visit our website at [www.vivitar.com](http://www.vivitar.com).

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address to the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepaired.

## Earbud Controls (Continued)



1. Press and hold either earbud's Multi-function button for 1.5 seconds activate or deactivate Siri or Google Assistant.



2. Press either earbud's Multi-function button to answer and end a phone call.

## FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



©2022 Sakar International • 195 Carter Drive, Edison, NJ 08817 • Support: 1800-592-9541 or [www.vivitar.com](http://www.vivitar.com)