

vtech[®]

Instruction Manual

 
 
2-in-1 Roll & Discover Roller Drum™



INTRODUCTION

Thank you for purchasing the **2-in-1 Roll & Discover Roller Drum™**.

Tap, roll, press, spin and turn! Little ones will love to move with this interactive toy. From tummy time to sitting to crawling, kiddos can strengthen muscles as they hear songs, music and first words for animals and numbers.

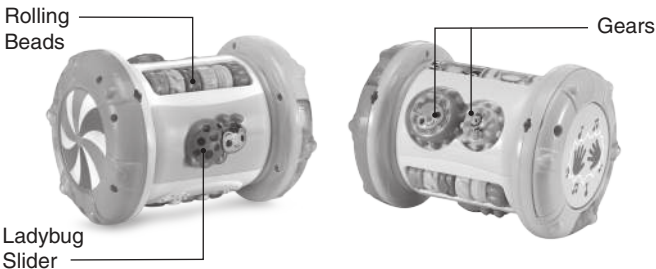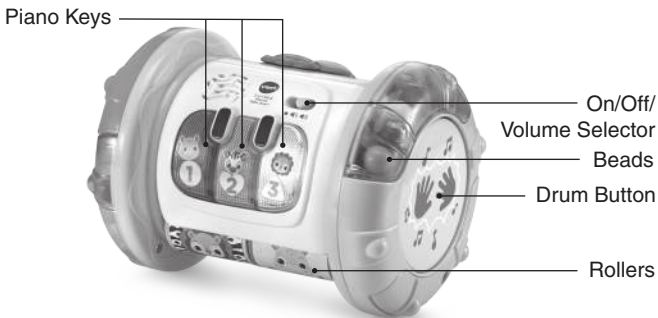

INCLUDED IN THE PACKAGE

- 2-in-1 Roll & Discover Roller Drum™
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

 
ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE

Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.

Unlock the Packaging Locks

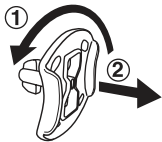


- ① Rotate the packaging locks 90 degrees counterclockwise.
- ② Pull out the packaging locks and discard.

GETTING STARTED

Battery Removal and Installation

 1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw, and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

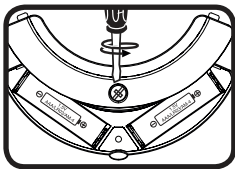

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.



ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.
Tenir les piles ou accumulateurs hors de portée des enfants.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

IMPORTANT : INFORMATIONS CONCERNANT LES PILES




- Mettre en place les piles ou les accumulateurs en respectant les polarités + et –.
- Ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas mélanger différents types de piles : alcalines, zinc-carbone et rechargeables.
- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le –).
- Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée.
- Enlever les piles ou les accumulateurs usagés du jouet.
- Ne les jeter ni au feu ni dans la nature.

PILES RECHARGEABLES

- Enlever, lorsque c'est possible, les accumulateurs du jouet pour les recharger.
- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.
- Ne pas tenter de recharger des piles non rechargeables.

PRODUCT FEATURES

1. On/Off/Volume Selector

To turn the unit **On**, slide the **On/Off/Volume Selector**  to the Low volume position or the High  to You will hear sounds, phrases and a song. To turn the unit **Off**, slide the **On/Off/Volume Selector** to the **Off**  position.



2. Interactive Roller

Roll the **Roller** to play sounds and music. When a melody is playing, roll the **Roller** or press the **Drum Button** to add fun sounds to the music. The lights will flash with the sounds.



3. Automatic Shut-Off

To preserve battery life, the **2-in-1 Roll & Discover Roller Drum™** will automatically shut off after approximately 30 seconds without input. The unit can be turned on again by pressing the **Piano Keys** or **Drum Button**.

NOTE

If the unit powers down or if the light fades out during play, please install a new set of batteries.

ACTIVITIES

1. Light-Up Piano Keys

Pressing the light-up **Piano Keys** introduces animals and numbers with songs and playful phrases. The lights will flash with the sounds.



2. Turn, Slide & Spin

Strengthen little muscles with **Gears, Rollers, Beads** and a **Ladybug Slider**.



3. Drum Button

Tap on the **Drum Button** to hear drum sounds and watch the beads roll. The lights will flash with the sounds.



SONG LYRICS

Song 1

Tap the drum and play the piano,

Switch it any way you like.

One, two, tap, tap, tap.

Three, four, clap, clap, clap.

Five, six, just like that!

We're going to have some fun!

Song 2

Push, spin, roll with me,
Gently left and right!

Song 3

Tap, tap, tap
Clap, clap, clap
We tap, we clap.
We make fun beats in a snap!

Song 4

Good morning, my dear friend.
So many things to see,
Like colors, shapes and numbers.
Let's see what we can see!

Song 5

A hippo is big and strong,
Big and strong, big and strong
It loves the water to stay cool,
To stay cool, to stay cool.

Song 6

The zebra runs here and there
With black and white stripes,
One long tail and spiky mane
And loves to play a lot!

Song 7

Oh the king of the savanna,
Is the lion, is the lion!
Its fluffy mane and loud roar
Is recognized by all!

MELODY LIST

1. Mary Had a Little Lamb
2. Hickory, Dickory, Dock
3. The Bear Went Over the Mountain
4. Rockin' Robin
5. One, Two, Buckle My Shoe
6. Here We Go' Round Round the Mulberry Bush
7. The Alphabet Song
8. Bingo
9. Skip to My Lou
10. London Bridge
11. Three Little Kittens
12. Hey, Diddle, Diddle
13. Wheels on the Bus
14. Pat-A-Cake
15. Hot Cross Buns
16. Do You Know the Muffin Man?
17. Oh Where, Oh Where Has My Little Dog Gone?
18. Pease Porridge Hot

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to play again.
5. If the unit still does not work, install a new set of batteries.

IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S. or **1-877-352-8697** in Canada, or by going to our website at **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. A service representative will be happy to help you. Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

Trade Name: VTech®
Model: 5626
Product Name: 2-in-1 Roll & Discover Roller Drum™
Responsible Party: VTech Electronics North America, L.L.C
Address: 1156 W. Shure Drive, Suite 200
Arlington Heights, IL 60004
Website: vtechkids.com

**THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:
(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE
D OPERATION.**

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com
vtechkids.ca

Read our complete warranty policy online at
vtechkids.com/warranty
vtechkids.ca/warranty

