 


vtech®

Instruction Manual

 
SWITCH & GO®

2-IN-1 SPINO SPEEDSTER

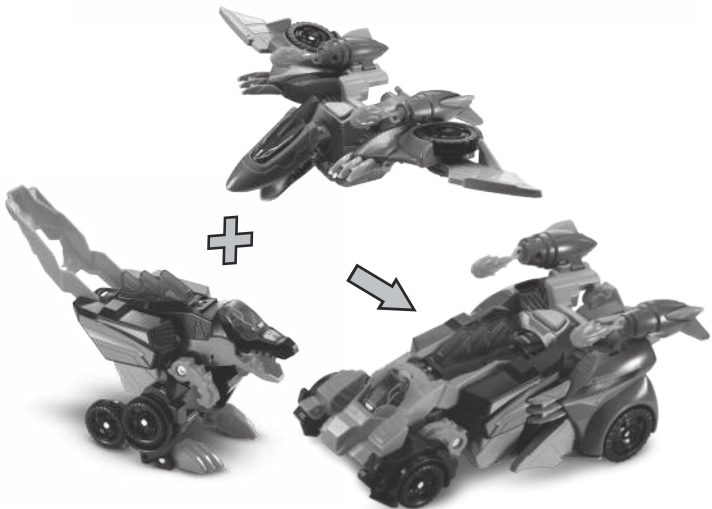

INTRODUCTION

Switch into fun with **Switch & Go® 2-in-1 Spino Speedster!** Combine these two daring prehistoric creatures to form a mega race car! Launch the two fireball projectiles, then launch the race car and watch it switch into a super Spinosaurus as it rockets forward.

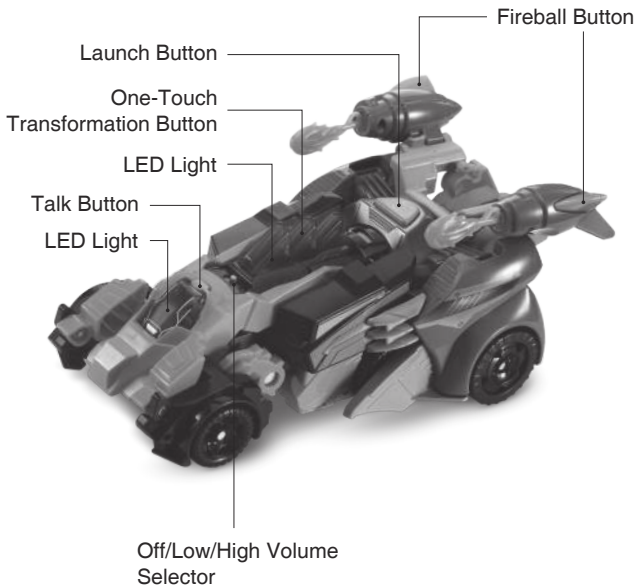

INCLUDED IN THE PACKAGE

- **Switch & Go® 2-in-1 Spino Speedster**
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this manual as it contains important information.

ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE

Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.

WARNING

Do not aim at eyes or face.

WARNING

Do not discharge any object other than the projectile provided with this toy.

ATTENTION

Ne viser ni les yeux ni le visage.

ATTENTION

Ne pas utiliser d'autres projectiles que ceux fournis avec ce jouet.

GETTING STARTED



WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

 


ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.
Tenir les piles ou accumulateurs hors de portée des enfants.

Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the bottom of the unit, use a screwdriver to loosen the screw, and then open the battery cover.
3. Remove old battery by pulling up on one end of the battery.
4. Install 1 new AAA (LR03/AM-4) battery following the diagram inside the battery box. (For best performance, alkaline batteries or fully Ni-MH charged rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

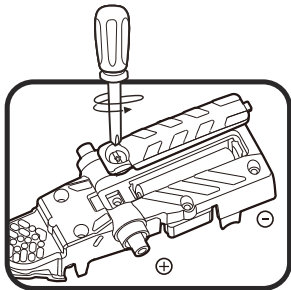

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

IMPORTANT : INFORMATIONS CONCERNANT LES PILES

Les piles fournies avec le produit permettent de tester le jouet en magasin mais ne sont pas des piles longue durée.

- Mettre en place les piles ou les accumulateurs en respectant les polarités + et –.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le –).
- Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée.
- Enlever les piles ou les accumulateurs usagés du jouet.
- Ne les jeter ni au feu ni dans la nature.

PILES RECHARGEABLES

- Enlever, lorsque c'est possible, les accumulateurs du jouet pour les recharger.
- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.
- Ne pas tenter de recharger des piles non rechargeables.

PRODUCT FEATURES

 
1. Off/Low/High Volume Selector

To turn the unit **On** or to adjust the volume, slide the **Off/Low/High Volume Selector** to the Low (🔊) or High (🔊) Volume position. To turn the unit **Off**, slide the selector to the **Off** (🔇) position.




2. Talk Button

Press the **Talk Button** to hear fun phrases and cool dinosaur sounds with light effects in Dino mode or to hear fun phrases and great vehicle sounds in Vehicle mode.

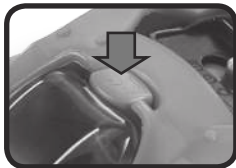

3. One-Touch Transformation Button

 In Vehicle mode, press the **One-Touch Transformation Button** to automatically switch from Vehicle mode to Dino mode.

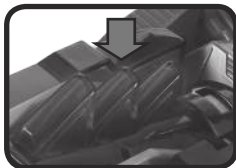

4. Launch Button

In Super Race Car mode, press the **Launch Button** to launch the race car and transform into a super Spinosaurus.



 
5. LED Lights

The **LED Lights** flash along with the sounds in all modes.



6 Fireball Button

Press the **Fireball Button** to launch a fireball projectile.

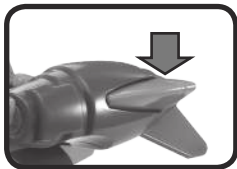

7. Automatic Shut-Off

 
To preserve battery life, the unit will automatically shut off after approximately 20 seconds without input. The unit can be turned on again by pressing the **Talk Button** or by switching between Dino and Vehicle modes. The unit will also automatically turn off when battery power is very low.

NOTE


If the unit powers down or if the light fades out during play, please install a new set of batteries.

TRANSFORMATION


Transforming from Spinosaurus mode to Vehicle

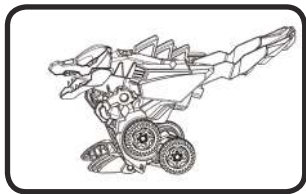

 
1. Begin in Spinosaurus mode.

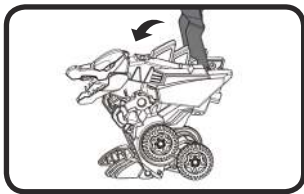

 
2. Flip the tail toward the Spinosaurus's head.

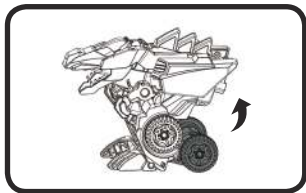

 3. Push the back wheels up.

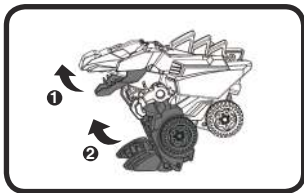


 4. Flip the Dino's mouth up and then flip the legs toward the Spinosaurus's head.

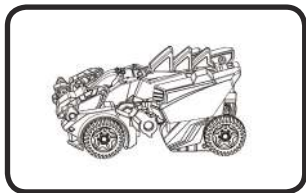


5. The Spinosaurus is now in Vehicle mode.

 Transforming from Vehicle mode to Spinosaurus mode

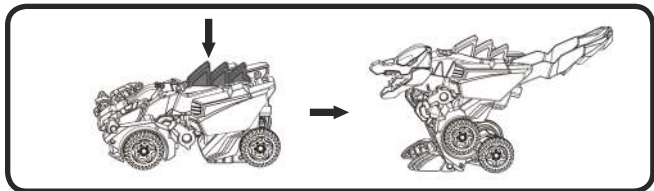


Press the One-Touch Transformation Button to automatically switch from Vehicle to Spinosaurus mode.

 
Transforming from Pterodactyl mode to Launcher

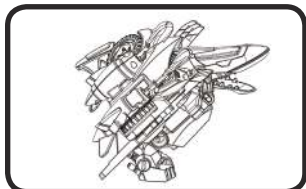

 
1. Begin in Pterodactyl mode.

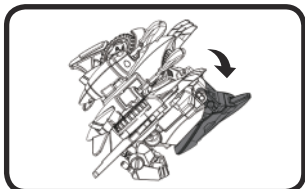

 
2. Flip the head down toward the Pterodactyl's body.

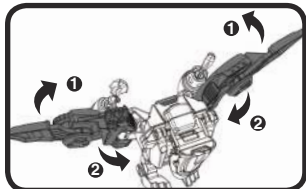

 3. Flip the wing tips up and then fold the wings toward the Pterodactyl's body.

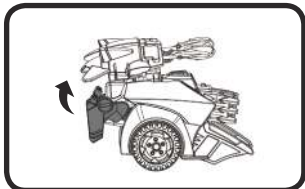


 4. Flip the feet up.

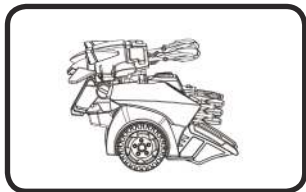


5. The Pterodactyl is now in Launcher mode.

 Combination

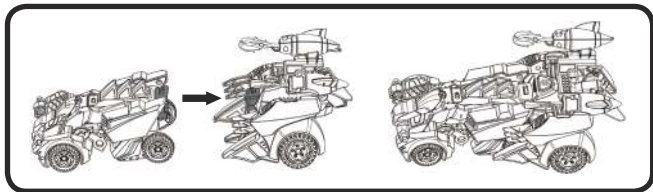

 Insert the vehicle to the launcher to combine as a Super Race Car.

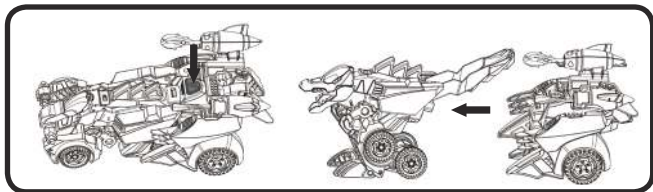

Press the Launch Button to release the vehicle and auto-switch into a super Spinosaurus.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to play again.
5. If the unit still does not work, install a new set of batteries.

IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S., **1-877-352-8697** in Canada, or by going to our website **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity
47 CFR § 2.1077 Compliance Information

Trade Name: VTech®
Model: 5493
Product Name: Switch & Go® 2-in-1 Spino Speedster
Responsible Party: VTech Electronics North America, L.L.C.
Address: 1156 W. Shure Drive, Suite 200
Arlington Heights, IL 60004
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

CAN ICES-003(B)/NMB-003(B)



WARNING:

CHOKING HAZARD—Small parts
Not for children under 3 yrs.



AVERTISSEMENT:

RISQUE DE SUFFOCATION—Petites
pièces. Ne convient pas aux enfants de
moins de 3 ans.

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com

vtechkids.ca

Read our complete warranty policy online at
vtechkids.com/warranty
vtechkids.ca/warranty

