


# Mi Vacuum Cleaner Light HEPA Filter (2-Pack) User Manual



## How to Install

---

1. Open the dust compartment and remove the old HEPA filter.
2. Install the new HEPA filter into the dust compartment.
3. Place the dust compartment back into the vacuum cleaner.

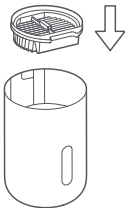


## Cleaning

---

Remove the HEPA filter from the dust compartment. Gently tap the filter to remove dust and then rinse it with water. To prevent dust from sticking together and affecting the suction effect, the HEPA filter must be thoroughly dry (do not expose it to direct

sunlight) before use. If necessary, you can replace the filter with the specified model of the HEPA filter.

- It is recommended to tap the filter to remove particles and dust after each use.
- It is recommended to clean the filter after every 5–6 times of use, or you can adjust the cleaning time based on your needs.
- It is better to replace the filter every 2–3 months to guarantee its cleaning ability and vacuuming effect.

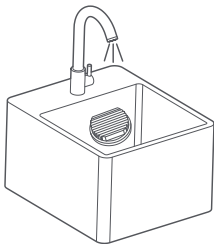

## Precautions

---

- To avoid cracking or discoloration of the shell, never expose the filter to chemical solvents, such as gasoline, ethyl alcohol, or banana oil.  
Do not use hard or pointy objects to scratch the surface of the filter;
- otherwise, the filter may be damaged and lose the filtration ability.  
It is recommended to replace the HEPA filter every 2–3 months. You may need to change it more often if it is used frequently.
- To avoid reducing the cleaning performance, make sure the HEPA filter is installed securely when doing the replacement.
- 

Note: Illustrations of product, accessories, and user interface in the user manual are for reference purposes only. Actual product and functions may vary due to product enhancements.

Importer:

Beryko s.r.o.

Na Roudné 1162/76, 301 00 Plzeň

[www.beryko.cz](http://www.beryko.cz)

Manufactured for: Xiaomi Communications Co., Ltd.

Manufactured by: Guangdong Deerma Technology Co., Ltd.

(a Mi Ecosystem company)

For further information, please go to [www.mi.com](http://www.mi.com)

Address: No.4-1 Longhui Road, Malong Village Committee, Beijiao Town,  
Shunde District, Foshan City, Guangdong Province, China