 




Please read this manual carefully before using the product and keep it open.

Product Overview

This compact and portable power bank supports 22.5 W non-rapid fast charging. When charging Xiaomi mobile phones with smart fast charging function, the maximum power can reach 22.5 W. It features a high-quality lithium-ion battery and a charging/discharging chip with excellent performance in safety, efficiency, and compatibility.

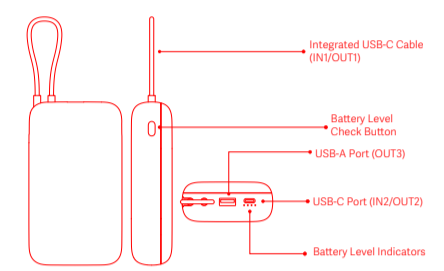

The battery level check button is not a power button. The power bank detects charging and discharging automatically.

Safety: Xiaomi power bank has multiple protection designs, which can easily deal with various abnormal situations such as overcharging, over-discharging, high temperature, short circuit, etc., providing reliable protection for power banks and digital devices. Fast charging: The USB-A port supports 5 V/3 A, 9 V/2.25 A, 10 V/2.25 A, 12 V/1.67 A Max. Fast charging the USB-C port/USB-C integrated cable supports 5 V/3 A, 9 V/2.25 A, 10 V/2.25 A, 12 V/1.67 A Max. fast charging.

Compatibility: Built-in intelligent USB charging controller, compatible with mainstream mobile phones and digital devices. Quality: High-quality lithium-ion batteries and charging and discharging chips.

1

Charging

The power bank supports smart temperature control. If you frequently plug/unplug a device into/out of the power bank during fast charging, it may result in temperature detection errors. Therefore, it is recommended to continuously charge your device, rather than frequently plugging/unplugging it into/out of the charging port. Use a Xiaomi charger and charging cable to charge the power bank via the USB-C port, or charge it with the integrated USB-C cable on the power bank and a Xiaomi charger. During charging, the battery level information is indicated by the battery level indicators as follows:

Battery Level	LED1	LED2	LED3	LED4
0-25%	Blinking	Off	Off	Off
25-50%	On	Blinking	Off	Off
50-75%	On	On	Blinking	Off
75-100%	On	On	On	Blinking
Charging	On	On	On	On
Charging complete	Blinking	Blinking	Blinking	Blinking

Discharging

The power bank uses a USB-A/USB-C port or the integrated USB-C cable for charging other devices. During discharging, the battery level information is indicated by the battery level indicators as follows:

Battery Level	LED1	LED2	LED3	LED4
0-25%	Blinking	Off	Off	Off
25-50%	Blinking	Blinking	Off	Off
50-75%	Blinking	Blinking	Blinking	Off
75-100%	Blinking	Blinking	Blinking	Blinking

*Low-current discharge (SBA): When the power bank is not being charged, double press the battery level check button to enter the low-current discharge mode. This mode can be used to continuously charge low-current devices such as Bluetooth headphones and smart bands. The indicator will light up in sequence to indicate the power bank is in low-current discharge mode. Simply press the button again to exit this mode. The power bank will automatically exit this mode after 2 hours.

2

Specifications

Name: Power Bank Model: PB2000M Rated Capacity: 10000mAh (5 V/3 A) Net Weight: 345g Output Power: 22.5W Max. Multi-port: 5 V/3 A Integrated USB-C Cable (DU73) 5 V/3 A, 9 V/2.25 A, 10 V/2.25 A, 12 V/1.67 A Max. USB-A (DU73) 5 V/3 A, 9 V/2.25 A, 10 V/2.25 A, 12 V/1.67 A Max. Operating Temperature: 0°C to 35°C Item Dimensions: 128 * 73 * 32 mm Charging Time: Approx. 12.5 hrs via 5 V/2 A charger Approx. 5.5 hrs via 9 V/2.5 A charger

Precautions

- Please fully charge the power bank on its first use.
- Use an appropriate charger and USB cable. Xiaomi brand products are recommended to charge the power bank and other devices via wires.
- Do not leave the power bank unattended when it is being charged or using it to charge other devices. Unplug the charger and charging cable after the power bank is fully charged or before you leave for a long time.
- Once this power bank is fully charged or charges another device to full, unplug the charging cable in time to avoid power consumption of the power bank.
- If the battery level indicator does not light up after pressing the button, it may be because the power bank is in protective mode. Plugging/plugging in an external charger will restore the power bank.
- When not using this power bank for a long time, store it in a cool and dry environment and keep its battery level in the range of about 20-80%. For long-term storage, do not fully charge the power bank or leave the battery level empty to avoid reducing its battery life.

3

WARNINGS

Improper use may result in battery failure, overheating, or even fire or explosion. In order to avoid harm to your personal safety and property, please read and use the product correctly in accordance with the following requirements:

- This power bank is not a toy. Please keep it away from children. Do not let children use or play with this power bank in order to avoid accidents.
- Make sure you use a charger that complies with the local safety standards when charging this product. In order to prevent an electric shock or damage to the battery.
- Do not expose this power bank to pressure, impact, strong vibrations, or liquids. Any of these occurrences may lead to a short circuit or cause damage to the battery or electrical circuit. If this happens, stop using the power bank immediately and dispose of it properly.
- When the power bank becomes swollen, deformed, starts to leak, or its capacity is significantly reduced, please stop using it immediately and dispose of it properly.
- Do not charge or discharge this power bank in places where its heat dissipation may be affected, such as in the pocket of your pants, a closed bag, or on a bed or sofa. Ensure the power bank is not covered by clothing, pillows, bedding, or other miscellaneous items during its working. When using the power bank to charge devices including phones for an extended time, do not stack them together to ensure better heat dissipation.
- Do not disassemble, cut, squeeze, puncture, short-circuit the power bank or expose it to fire, lightning, fire, fire sources such as stoves, heaters, or an environment with an ambient temperature higher than 60°C (140°F). In hot weather, do not leave this power bank in air condition or other places under direct lighting.
- This power bank contains a lithium-ion battery. Opening the casing is strictly prohibited so as to avoid battery damage or safety hazards.
- If the battery level indicator does not light up after pressing the button, it may be because the power bank is in protective mode. Plugging/plugging in an external charger will restore the power bank.
- When not using this power bank for a long time, store it in a cool and dry environment and keep its battery level in the range of about 20-80%. For long-term storage, do not fully charge the power bank or leave the battery level empty to avoid reducing its battery life.

4

EU Declaration of Conformity

The manufacturer hereby declares that this equipment is in compliance with the applicable Directives and European Norms, and amendments. The full text of the EU declaration of conformity is available at the following internet address: <http://www.mi.com/global/en/service/support/declaration.html>


WEEE Information

All products bearing this symbol are waste electrical and electronic equipment (WEEE) as a Directive 2002/96/EC which should not be mixed with general household waste. Instead, you should protect human health and the environment by handing over your waste equipment to a designated collection point for the recycling of waste electrical and electronic equipment, appointed by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. Please contact the retailer or local authorities for more information about the location as well as terms and conditions of such collection points.

Illustrations of product and accessories in the user manual are for reference purposes only. Actual product and functions may vary due to product enhancements.

Manufactured by: Kunshan Kuanchuang Electron Co., Ltd. For further information, please go to www.mi.com User Manual Version: V1.0

 ທຳອິດ

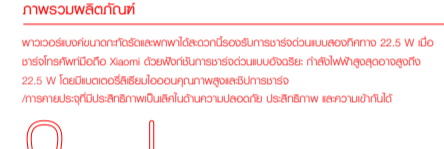


The battery level check button is not a power button. The power bank detects charging and discharging automatically.

Safety: Xiaomi power bank has multiple protection designs, which can easily deal with various abnormal situations such as overcharging, over-discharging, high temperature, short circuit, etc., providing reliable protection for power banks and digital devices. Fast charging: The USB-A port supports 5 V/3 A, 9 V/2.25 A, 10 V/2.25 A, 12 V/1.67 A Max. Fast charging the USB-C port/USB-C integrated cable supports 5 V/3 A, 9 V/2.25 A, 10 V/2.25 A, 12 V/1.67 A Max. fast charging.

Compatibility: Built-in intelligent USB charging controller, compatible with mainstream mobile phones and digital devices. Quality: High-quality lithium-ion batteries and charging and discharging chips.

1

ນຳໃຊ້

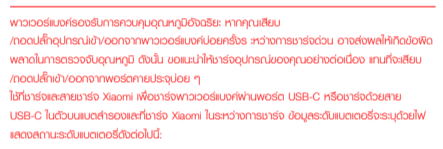

The battery level check button is not a power button. The power bank detects charging and discharging automatically.

Safety: Xiaomi power bank has multiple protection designs, which can easily deal with various abnormal situations such as overcharging, over-discharging, high temperature, short circuit, etc., providing reliable protection for power banks and digital devices. Fast charging: The USB-A port supports 5 V/3 A, 9 V/2.25 A, 10 V/2.25 A, 12 V/1.67 A Max. Fast charging the USB-C port/USB-C integrated cable supports 5 V/3 A, 9 V/2.25 A, 10 V/2.25 A, 12 V/1.67 A Max. fast charging.

Compatibility: Built-in intelligent USB charging controller, compatible with mainstream mobile phones and digital devices. Quality: High-quality lithium-ion batteries and charging and discharging chips.

2

ລັກສະນະ

Name: Power Bank Model: PB2000M Rated Capacity: 10000mAh (5 V/3 A) Net Weight: 345g Output Power: 22.5W Max. Multi-port: 5 V/3 A Integrated USB-C Cable (DU73) 5 V/3 A, 9 V/2.25 A, 10 V/2.25 A, 12 V/1.67 A Max. USB-A (DU73) 5 V/3 A, 9 V/2.25 A, 10 V/2.25 A, 12 V/1.67 A Max. Operating Temperature: 0°C to 35°C Item Dimensions: 128 * 73 * 32 mm Charging Time: Approx. 12.5 hrs via 5 V/2 A charger Approx. 5.5 hrs via 9 V/2.5 A charger

ຄວາມປອດໄພ

- Do not leave the power bank unattended when it is being charged or using it to charge other devices. Unplug the charger and charging cable after the power bank is fully charged or before you leave for a long time.
- Once this power bank is fully charged or charges another device to full, unplug the charging cable in time to avoid power consumption of the power bank.
- If the battery level indicator does not light up after pressing the button, it may be because the power bank is in protective mode. Plugging/plugging in an external charger will restore the power bank.
- When not using this power bank for a long time, store it in a cool and dry environment and keep its battery level in the range of about 20-80%. For long-term storage, do not fully charge the power bank or leave the battery level empty to avoid reducing its battery life.

3

ຄວາມປອດໄພ

Improper use may result in battery failure, overheating, or even fire or explosion. In order to avoid harm to your personal safety and property, please read and use the product correctly in accordance with the following requirements:

- This power bank is not a toy. Please keep it away from children. Do not let children use or play with this power bank in order to avoid accidents.
- Make sure you use a charger that complies with the local safety standards when charging this product. In order to prevent an electric shock or damage to the battery.
- Do not expose this power bank to pressure, impact, strong vibrations, or liquids. Any of these occurrences may lead to a short circuit or cause damage to the battery or electrical circuit. If this happens, stop using the power bank immediately and dispose of it properly.
- When the power bank becomes swollen, deformed, starts to leak, or its capacity is significantly reduced, please stop using it immediately and dispose of it properly.
- Do not charge or discharge this power bank in places where its heat dissipation may be affected, such as in the pocket of your pants, a closed bag, or on a bed or sofa. Ensure the power bank is not covered by clothing, pillows, bedding, or other miscellaneous items during its working. When using the power bank to charge devices including phones for an extended time, do not stack them together to ensure better heat dissipation.
- Do not disassemble, cut, squeeze, puncture, short-circuit the power bank or expose it to fire, lightning, fire, fire sources such as stoves, heaters, or an environment with an ambient temperature higher than 60°C (140°F). In hot weather, do not leave this power bank in air condition or other places under direct lighting.
- This power bank contains a lithium-ion battery. Opening the casing is strictly prohibited so as to avoid battery damage or safety hazards.
- If the battery level indicator does not light up after pressing the button, it may be because the power bank is in protective mode. Plugging/plugging in an external charger will restore the power bank.
- When not using this power bank for a long time, store it in a cool and dry environment and keep its battery level in the range of about 20-80%. For long-term storage, do not fully charge the power bank or leave the battery level empty to avoid reducing its battery life.

4

EU Declaration of Conformity

The manufacturer hereby declares that this equipment is in compliance with the applicable Directives and European Norms, and amendments. The full text of the EU declaration of conformity is available at the following internet address: <http://www.mi.com/global/en/service/support/declaration.html>

WEEE Information


All products bearing this symbol are waste electrical and electronic equipment (WEEE) as a Directive 2002/96/EC which should not be mixed with general household waste. Instead, you should protect human health and the environment by handing over your waste equipment to a designated collection point for the recycling of waste electrical and electronic equipment, appointed by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. Please contact the retailer or local authorities for more information about the location as well as terms and conditions of such collection points.

Illustrations of product and accessories in the user manual are for reference purposes only. Actual product and functions may vary due to product enhancements.

Manufactured by: Kunshan Kuanchuang Electron Co., Ltd. For further information, please go to www.mi.com User Manual Version: V1.0

ຫ້າງສິດສິນເຊີງ

 This compact and portable power bank supports 22.5 W non-rapid fast charging. When charging Xiaomi mobile phones with smart fast charging function, the maximum power can reach 22.5 W. It features a high-quality lithium-ion battery and a charging/discharging chip with excellent performance in safety, efficiency, and compatibility.

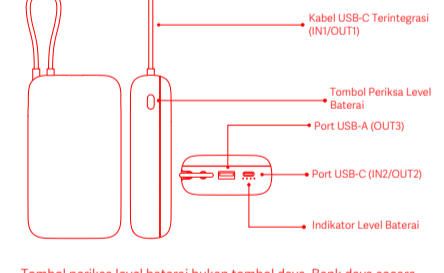

The battery level check button is not a power button. The power bank detects charging and discharging automatically.

Safety: Xiaomi power bank has multiple protection designs, which can easily deal with various abnormal situations such as overcharging, over-discharging, high temperature, short circuit, etc., providing reliable protection for power banks and digital devices. Fast charging: The USB-A port supports 5 V/3 A, 9 V/2.25 A, 10 V/2.25 A, 12 V/1.67 A Max. Fast charging the USB-C port/USB-C integrated cable supports 5 V/3 A, 9 V/2.25 A, 10 V/2.25 A, 12 V/1.67 A Max. fast charging.

Compatibility: Built-in intelligent USB charging controller, compatible with mainstream mobile phones and digital devices. Quality: High-quality lithium-ion batteries and charging and discharging chips.

6

ເປັນຫຍັງ

The power bank supports smart temperature control. If you frequently plug/unplug a device into/out of the power bank during fast charging, it may result in temperature detection errors. Therefore, it is recommended to continuously charge your device, rather than frequently plugging/unplugging it into/out of the charging port. Use a Xiaomi charger and charging cable to charge the power bank via the USB-C port, or charge it with the integrated USB-C cable on the power bank and a Xiaomi charger. During charging, the battery level information is indicated by the battery level indicators as follows:

Battery Level	LED1	LED2	LED3	LED4
0-25%	Blinking	Off	Off	Off
25-50%	On	Blinking	Off	Off
50-75%	On	On	Blinking	Off
75-100%	On	On	On	Blinking
Charging	On	On	On	On
Charging complete	Blinking	Blinking	Blinking	Blinking

ການໃຊ້

The power bank uses a USB-A/USB-C port or the integrated USB-C cable for charging other devices. During discharging, the battery level information is indicated by the battery level indicators as follows:

Battery Level	LED1	LED2	LED3	LED4
0-25%	Blinking	Off	Off	Off
25-50%	Blinking	Blinking	Off	Off
50-75%	Blinking	Blinking	Blinking	Off
75-100%	Blinking	Blinking	Blinking	Blinking

*Low-current discharge (SBA): When the power bank is not being charged, double press the battery level check button to enter the low-current discharge mode. This mode can be used to continuously charge low-current devices such as Bluetooth headphones and smart bands. The indicator will light up in sequence to indicate the power bank is in low-current discharge mode. Simply press the button again to exit this mode. The power bank will automatically exit this mode after 2 hours.

7

ລັກສະນະ

Name: Power Bank Model: PB2000M Rated Capacity: 10000mAh (5 V/3 A) Net Weight: 345g Output Power: 22.5W Max. Multi-port: 5 V/3 A Integrated USB-C Cable (DU73) 5 V/3 A, 9 V/2.25 A, 10 V/2.25 A, 12 V/1.67 A Max. USB-A (DU73) 5 V/3 A, 9 V/2.25 A, 10 V/2.25 A, 12 V/1.67 A Max. Operating Temperature: 0°C to 35°C Item Dimensions: 128 * 73 * 32 mm Charging Time: Approx. 12.5 hrs via 5 V/2 A charger Approx. 5.5 hrs via 9 V/2.5 A charger

ຄວາມປອດໄພ

- Do not leave the power bank unattended when it is being charged or using it to charge other devices. Unplug the charger and charging cable after the power bank is fully charged or before you leave for a long time.
- Once this power bank is fully charged or charges another device to full, unplug the charging cable in time to avoid power consumption of the power bank.
- If the battery level indicator does not light up after pressing the button, it may be because the power bank is in protective mode. Plugging/plugging in an external charger will restore the power bank.
- When not using this power bank for a long time, store it in a cool and dry environment and keep its battery level in the range of about 20-80%. For long-term storage, do not fully charge the power bank or leave the battery level empty to avoid reducing its battery life.

8

ຄວາມປອດໄພ

Improper use may result in battery failure, overheating, or even fire or explosion. In order to avoid harm to your personal safety and property, please read and use the product correctly in accordance with the following requirements:

- This power bank is not a toy. Please keep it away from children. Do not let children use or play with this power bank in order to avoid accidents.
- Make sure you use a charger that complies with the local safety standards when charging this product. In order to prevent an electric shock or damage to the battery.
- Do not expose this power bank to pressure, impact, strong vibrations, or liquids. Any of these occurrences may lead to a short circuit or cause damage to the battery or electrical circuit. If this happens, stop using the power bank immediately and dispose of it properly.
- When the power bank becomes swollen, deformed, starts to leak, or its capacity is significantly reduced, please stop using it immediately and dispose of it properly.
- Do not charge or discharge this power bank in places where its heat dissipation may be affected, such as in the pocket of your pants, a closed bag, or on a bed or sofa. Ensure the power bank is not covered by clothing, pillows, bedding, or other miscellaneous items during its working. When using the power bank to charge devices including phones for an extended time, do not stack them together to ensure better heat dissipation.
- Do not disassemble, cut, squeeze, puncture, short-circuit the power bank or expose it to fire, lightning, fire, fire sources such as stoves, heaters, or an environment with an ambient temperature higher than 60°C (140°F). In hot weather, do not leave this power bank in air condition or other places under direct lighting.
- This power bank contains a lithium-ion battery. Opening the casing is strictly prohibited so as to avoid battery damage or safety hazards.
- If the battery level indicator does not light up after pressing the button, it may be because the power bank is in protective mode. Plugging/plugging in an external charger will restore the power bank.
- When not using this power bank for a long time, store it in a cool and dry environment and keep its battery level in the range of about 20-80%. For long-term storage, do not fully charge the power bank or leave the battery level empty to avoid reducing its battery life.

9

EU Declaration of Conformity

The manufacturer hereby declares that this equipment is in compliance with the applicable Directives and European Norms, and amendments. The full text of the EU declaration of conformity is available at the following internet address: <http://www.mi.com/global/en/service/support/declaration.html>

WEEE Information


All products bearing this symbol are waste electrical and electronic equipment (WEEE) as a Directive 2002/96/EC which should not be mixed with general household waste. Instead, you should protect human health and the environment by handing over your waste equipment to a designated collection point for the recycling of waste electrical and electronic equipment, appointed by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. Please contact the retailer or local authorities for more information about the location as well as terms and conditions of such collection points.

Illustrations of product and accessories in the user manual are for reference purposes only. Actual product and functions may vary due to product enhancements.

Manufactured by: Kunshan Kuanchuang Electron Co., Ltd. For further information, please go to www.mi.com User Manual Version: V1.0

ທ້າງສິດສິນເຊີງ

 This compact and portable power bank supports 22.5 W non-rapid fast charging. When charging Xiaomi mobile phones with smart fast charging function, the maximum power can reach 22.5 W. It features a high-quality lithium-ion battery and a charging/discharging chip with excellent performance in safety, efficiency, and compatibility.

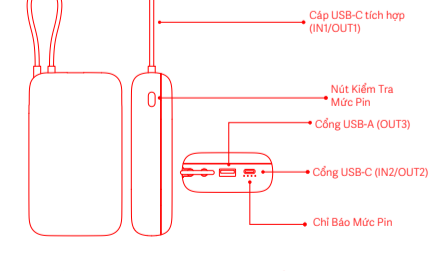

The battery level check button is not a power button. The power bank detects charging and discharging automatically.

Safety: Xiaomi power bank has multiple protection designs, which can easily deal with various abnormal situations such as overcharging, over-discharging, high temperature, short circuit, etc., providing reliable protection for power banks and digital devices. Fast charging: The USB-A port supports 5 V/3 A, 9 V/2.25 A, 10 V/2.25 A, 12 V/1.67 A Max. Fast charging the USB-C port/USB-C integrated cable supports 5 V/3 A, 9 V/2.25 A, 10 V/2.25 A, 12 V/1.67 A Max. fast charging.

Compatibility: Built-in intelligent USB charging controller, compatible with mainstream mobile phones and digital devices. Quality: High-quality lithium-ion batteries and charging and discharging chips.

15

ເປັນຫຍັງ

The power bank supports smart temperature control. If you frequently plug/unplug a device into/out of the power bank during fast charging, it may result in temperature detection errors. Therefore, it is recommended to continuously charge your device, rather than frequently plugging/unplugging it into/out of the charging port. Use a Xiaomi charger and charging cable to charge the power bank via the USB-C port, or charge it with the integrated USB-C cable on the power bank and a Xiaomi charger. During charging, the battery level information is indicated by the battery level indicators as follows:

Battery Level	LED1	LED2	LED3	LED4
0-25%	Blinking	Off	Off	Off
25-50%	On	Blinking	Off	Off
50-75%	On	On	Blinking	Off
75-100%	On	On	On	Blinking
Charging	On	On	On	On
Charging complete	Blinking	Blinking	Blinking	Blinking

ການໃຊ້

The power bank uses a USB-A/USB-C port or the integrated USB-C cable for charging other devices. During discharging, the battery level information is indicated by the battery level indicators as follows:

Battery Level	LED1	LED2	LED3	LED4
0-25%	Blinking	Off	Off	Off
25-50%	Blinking	Blinking	Off	Off
50-75%	Blinking	Blinking	Blinking	Off
75-100%	Blinking	Blinking	Blinking	Blinking

*Low-current discharge (SBA): When the power bank is not being charged, double press the battery level check button to enter the low-current discharge mode. This mode can be used to continuously charge low-current devices such as Bluetooth headphones and smart bands. The indicator will light up in sequence to indicate the power bank is in low-current discharge mode. Simply press the button again to exit this mode. The power bank will automatically exit this mode after 2 hours.

16

ລັກສະນະ

Name: Power Bank Model: PB2000M Rated Capacity: 10000mAh (5 V/3 A) Net Weight: 345g Output Power: 22.5W Max. Multi-port: 5 V/3 A Integrated USB-C Cable (DU73) 5 V/3 A, 9 V/2.25 A, 10 V/2.25 A, 12 V/1.67 A Max. USB-A (DU73) 5 V/3 A, 9 V/2.25 A, 10 V/2.25 A, 12 V/1.67 A Max. Operating Temperature: 0°C to 35°C Item Dimensions: 128 * 73 * 32 mm Charging Time: Approx. 12.5 hrs via 5 V/2 A charger Approx. 5.5 hrs via 9 V/2.5 A charger

ຄວາມປອດໄພ

- Do not leave the power bank unattended when it is being charged or using it to charge other devices. Unplug the charger and charging cable after the power bank is fully charged or before you leave for a long time.
- Once this power bank is fully charged or charges another device to full, unplug the charging cable in time to avoid power consumption of the power bank.
- If the battery level indicator does not light up after pressing the button, it may be because the power bank is in protective mode. Plugging/plugging in an external charger will restore the power bank.
- When not using this power bank for a long time, store it in a cool and dry environment and keep its battery level in the range of about 20-80%. For long-term storage, do not fully charge the power bank or leave the battery level empty to avoid reducing its battery life.

17

ຄວາມປອດໄພ

Improper use may result in battery failure, overheating, or even fire or explosion. In order to avoid harm to your personal safety and property, please read and use the product correctly in accordance with the following requirements:

- This power bank is not a toy. Please keep it away from children. Do not let children use or play with this power bank in order to avoid accidents.
- Make sure you use a charger that complies with the local safety standards when charging this product. In order to prevent an electric shock or damage to the battery.
- Do not expose this power bank to pressure, impact, strong vibrations, or liquids. Any of these occurrences may lead to a short circuit or cause damage to the battery or electrical circuit. If this happens, stop using the power bank immediately and dispose of it properly.
- When the power bank becomes swollen, deformed, starts to leak, or its capacity is significantly reduced, please stop using it immediately and dispose of it properly.
- Do not charge or discharge this power bank in places where its heat dissipation may be affected, such as in the pocket of your pants, a closed bag, or on a bed or sofa. Ensure the power bank is not covered by clothing, pillows, bedding, or other miscellaneous items during its working. When using the power bank to charge devices including phones for an extended time, do not stack them together to ensure better heat dissipation.
- Do not disassemble, cut, squeeze, puncture, short-circuit the power bank or expose it to fire, lightning, fire, fire sources such as stoves, heaters, or an environment with an ambient temperature higher than 60°C (140°F). In hot weather, do not leave this power bank in air condition or other places under direct lighting.
- This power bank contains a lithium-ion battery. Opening the casing is strictly prohibited so as to avoid battery damage or safety hazards.
- If the battery level indicator does not light up after pressing the button, it may be because the power bank is in protective mode. Plugging/plugging in an external charger will restore the power bank.
- When not using this power bank for a long time, store it in a cool and dry environment and keep its battery level in the range of about 20-80%. For long-term storage, do not fully charge the power bank or leave the battery level empty to avoid reducing its battery life.

18

EU Declaration of Conformity

The manufacturer hereby declares that this equipment is in compliance with the applicable Directives and European Norms, and amendments. The full text of the EU declaration of conformity is available at the following internet address: <http://www.mi.com/global/en/service/support/declaration.html>

WEEE Information

All products bearing this symbol are waste electrical and electronic equipment (WEEE) as a Directive 2002/96/EC which should not be mixed with general household waste. Instead, you should protect human health and the environment by handing over your waste equipment to a designated collection point for the recycling of