

User Manual**

Thank you for purchasing our 2.4GHz 24-Key Light Fixture Remote Control. This state-of-the-art remote allows you to command a wide range of lighting functions for your smart lights, LED strips, and other compatible lighting systems. Operating on a robust 2.4GHz frequency, it ensures a stable and interference-free connection, providing you with seamless control over your lighting environment.

Package Contents

- 2.4GHz 24-Key Remote Control
- User Manual
- CR2032 Battery (Pre-installed)

Getting Started

1. **Battery Installation**:

- Locate the battery compartment on the back of the remote.
- Slide or pop open the compartment and insert a fresh CR2032 battery, making sure the positive (+) side aligns correctly.
- Securely close the battery compartment.

2. **Pairing with Light Fixture**:

- Ensure your light fixture is powered on and within range of the remote (typically up to 15 meters or 50 feet in open space).
- Press and hold the "PAIR" button on the remote for approximately 3 seconds until the LED indicator lights up and begins to flash.
- Follow the specific pairing instructions for your light fixture, if any. For most smart lights, this involves pressing a specific button on the fixture or using a mobile app to accept the pairing request.
- The LED will flash and then remain solid if pairing is successful.

Remote Control Buttons and Functions

- ****Power Button****: Turns the light fixture on or off.
- ****Brightness Control (Up/Down)****: Adjusts the brightness level of the lights.
- ****Color Temperature Control (Warm/Cool)****: Adjusts the color temperature of compatible lighting systems.
- ****Color Wheel/Mode Selection****: Allows you to cycle through different color options or lighting modes.
- ****Speed Control (if applicable)****: Adjusts the speed of dynamic lighting effects, such as strobe or fade.
- ****Scene Buttons (4x customizable)****: Can be programmed to save and recall specific lighting scenes or settings.
- ****PAIR Button****: Used for initial pairing and sometimes resetting the remote to factory

settings.

- **Directional Navigation Keys**: Used for navigating menus in conjunction with the Scene and Mode buttons on certain light fixtures.

Troubleshooting

- **Remote Not Responding**:

- Check if the battery is properly installed and not depleted. Replace with a fresh battery if needed.

- Ensure the light fixture is powered on and within range.

- Re-pair the remote with the light fixture if necessary.

- Check for any obstacles that could block the signal between the remote and the light fixture.

- **LED Indicator Blinking Continuously**:

- Indicates a pairing issue. Try re-pairing the remote with the light fixture, ensuring no other devices are interfering.

Maintenance

- Avoid exposing the remote to extreme temperatures or moisture.

- Clean the remote with a soft, dry cloth. Do not use abrasive materials or liquids.

- Replace the battery when the remote's performance declines.

Safety Information

- Keep the remote and battery away from children.

- Dispose of used batteries according to local recycling regulations.

- Do not attempt to disassemble the remote.

Advanced Features (if applicable)

- **Grouping Function**: Allows you to control multiple light fixtures simultaneously if they support grouping. Refer to the specific instructions for your light fixture for details on how to set up and use this feature.

- **Timer and Scheduling**: Set the lights to turn on or off at specific times. This feature may require the use of a companion mobile app or additional hardware.

Customer Support

For any further assistance, please refer to our online support portal or contact our customer service team at [Insert Customer Service Contact Information].

****Note**:** This manual is a generic guide and specific functionalities or pairing procedures may vary slightly depending on the light fixture being controlled. Always refer to the user manual of your light fixture for detailed compatibility and programming instructions.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.