

成品尺寸:65*175mm

纸材: 60g双胶纸

颜色: 单色黑 K100


工艺: 8折9页 风琴折

印刷: 双面印

封面

175mm

65mm



Coffee Grinder

ART.NO.10909691(KMDJ-2A)
EAN:6001224628654

INDOOR HOUSEHOLD USE ONLY
Please save and read this instruction manual carefully before use

ENGLISH

Thank you for purchasing PLATINUM electric coffee grinder.


BEFORE USING FOR THE FIRST TIME

To ensure safety and maintain the high quality of the product, we recommend that you read and follow the instructions that you read and follow the instructions carefully.

- Do not immerse the appliance in water or any other liquid to avoid harm to human or the product.
- Use for roasted coffee beans only, please do not attempt to speed up the process.
- Do not force the grinder to tighten or twist it or attempt to speed up the process.
- Keep body parts (e.g. fingers) and utensils away from the grinding burr to avoid damage.
- Keep this product away from children.
- Do not dismantle the product by yourself, or otherwise warranty will be invalid.
- Keep away from flammable, explosive gas, high temperature.
- Using the product in any manner not described in these instructions releases the manufacturer from all liability.
- Please contact our Customer care number 0800 01 07 09 if you require any further product information or a copy of the instructions manual.

ENGLISH

PRODUCT DESCRIPTION

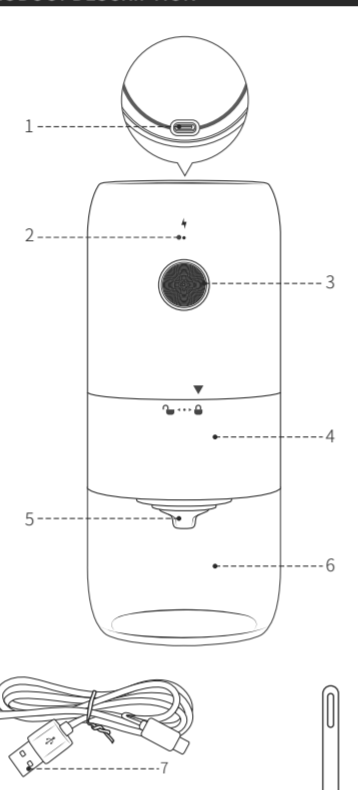


- Charging Socket
- Indicator Light
- ON/OFF Button
- Coffee Bean Container
- Adjuster
- Coffee Powder Container
- Type-C Charging Cable
- Brush

ENGLISH

HOW TO CHARGE

- Connect the Type-C charging cable with an adapter, plug the adapter into an electric socket, then connect the charging cable to the Type-C interface at the top of the grinder.
- When charging, the indicator light lights up, indicating it is charging normally.
- The indicator light stops lighting when the battery is fully charged.
- It takes less than 3.5 hours to fully charge the battery.

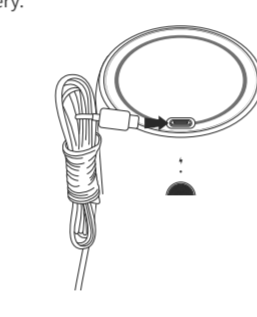


CAUTIONS

- Adapter is not included with this product. Charge with UL/CS or equivalent safety approved adapters with output voltage of 5V =.
- Low battery warning: If indicator light is flashing during use, it means low battery. Please charge the grinder as soon as possible.
- This is a lithium-battery rechargeable product. When not in use, it is recommended to charge every three months to ensure service life of the battery.
- Before connecting to the power source, ensure the adapter, charging cable plus, and the charging port on the device are completely dry.
- Always disconnect the device from the power supply if it is to be left unattended.
- Before each use, check that the appliance and cord are in good condition. Never use the appliance if the cord is damaged.


ENGLISH

HOW TO USE THE GRINDER


- Rotate and remove the upper body of the grinder according to the indication icons.




- Put the coffee beans into the container, then restore and lock it. (less than 30g each time)



- Remove the powder container. Rotate the adjuster for proper grinding coarseness based on coffee making style and taste preference. Restore and lock the powder container.

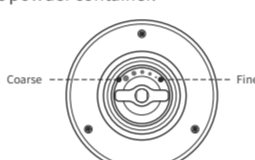


- Press the ON/OFF button to start grinding. It will automatically stop when the grinding is completed, or the user can press the button again to stop it manually.

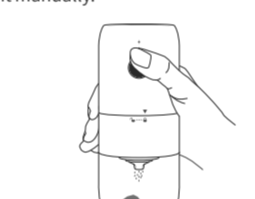

ENGLISH

CAUTIONS

- It is recommended to clean it with a brush. Do not wash it with water.
- Keep it in a cool and dry place.
- If the burr stuck when adjusting the coarseness, please rotate the adjuster counterclockwise for a few clicks, and then press the function button to start the motor, thus loosen the burr. (Note: This situation is caused by the characteristics of the ceramic grinding burr instead of the product quality, and does not affect the normal use of the product.)
- In the case that product stops working in the middle of grinding, it may be caused by the different features of coffee beans. Long press the button for 3 seconds, then the product shall continue working for at least 3 minutes until finishing the beans, or you can press the button to stop manually.
- This product adopts an adjustment knob. The adjuster could be rotated for multiple circles between the finest and the coarsest grinding.
- Adjust to Fine: Rotate the adjuster from "COARSE" TO "FINE". Continue to rotate for a few circles until the desired fineness is achieved.
- Adjust to Coarse: Rotate the adjuster from "FINE" TO "COARSE". If the adjuster loosens, it could be caused by some coffee bean grinds stuck in the burr. Start the product to rotate for 1 second, then the burr will be loosened and you can continue to adjust. This is a normal situation of ceramic burr and will not affect its normal use.
- If the adjuster falls off, please assemble the components in the orders shown below.



ENGLISH

TROUBLESHOOTING

If the grinder cannot work or stops during grinding:

- Please recharge the grinder and then try again. (Note: It is not recommended to use the product while charging.)
- If it is confirmed that the power is sufficient but the main machine still stop working during grinding, it is normal. You only need to press the switch again to restart grinding.
- If there is abnormal noise during grinding, please turn off the grinder first and rotate the adjuster with counter-clockwise direction.

If the grinder still works abnormally, please contact the vendor for maintenance service.

ENGLISH

WARRANTY

PLEASE AFFIX YOUR RECEIPT/PROOF OF PURCHASE HERE.

IN THE EVENT OF A CLAIM UNDER THIS WARRANTY THE AFORESAID RECEIPT/PROOF OF PURCHASE MUST BE PRODUCED TOGETHER WITH THIS WARRANTY

Model number	(Lot number:)
Product name	
Date of purchase	
Place of purchase	

- The party selling the product ("the seller" to the original purchaser of this product ("the customer") hereby warrants that this product will be of good quality and, in good working order and, free of defects and suitable for its intended purpose under normal household use, for a period of 1 (one) year from the date of purchase ("warranty period") of this product.
- In the event that the warranty period has not lapsed and the product is not of a good quality, or is defective or is not suitable for its intended purpose under normal household use, the customer may, subject to paragraph 3 below, return the product to the seller and have the following options available:
 - Within the first 6 (six) months of the warranty: to receive a refund of the actual price paid or to exchange the product for the same or similar product of the same purchased value;
 - Within the second 6 (six) months of the warranty: to have the product exchanged for the same or similar product of the same purchased value.
- The seller will not replace the product or refund the customer in terms of this warranty if the product:
 - has been altered contrary to the instructions provided in the product manual;
 - has been misused, abused or tampered with;
 - is defective or not in working order due to ordinary wear and tear;
 - is damaged resulting from the customer's gross negligence, recklessness, malicious behavior or criminal conduct;
 - has been utilised for commercial use.
- This warranty applies only to the product that has been purchased from the seller and not to any expendables attached to or installed on the product by the customer.
- Any claim in terms of this warranty must be supported by the original proof of purchase.
- Note that the exchange item will only carry the balance of the warranty period as from the original date of purchase.
- Please contact our Customer care number 0800 01 07 09 if you require any further product information or a copy of the instruction manual.

PORTUGUÊS

Obrigado por comprar um moedor de café elétrico de PLATINUM.


ANTES DE USAR PELA PRIMEIRA VEZ

Para garantir a segurança e manter a alta qualidade do produto, recomendamos que você leia e siga as instruções que leu e siga as instruções com cuidado.

- Não mergulhe o aparelho na água ou em qualquer outro líquido para evitar danos ao humano ou ao produto.
- Use apenas para grãos de café assados, não use para outros fins.
- Não force o moedor a apertar ou torcer ou tente acelerar o mecanismo.
- Mantenha as partes do corpo (por exemplo, dedos) e utensílios longe da rebarbada para evitar danos.
- Mantenha este produto longe das crianças.
- Não desmonte o produto sozinho ou, de outra forma, a garantia será inválida.
- Mantenha-se longe de gás inflamável e explosivo, alta temperatura.
- Usando o produto de qualquer maneira não descrita nessas instruções libera o fabricante de toda a responsabilidade.
- Por favor, entre em contato com o número de atendimento ao cliente 0800 01 07 09 Se você precisar de mais informações do produto ou uma cópia do manual de instruções.

PORTUGUÊS

DESCRIÇÃO DO PRODUTO

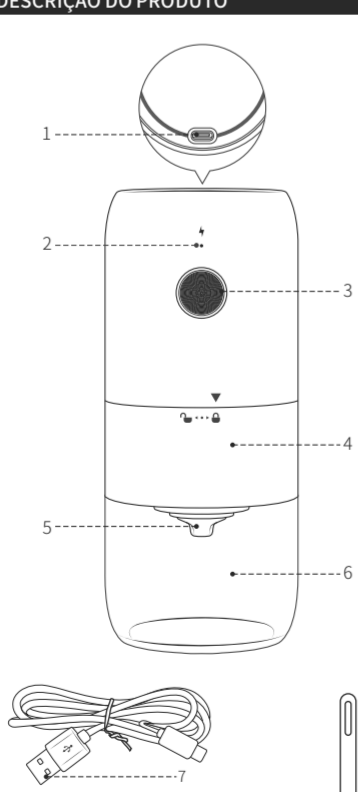


- Soquete de carregamento
- Luz indicadora
- Botão ON/OFF
- Contêiner de feijão de café
- ADJUSTOR
- Contêiner de café em pó
- Cabo de carregamento tipo C
- pincel

PORTUGUÊS

COMO COBRAR

- Conecte o cabo de carregamento do tipo C com um adaptador, conecte o adaptador a um soquete elétrico e conecte o cabo de carregamento à interface Tipo C na parte superior do moedor.
- Após carregar, a luz indicadora acende, indicando que está carregando normalmente.
- A luz indicadora para de iluminar quando a bateria está totalmente carregada.
- Demora menos de 3,5 horas para carregar completamente a bateria.

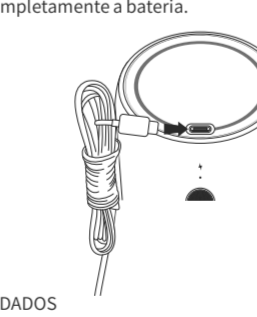


CUIDADOS

- O adaptador não está incluído neste produto. Cobrança com UL/CS ou adaptadores aprovados em segurança equivalente com tensão de saída de 5V =.
- Avise de bateria baixa: se a luz indicadora estiver piscando durante o uso, isso significa bateria baixa. Por favor, carregue o moedor o mais rápido possível.
- Este é um produto recarregável de bateria de lítio, quando não estiver em uso, é recomendável cobrir a cada três meses para garantir a vida útil da bateria.
- Antes de conectar-se à fonte de energia, verifique se o adaptador, o cabo de carregamento Plus e a porta de carregamento no dispositivo estão completamente secos.
- Sempre desconecte o dispositivo da fonte de alimentação para que seja deixado sem vigilância.
- Antes de cada uso, verifique se o aparelho e o cordão estão em boas condições. Nunca use o aparelho se o cordão for danado.


PORTUGUÊS

COMO USAR O MOEDOR


- Gire e remova a parte superior do corpo do moedor de acordo com os ícones de indicação.




- Coloque os grãos de café no recipiente, depois restaure e trave-o. (Menos de 30g de cada vez)



- Remova o recipiente em pó. Gire o ajustador para a grossa de moagem adequada, com base no estilo de fabricação de café e na preferência do sabor. Restaure e bloqueie o recipiente em pó.

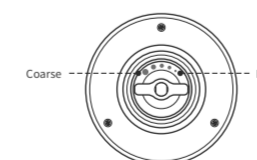


- Pressione o botão ON/OFF para começar a moer. Ele parará automaticamente quando a retificação for concluída ou o usuário pode pressionar o botão novamente para interromper o manualmente.



PORTUGUÊS

Cuidados

- É recomendável limpá-lo com um pincel. Não lave com água.
- Mantenha-o em um local fresco e seco.
- Se a rebarba pressa ao ajustar a grosseria, gire o ajustador no sentido anti-horário para alguns cliques e pressione o botão de função para iniciar o motor, afrouxar a rebarba (Nota: Esta situação é causada pelas características da rebarbadora de moagem de cerâmica em vez da qualidade do produto, e não afeta o uso normal do produto.)
- No caso de o produto parar de trabalhar no meio da moagem, pode ser causado pelas diferentes características dos grãos de café. Pressione o botão por muito tempo por 3 segundos, então o produto continuará trabalhando por pelo menos 3 minutos até terminar o feijão, ou você pode pressionar o botão para parar manualmente.
- Este produto adota um botão de ajuste. O ajustador pode ser girado para vários círculos entre o melhor e o mais grosseiro.
- Ajuste para multa: gire o ajustador de "grossa" para "fino". Continue girando para alguns círculos até que a finura desejada seja alcançada.
- Ajuste a grosso: gire o ajustador de "fino" para "grosso". Se o ajustador soltar, poderá ser causado por algumas moagens de feijão de café presas no rebarbador. Inicie o produto para girar por 1 segundo, então a rebarba será afrouxada e você poderá continuar a ajustar. Esta é uma situação normal de rebarbada de cerâmica e não afetará seu uso normal.
- Se o ajustador cair, monte os componentes nos pedidos mostrados abaixo.

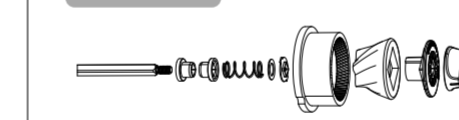

PORTUGUÊS

SOLUÇÃO DE PROBLEMAS

Se o moedor não puder funcionar ou parar durante a moagem:

- Recarregue o moedor e tente novamente. (Nota: não é recomendável usar o produto durante o carregamento.)
- Se for confirmado que a energia é suficiente, mas a máquina principal ainda pare de funcionar durante a moagem, é normal. Você só precisa pressionar o interruptor novamente para reiniciar a moagem.
- Se houver ruído anormal durante a moagem, desligue o moedor primeiro e gire o ajustador com direção no sentido anti-horário.
- Se as operações acima estiverem corretas e o moedor ainda funcionar de forma anormal, entre em contato com o fornecedor para o serviço de manutenção.

PORTUGUÊS

TERMO DE GARANTIA

FAVOR ANEXAR AQUI SEU RECIBO/FISCAL DE COMPRA.

EM CASO DE RECLAMAÇÃO DURANTE O PRAZO DA GARANTIA ESTE RECIBO/ FISCAL DE COMPRA DEVE SER APRESENTADO JUNTAMENTE COM ESTA GARANTIA.

Número do modelo	(Número do lote:)
Nome do produto	
Data da compra	
Local da compra	

- A parte vendedora do produto ("vendedor") ao comprador original deste produto ("comprador") garante por meio deste que o produto é de boa qualidade e, está em perfeitas condições de funcionamento e, sem defeitos e adequado para uso doméstico normal por um período de 1 (um) ano a partir da data da compra ("período da garantia") deste produto.
- No caso em que o período de garantia não expirou e o produto não é de boa qualidade, ou em bom estado de funcionamento ou, está com defeito ou não é adequado para a sua finalidade em uso doméstico normal, o cliente pode, de acordo com o Parágrafo 3º abaixo, devolver o produto ao vendedor e ter as seguintes opções disponíveis:
 - Nos primeiros 6 (seis) meses da garantia: para receber um reembolso do preço efetivamente pago ou a troca do produto para o mesmo produto ou similar do mesmo valor adquirido;
 - Dentro dos segundos 6 (seis) meses da garantia: ter o produto trocado para o mesmo produto ou similar do mesmo valor comprado.
- O vendedor não irá substituir o produto ou reembolsar o comprador de acordo com os termos desta garantia se o produto:
 - for modificado contrariando as instruções fornecidas no manual do produto;
 - soffer uso inadequado, abuso ou modificação;
 - for defeituoso ou não em condições de funcionamento devido ao desgaste natural
 - for danificado devido a negligência, imprudência, comportamento malicioso ou criminoso por parte do comprador.
 - for utilizado para fins comerciais.
- Esta garantia aplica-se somente ao produto adquirido do vendedor, não cobrindo quaisquer itens agregados ou instalados no produto pelo comprador.
- Qualquer reclamação nos termos desta garantia deve ser acompanhada da prova original de compra.
- Observe que o item de câmbio só irá transportar o saldo do período de garantia a partir da data de compra original.
- Entre em contato com o número de atendimento ao cliente 0800 01 07 09 se precisar de mais informações sobre o produto ou uma cópia do manual de instruções.