Use and Care Guide

Item # 1009537857
Model # 23RT04623112

3.5 ft Icicle Shimmer TWINKLING LED Doe

Safety Information

CAUTION: Grasp the plug to insert or remove from the power source. Do not unplug by pulling on cord.

CAUTION: The lighting string on this product is rated at 4.8 Watts (0.04 Amps). Do not overload. Do not connect to another lighting string, decorative outfit or other electrical products. Before you use or re-use this product inspect it carefully. Discard or return to place of purchase with purchase receipt if the product has cuts, damage, frayed wire insulation on cords, cracks in the socket enclosures, loose connections, exposed copper wire or other obvious damage.

Pre-Assembly

Carefully remove all the parts from the box and place them on the ground. Many parts are connected by the lighting string that runs throughout the item. Take special care not to pull, cut or damage the lighting string. Read the entire manual prior to assembly and identify all the parts included in the package against the parts list. It is recommended to assemble parts of the product while lying flat on the ground or a flat surface, versus standing the item up to assemble the parts. If any parts are missing or damaged do not attempt assembly but contact our customer service center or return to place of purchase with purchase receipt,1-855-HDHoliday (1-855-434-6543)
Assembly of this product may require more than one person.

TOOLS REQUIRED

Plier

PACKAGE CONTENTS

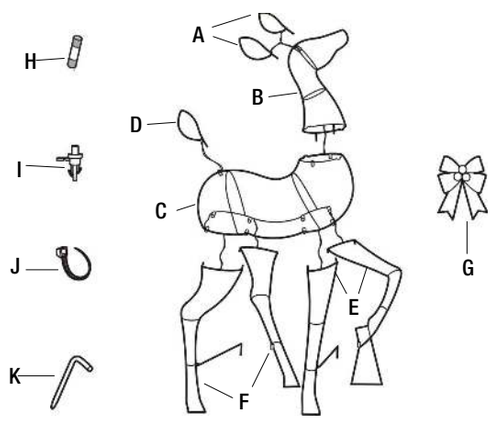

Part	Description	Quantity
A	Ear	2
B	Head / Neck	1
C	Body	1
D	Tail	1
E	Front Leg	2
F	Hind Leg	2
G	Bow	1
H	Spare Fuse	2
I	Spare Bulb	4
J	Plastic Tie	15
K	Ground Stake	4

Assembly

1 Assembling the Legs to the Body

- ☐ Insert the connecting rods on the Doe's Legs (E,F) into the connecting holes on the underside of the Body (C).

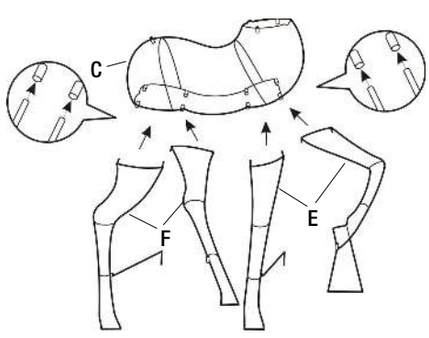

2 Securing the Legs to the Body

- ☐ Fasten the Body (C) and Legs (E,F) with the Plastic Ties (J) over the metal frames where the parts meet. The Legs come with metal bars attached to stabilize the Doe. Insert the hooked end of the metal bars into the metal nut on the opposite Leg.

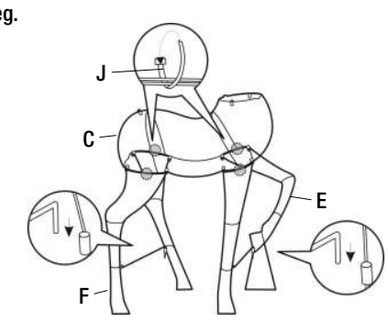

3 Assembling the Head / Neck to Body

- ☐ Insert the connecting rods on the bottom of the Head / Neck (B) into the connecting holes on the top front of the Body (C) and fasten together at the connecting loops with Plastic Ties (J).

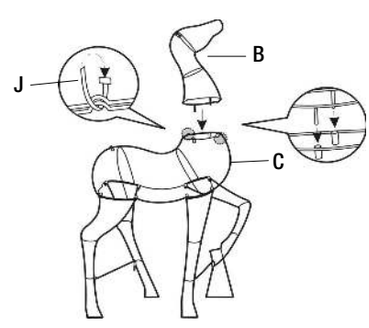

Assembly (continued)

4 Assembling the Ears to Head / Neck

- ☐ Insert the connecting rods on both Ears (A) into the matching connecting holes at the top of Head / Neck (B).

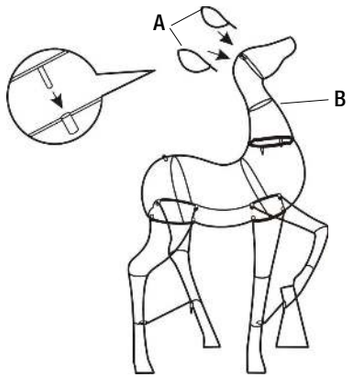

5 Assembling the Tail to Body

- ☐ Insert the connecting rod on the Tail (D) into the connecting hole at the rear of Body (C).

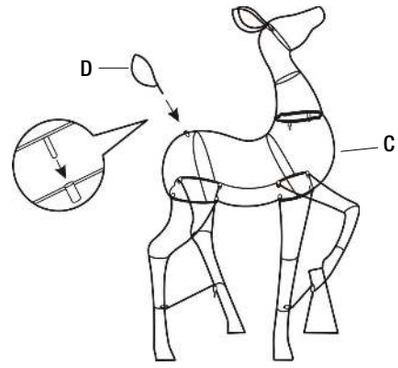

6 Assembling the Bow to Body

- ☐ Insert the wires ties on the back side of the Bow (G) through the holes of the Body material then twist the wires together around the metal frame or material to secure.

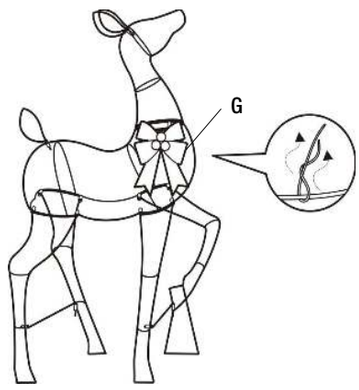

7 Assembling the Ground Stakes

- ☐ Insert the Ground Stakes (K) over the metal frame at each hoof of the Doe then firmly into the ground.

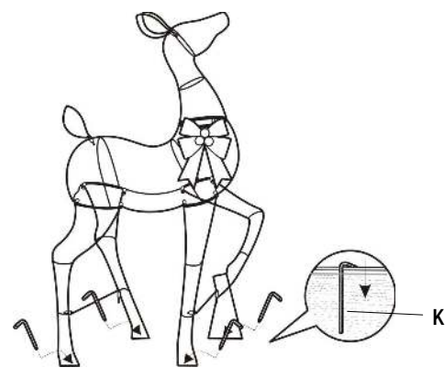

Troubleshooting

Problem	Solution
Unstable and hard to assemble	☐ Ensure that the ground or surface that the item sits on is flat and level.
Works improperly	☐ Be sure to plug the item correctly to a wall outlet or a UL Listed Power Cord. ☐ Do not plug into other electrical items.
Hard to assemble	☐ Ensure all parts are assembled properly per the Instruction Manual.
The item does not light	☐ If the item does not light check for loose or broken bulbs and connections and all plugs. ☐ Check for Broken or Burned Out Fuse In Plug.
One or more sections of multiple light strings not lighting	☐ If the item has multiple Light String Cords be sure to plug in all cords.

Care and Cleaning

- ☐ Carefully remove the product from wherever it is placed. This helps to avoid any undue strain or stress on the product connections and wires. If the product is placed somewhere other than the ground, it should be well secured and flat.
- ☐ Carefully disassemble the unit taking caution not to cut any electrical wires.
- ☐ Wipe the unit with a damp cloth and allow the unit to dry before storing.

Warranty

90 DAY LIMITED WARRANTY

WHAT IS COVERED

The product is intended for residential seasonal use for 90 days per year. This product is covered by a 90 days limited warranty. Return to place of purchase with purchase receipts for refund or exchange within 90 days of purchase.

WHAT IS NOT COVERED

This warranty does not cover commercial use, normal wear and tear, products not used in accordance with directions provided on or with the product, burn out of bulbs or LEDS, batteries, products that have been subjected to unauthorized repair and/or modification and damage caused by shipping and improper handling, alterations, misuse, in store display models or accidents. Questions, problems, missing parts? Before returning to the store, call Home Accents Holiday Customer Service 8 a.m.-6 p.m., EST, Monday-Friday 1-855-HDHoliday (1-855-434-6543)