



Eurowise 12V VR6 Intake - Install guide



Step 1:

Remove factory air box completely, including intake pipe connecting box to throttle body.

Disconnect Mass Air Flow sensor connector before removing from vehicle.



Step 2:

Install 90 degree silicone elbow onto throttle body. Secure elbow using supplied t-bolt clamp. Do not tighten clamp all the way until whole intake is in place, this will make the rest of the install easier due to some adjustments that may be needed when installing intake pipe.






Step 3:

Install Mass Air Flow sensor into aluminum intake pipe and secure with supplied hardware.



Be sure to press sensor into pipe with no gap for a flush, tight seal.

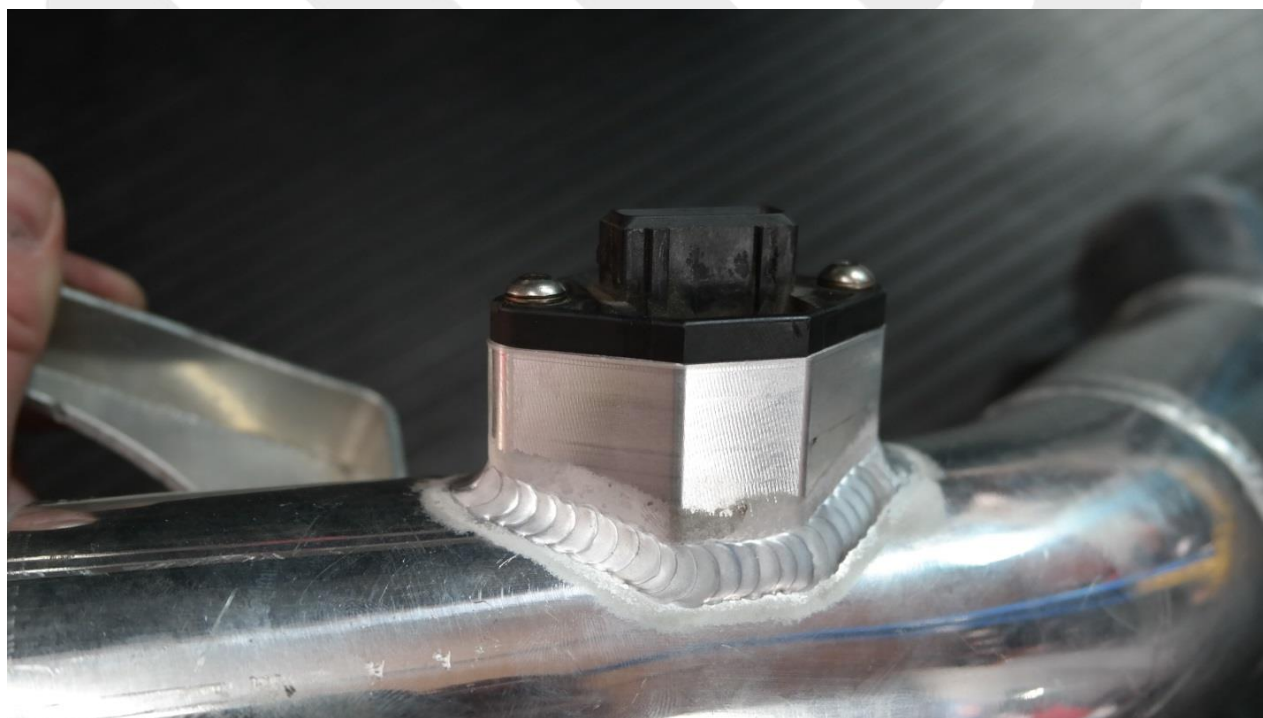



Connect Mass Air Flow sensor plug.



Step 4:

Insert aluminum pipe into silicone elbow.


Secure using t-bolt clamp, again not tightening completely for later ease of adjustments.





Step 5:

Remove upper belt tensioner bolt (13mm) to secure intake pipe.

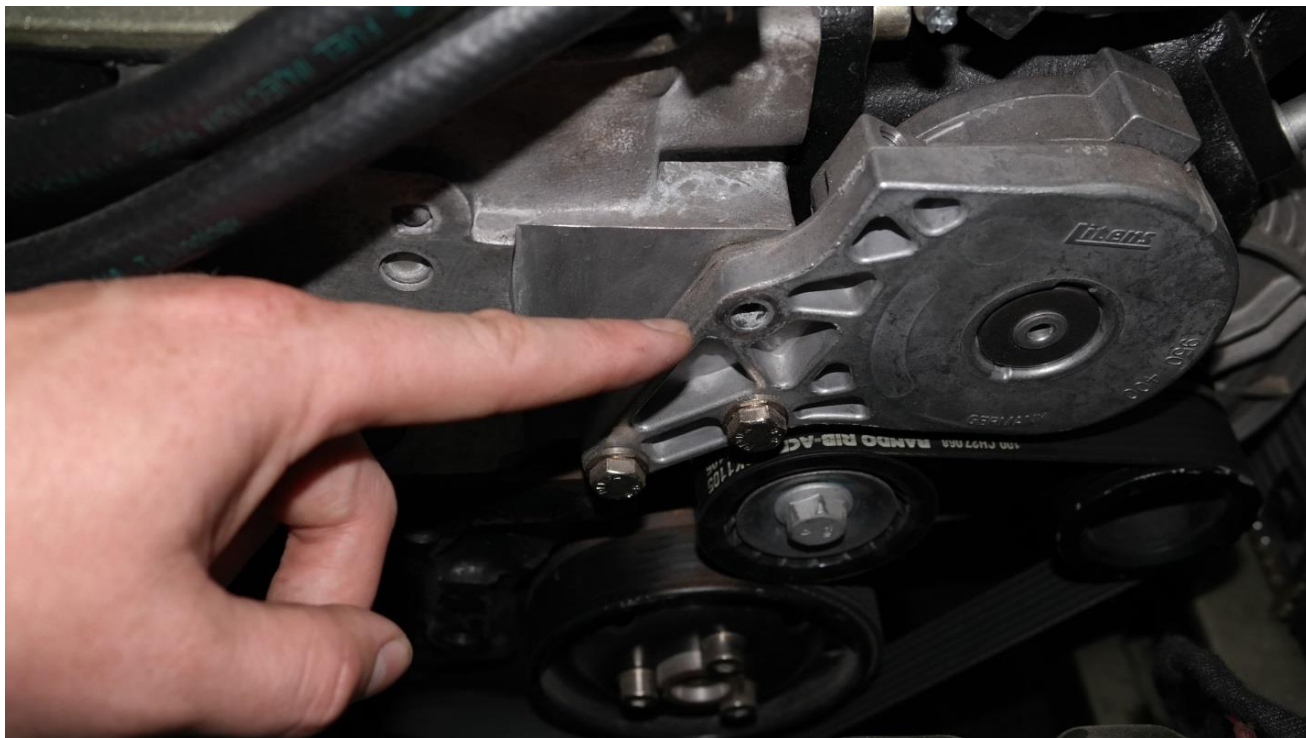


Secure intake pipe while reusing upper tensioner bolt.





Step 6:

Install supplied K&N air filter using supplied t-bolt clamp.

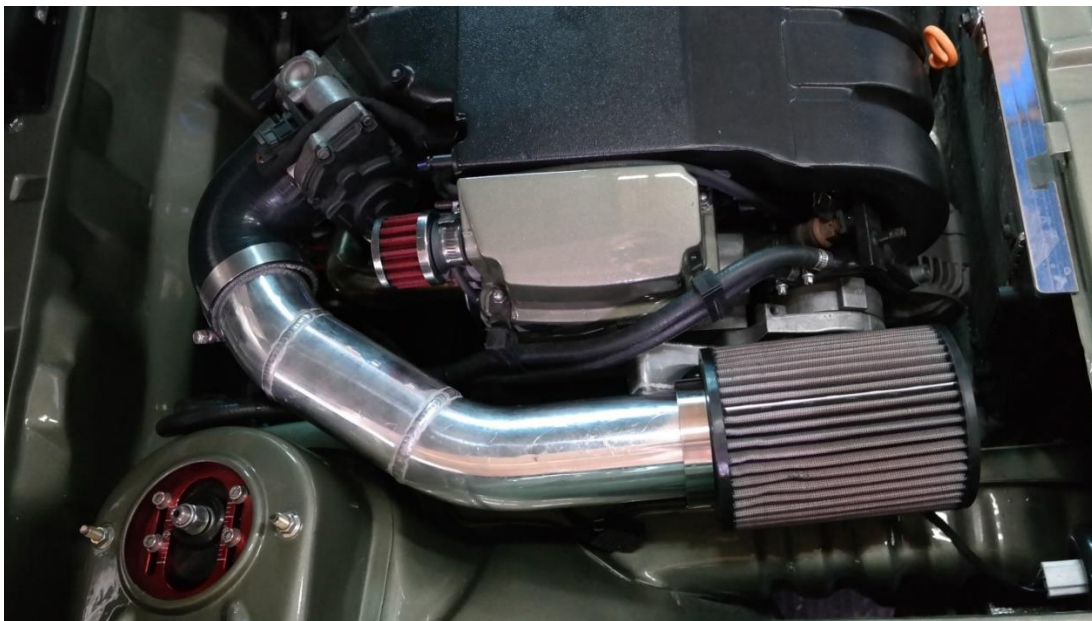

Step 7: (Final Step)

Secure all t-bolt clamps once kit is in place with filter installed.



**IF YOU HAVE ANY QUESTIONS, COMMENTS, OR CONCERNS RELATED TO YOUR PRODUCT
PLEASE CONTACT US!**