



iQ PLUS

EXPANDABLE TO 2-DOG SYSTEM

Owner's Manual

Please read this manual before
operating the iQ PLUS training collar.

IMPORTANT SAFETY AND PRODUCT INFORMATION

WARNING

Please read all safety and product information below before using your Dogtra product. Failure to follow these safety instructions could result in injury to you, your dog and others, or it could result in damage to your Dogtra product or other property.

PRODUCT SAFETY

Training Methods

Dogtra products may be used with a variety of training methods. However, each dog may have a different reaction

to training methods and to Dogtra products. Closely observe your dog when determining the right training method to use with your Dogtra product.

Aggressive Dogs

Do not use Dogtra products with aggressive dogs as such dogs may react adversely and cause injury to people or other dogs. Seek the assistance of a dog training specialist or veterinarian when dealing with aggressive dogs.

Children

Dogtra products are not toys. Adult supervision and close attention are necessary when Dogtra products are used by or near children.

PRODUCT DAMAGE

Electrical Product

Your Dogtra product contains electrical components and batteries. Do not use or keep your product near heat or flammable sources. Such use or storage may damage your product and/or cause fire, explosion, injury, or property damage.

Medical Device Interference

Dogtra products contain electrical and magnetic components that emit low level electromagnetic waves and radio frequencies. These electromagnetic waves or radio frequencies may interfere with pacemakers, defibrillators, or

other medical devices. Consult your physician or medical device maker before using your medical device with a Dogtra product. If you think that your Dogtra product is interfering with your pacemaker, defibrillator, or other medical device, stop using the Dogtra product.

Inadvertent Activation

The digital microprocessor offers thousands of unique codes to eliminate frequency match-up with other Dogtra e-collars. The Constant button will automatically shut down after being held down for 12 seconds or more as a safety feature.

UNAUTHORIZED USE

Your Dogtra product should be used only in a humane manner to train and educate your dog. Dogtra products are not intended for use in any other manner nor are they intended for use with other animals or with humans.


BATTERY

Your Dogtra product contains batteries. Take care when removing and installing batteries as your fingers may get caught. Dispose of batteries as provided by your local regulations. Do not disassemble, crush, heat, or otherwise alter the battery as it may cause fire, injury or property damage.

CONTENTS

AT A GLANCE	6
MAIN FEATURES	7
OVERVIEW	8
UNDERSTANDING YOUR TRAINING SYSTEM	
1. TURNING THE IQ PLUS ON/OFF	10
2. TRANSMITTER BUTTON FUNCTION	11
3. COLLAR FITTING	13
4. FINDING THE RIGHT STIMULATION	15
5. MAXIMIZING THE DISTANCE	16
6. LED INDICATOR	17
7. CHARGING THE BATTERY	18
8. CODE SETTING	20
GENERAL TRAINING TIPS	22
MAINTENANCE	24
TROUBLESHOOTING GUIDE	25
WARRANTY AND REPAIR INFORMATION	28

AT A GLANCE

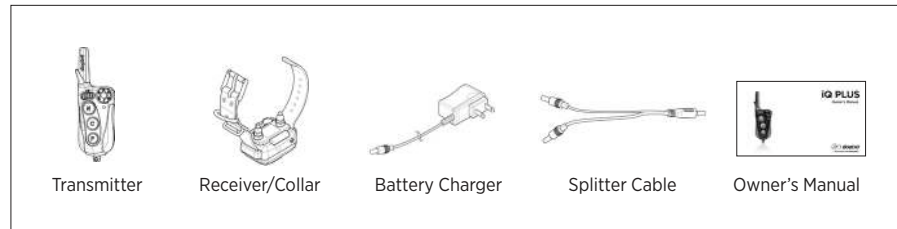

Optional Accessories

Auto Charger: designed for use with a 5-volt car outlet.


European Charger: designed for use with 230V AC electrical outlets in Europe.

To purchase optional accessories, please visit www.dogtra.com or call our customer service at (888) 811-9111.


MAIN FEATURES

- Easy-to-use, ergonomically fitted transmitter
- Front-facing Rheostat Dial that allows for gradual adjustments in stimulation intensity with no jumps between levels (0-100)
- Nick/Constant stimulation & Pager vibration
- 2-hour rapid charge batteries
- Expandable to 2-dogs
- 400-yard range

OVERVIEW

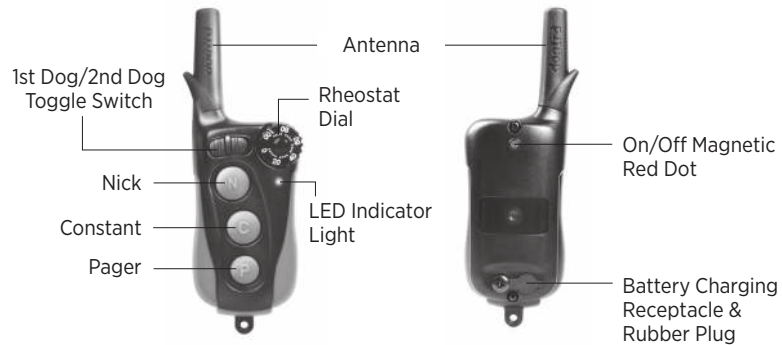


iQ PLUS
Transmitter

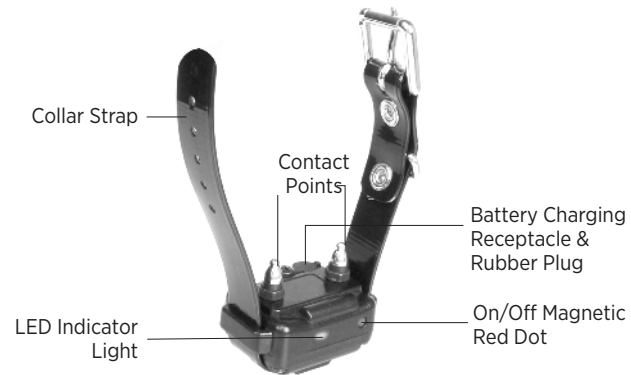

iQ PLUS
Receiver/Collar

UNDERSTANDING YOUR TRAINING SYSTEM

1. Turning the iQ PLUS On/Off

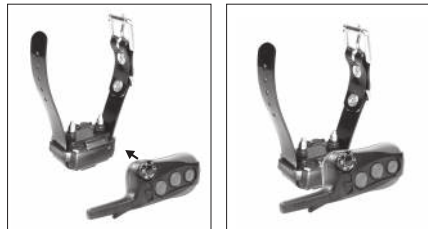

To turn the receiver/collar on, place the red dot on the back of the handheld transmitter to the red dot on the receiver/collar. Hold the two red dots together for a moment until the LED light on the receiver/collar comes on.

To turn the receiver/collar off, repeat the same procedure holding the two red dots together momentarily. The LED light will turn red for a brief moment indicating that the receiver/collar is now off.

The handheld transmitter does not have an on/off button and it will only activate when buttons are pressed.

2. Transmitter Button Function



N - Nick button

When the Nick button is pressed, the receiver emits a single rapid pulse of electrical stimulation.

C - Constant button

Pressing the Constant button gives continuous stimulation as long as the button is pushed, for up to 12 seconds. If the button is not released after 12 seconds, the stimulation will automatically turn off as a safety feature.

P - Pager button

Pressing the Pager button will give a vibration for as long as the button is pressed, for up to 12 seconds.



1st Dog/2nd Dog Toggle Switch

The 1st Dog/2nd Dog Toggle Switch is to the left of the Rheostat Dial.


I - 1st Dog

Slide the switch to the left underneath "I", and press any of the buttons to operate the first receiver/collar.

II - 2nd Dog

Slide the switch to the right underneath "II", and press any of the buttons to operate the second receiver/collar.

3. Collar Fitting

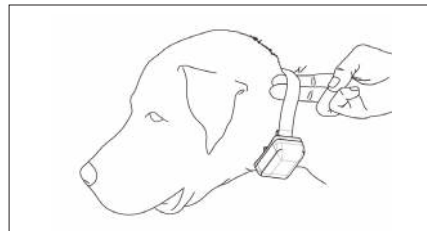

Proper Fit

The collar should be fitted so that the conductive plastic contact points press firmly against the dog's skin. You should be able to fit a finger in between the contact points and your dog's skin. The

best location is on either side of the dog's windpipe.

Improper Fit

A loose fit can allow the collar to move around on the dog's neck. When this happens, the contact points may rub against the skin and cause irritation. If the collar is too loose, the contact will not be consistent and cause the corrections to be inconsistent.

Attention!


Leaving the receiver/collar in the same location on the dog's neck for an extended period of time can cause skin irritation. If the dog is to wear the e-collar for long periods, occasionally reposition the collar so that the contact points are moved to a different location on the dog's neck. Make sure you check for skin irritation each time you use the unit.

4. Finding the Right Stimulation

The iQ PLUS has a Rheostat Dial on the front of the transmitter (0 is the lowest and 100 is the highest). Remember that you will need to adjust the setting (upward or downward) depending on your dog's temperament and threshold for stimulation. Always start at the lowest level and work your way up. The appropriate level can be found when the dog responds to the stimulation with a mild reaction. Also, as the dog's attitude changes, especially during times of increased excitement or distraction, you may need to adjust the intensity level.

Note: The stimulation intensity can be adjusted even when the stimulation is in use.

5. Maximizing the Distance

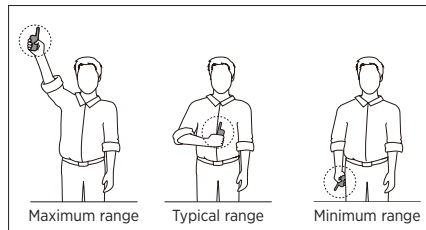

The iQ PLUS has a 400-yard range. Depending on the way you hold your handheld transmitter, the range may vary.

To get the greatest range, hold the transmitter away from your body and avoid touching the antenna. Keep your unit properly charged for maximum signal strength.

6. LED Indicator



The LED indicator flashes every 4 seconds when the receiver is on and ready for use. The LED indicator will blink on both the transmitter and the receiver when the transmitter buttons are pressed.



The LED color indicates battery life level.

Green = Full charge
Amber = Medium charge
Red = Needs charge

If the unit is used while the LED indicator is red, it may shut down automatically.

7. Charging the Battery




1. Charge the unit before using the unit for the first time.
2. Do not charge the batteries near any flammable substances.

3. Fully charge the batteries if the unit is to be stored without use for a period of 3 months or more.

Recharge the Unit If:

- The LED indicator light on the receiver/collar is emitting a red color.
- The indicator light on the transmitter or receiver will not come on.
- The indicator light on the transmitter or receiver comes on momentarily, but will not stay on when the Constant button is pushed.

Battery Charging Procedure

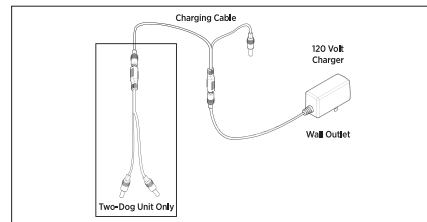

The iQ PLUS uses lithium-polymer batteries. The battery charger and charging cables allow you to charge both the transmitter and receiver at the same time. The battery charger is designed for a 120 volt wall outlet.

Note 1: Only use Dogtra-approved lithium polymer batteries and chargers for your Dogtra e-collar. This will prevent any damage that can be incurred from attempting to use a different charger.

Note 2: The unit has a partial charge when it leaves the Dogtra facility. Upon receipt of the collar, be sure to give it a full 2-hour initial charge before the first use. When a charger is not in use, disconnect it from the power source.

1. Attach the charging cables to both the transmitter and receiver, as shown above.
2. Plug the charger into a 120 volt wall outlet or, if using the auto charger,

plug into a cigarette lighter only for lithium polymer batteries (use a 230 volt European charger for Europe). All indicator lights should glow red when properly plugged in and the unit will automatically shut off during the charging process. You will need to turn the unit on again before use once the unit is fully charged and unplugged from the battery cable.

3. The lithium polymer battery is fully charged within 2 hours. The lights will stay red during the charging process. The red light will turn green once the unit is fully charged.
4. After charging, cover the battery

charging receptacles with the rubber plugs on the transmitter and receiver.

8. Code Setting

Code Setting 1st Dog Position

1. Set the Rheostat Dial on the handheld transmitter to 0 and slide the dog selector toggle switch left to align with "I".
2. Starting with the receiver/collar turned off, place the receiver/collar in code setting mode by holding the red dot on the transmitter to the red dot on the receiver/collar. The LED on the receiver/collar will rapidly blink green

when successfully in code setting mode. Once in code setting mode, separate the receiver/collar and the transmitter.

3. While the green LED is rapidly blinking on the receiver/collar, press the Nick and Constant buttons on the transmitter simultaneously. The LED indicator on light on the receiver/collar will blink every 4 seconds when the coding is complete.

Code Setting 2nd Dog Position

1. Set the Rheostat Dial on the handheld transmitter to 0 and slide the dog selector toggle switch left to align with "II".

2. Starting with the receiver/collar turned off, place the receiver/collar in code setting mode by holding the red dot on the transmitter to the red dot on the receiver/collar. The LED on the receiver/collar will rapidly blink green when successfully in code setting mode. Once in code setting mode, separate the receiver/collar and the transmitter.

3. While the green LED is rapidly blinking on the receiver/collar, press the Nick and Constant buttons on the transmitter simultaneously. The LED indicator on light on the receiver/collar will blink every 4 seconds when the coding is complete.

GENERAL TRAINING TIPS

Your dog must know some basic obedience commands before beginning training with the iQ PLUS. A dog learns by first being shown a command, followed by lots of repetition over an extended period. As the dog becomes proficient at these commands, the trainer can introduce distractions and different locations to strengthen them.

Obedience Training on the Leash

Your dog must fully understand the obedience commands (sit, stay, here, heel, and kennel) before using the e-collar for reinforcement of these commands. A leash attached to a

standard collar is used to "teach" the dog the basic obedience commands (here, heel, sit, and stay). A tug on the leash/collar is used to reinforce the command. When the dog complies with the command, use positive reinforcement/praise. Once the dog understands these commands, the e-collar can be used to reinforce them.

Beginning E-Collar Training

When you feel your dog understands the obedience commands on the leash we can now start with the e-collar training. With the dog on the leash and wearing the e-collar, continue with your obedience drills. Apply light stimulation

(Nick or Constant) when a command is given; the stimulation can be removed as the dog complies. Through repetition, the dog learns to perform the command. The final step is the avoidance phase in which the dog learns that he can avoid the stimulation altogether by performing your commands. When these training procedures are complete, the e-collar is used as a reminder when the dog does not comply with your commands at home or in the field. Keep your initial training sessions short and positive as dogs have a short attention span.

How Much Stimulation to Use

Always start with low levels of stimulation and work your way up depending on the disposition of your dog and the given situation. By using the correct amount of stimulation to get your point across, you will have a more controllable environment and a dog that is under less stress. Animals (and humans) perform better in a less stressful environment.

For more training information, please visit our website at www.dogtra.com.

MAINTENANCE

Basic Maintenance

Be sure the rubber charging cap is securely in place when the collar is in use. After each training session, carefully inspect the unit for any missing parts or damage to the casing. Damaged or broken casing may affect the waterproof guarantee on the unit. After confirming that there is no damage to the casing, rinse the receiver/collar and clean out any dirt or debris.

Storage Maintenance

The iQ PLUS should be fully charged before storing for extended periods. While in storage, the unit should be given a full charge once a month and before the first use. Store the units in room temperature. Do not keep the units exposed to extreme climates.

Troubleshooting

If the unit is malfunctioning, please refer to the “Troubleshooting Guide” before sending it to Dogtra for service. If you have any questions or concerns, you may email them to info@dogtra.com, or call customer service at (888) 811-9111.

TROUBLESHOOTING GUIDE

1. My dog is not reacting to the receiver/collar.

- Make sure the receiver and transmitter are turned on by holding down the on/off button on each device until the LED lights up.
- Be sure the collar strap is tight enough so both contact points are touching the dog's skin.
- The contact points may be too short for your dog's thick or long coat. You might need to trim down the hair on the dog's neck, so both contact points are touching the skin.

- The intensity level may be too low for your dog. Keep increasing the stimulation until the dog responds usually by neck movement, head shaking, looking over his shoulder, etc. (response may be very subtle so pay attention.)

2. The LED indicator light comes on, but I do not feel any stimulation.

- Your tolerance may be higher than your dogs. We recommend placing both contact points on your inner wrist, where the sensitivity is higher, in order to test the unit.
- The battery may be low, check the LED light for battery life.

3. The handheld transmitter has no range or stimulation is less when the dog is farther away.

- Check to see if your fingers are touching the antenna as the range may substantially decrease.
- The range indicated on the unit's box is for flat terrain. Heavy brush, trees, hills, or moisture will affect the range of your unit. For best range, hold the transmitter vertically above your head, and/or try moving to higher ground.
- Any electrical conductors will affect the range, such as cars, chain-link dog runs, metal structures, and radio towers. For best results, operate away from these items.

4. My units are not holding a charge.

- The batteries might not be charged properly, or the charger, splitter, and the charging port may not be functioning properly. You can send in your charging units to have us inspect them.
- The charging pin may be damaged. Inside the charging port, there is a metal pin that should be standing straight up and stiff. If the pin is wobbling, broken, or missing, you will need to send the unit in to the Repair Department. The charging port must be clean prior to charging; clean the dirt out with a cotton swab and some rubbing alcohol. If the dog is in salt

water, be sure to rinse the receiver and charging port with clean water.

- If the above does not resolve your issues, contact Dogtra customer service at info@dogtra.com or (888) 811-9111.

5. My dog has skin irritation.

- This may be due to an improper fit or from wearing the unit too long. If your dog exhibits signs of skin irritation, consult with a veterinarian. Once the dog's skin returns to a normal condition, continue to use the receiver/collar and check your dog's neck each time you use the unit.

DOGTRA PRODUCT WARRANTY

LIMITED WARRANTY

For Dogtra Products Purchased from Dogtra Authorized Dealers

One-Year Warranty

Except as otherwise provided below, Dogtra warrants to the original retail purchaser (“You”) that its Dogtra products shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase (“Warranty”). The Warranty covers the cost of repair (parts and labor) or replacement (if repair is not feasible) of a defective Dogtra product during said one-year period. For such repaired or replaced products, the remaining portion of the original warranty period, or ninety (90) days, whichever is longer, shall apply. Dogtra, at its sole discretion, shall determine whether to repair or replace a product covered by the Warranty.

Warranty Conditions

The Warranty is not transferrable and applies to your Dogtra product only if:

- (1) You are the original retail purchaser of the product,
- (2) You bought the product from a Dogtra authorized dealer, and
- (3) You present a receipt or other proof of purchase showing a valid purchase date, the name and address of the authorized dealer, and the purchased product identified by model and/or serial number.

Warranty Exclusions

The Warranty does not cover damage, loss, or deterioration to your Dogtra product caused: by misuse, neglect, abuse, or other improper handling of the product; by failure to follow use or care instructions; by use of the product for other than its intended purpose; by accident or natural forces such as fire or flooding; or by normal wear and tear such as scratches to the product surface.

The Warranty also does not cover Dogtra products that: are purchased from non-authorized dealers; are purchased outside of the United States or Canada; have been damaged during shipment (even if Dogtra paid or arranged for shipping); have been modified or tampered with in any manner; are opened or repaired by anyone other than Dogtra;

or have serial numbers that have been altered or defaced.

Sole Warranty

This Warranty is the only warranty offered by Dogtra for its Dogtra products. Other than said Warranty, Dogtra makes no other representations or warranties whatsoever regarding its products, whether oral or in any product manual, on any packaging, on any website, or in any other written material. No dealer of Dogtra products, nor any employee or agent of Dogtra, is authorized to make any additions, changes, or extensions to the Warranty. Dogtra, at its sole discretion and at any time, reserves the right to modify the Warranty.

DISCLAIMER OF OTHER WARRANTIES

THE FOREGOING WARRANTY IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, WHETHER EXPRESS OR IMPLIED. DOGTRA DISCLAIMS ANY IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Limitation of Remedies

Dogtra’s liability is limited to the cost of repair or replacement of the Dogtra product under Warranty. Any claim or action to enforce the Warranty must be commenced within thirty (30) days of the Warranty’s expiration for your product. Dogtra will not be liable for any indirect, incidental, special, consequential, or similar damages based on breach of warranty, breach of contract, negligence, strict tort, or any other legal theory related to Dogtra and its products. Damages that Dogtra will not be responsible for include, but are not limited to: loss of income or profits; loss of revenue or savings; loss of use of the product or associated products; cost of any substitute products or services; inconvenience, downtime, or any other time; loss of goodwill; claims of third parties including customers; and damage to property.

Legal Rights May Vary By State or Jurisdiction

The Warranty gives You specific legal rights, and You may also have other rights which vary by state or jurisdiction. Some states or jurisdictions do not allow certain limitations of implied warranties or of incidental or consequential damages or other remedies, so certain of the foregoing limitations may not apply to You.

If any portion of the Warranty is held by a court to be invalid or unenforceable, the remaining portions of the Warranty shall remain in full force and effect and shall in no way be affected or invalidated, and the invalid or unenforceable portion shall be modified so as to most nearly achieve the intent of the Warranty.

Product Registration

Dogtra recommends that customers register their products as soon as possible after purchase. Product registration will facilitate any future warranty service. You may also receive useful information and updates about your existing and future Dogtra products. To register your product, visit www.dogtra.com/product-registration. If your product is not registered with Dogtra, You will be required to provide a receipt or other proof purchase (as provided above) to qualify for warranty service.

How to Obtain Warranty Service

Should your Dogtra product require warranty service, please contact Customer Service by phone or email for a warranty evaluation (see below for contact information). Upon approval of your warranty work, Dogtra will repair or replace (at

Dogtra's election) your product without charge for labor or parts. You are responsible for shipping, including cost, of your product to Dogtra for warranty service. Dogtra will handle shipping, including cost, of the repaired or replaced product back to customers in the USA. Dogtra will not be responsible for shipping, including cost and/or applicable taxes or fees, for products sent to Canada. Such costs, taxes, or fees will be borne by the customer.

To register your product, visit www.dogtra.com/product-registration.

Dogtra Customer Service

22912 Lockness Avenue, Torrance, CA 90501
(888) 811-9111
repair@dogtra.com
Mon - Fri, 8:00 AM to 4:30 PM (PST)

© 2019 Dogtra. All rights reserved.